

Drivers Installation Guide

Driver Pack	RPL-S-MR4_RPL-SR-MR2_Win1124H2_BKC831691
Model	NViS57244/NViS57164
Installation Sequence	1. Chipset 2. Serial IO 3. CSME 4. Graphics 5. GNA 6. HID Event Filter 7. LAN

1. Chipset

1.1 Enter 1.Chipset-10.1.19913.8607-Public-Client folder

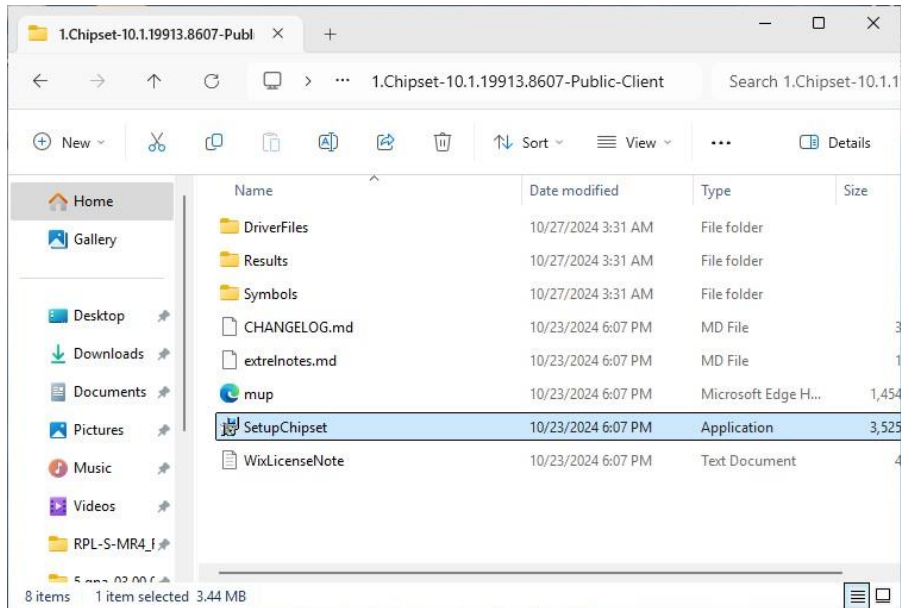


1.2 Execute SetupChipset.exe




1.3 Restart Windows to apply driver changes

2. Serial IO

2.1 Enter 2.Intel SerialIO Drivers 30.100.2417.30-ADL folder

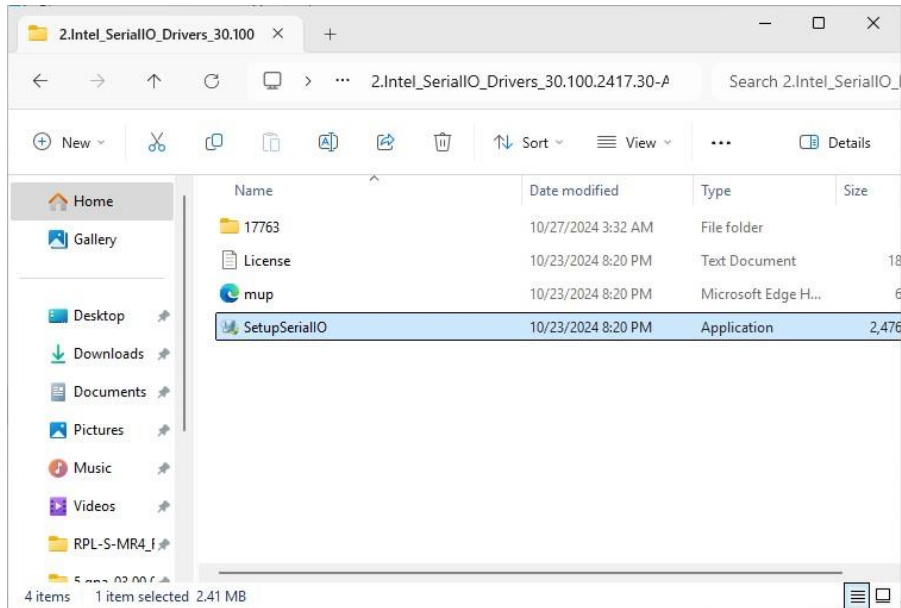


2.2 Execute SetupSerialIO.exe

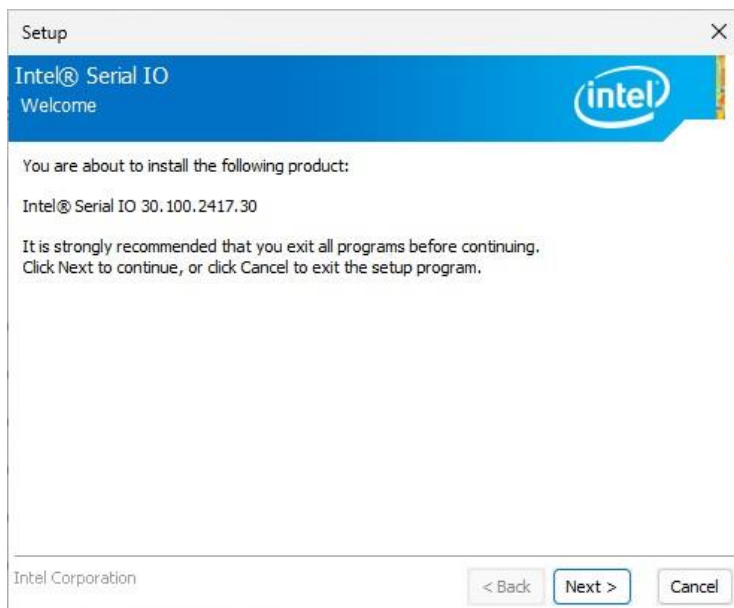


2.3 Restart Windows to apply driver changes

3. CSME

3.1 Enter 3.Intel CSME SW 2439.6.42.0 Corporate > Installers > Main DCH folder

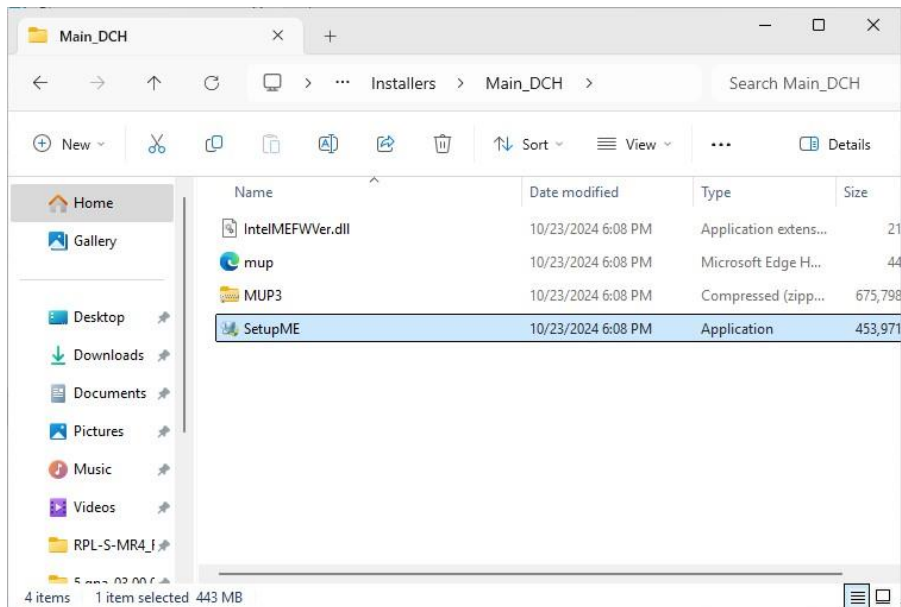


3.2 Execute SetupME.exe

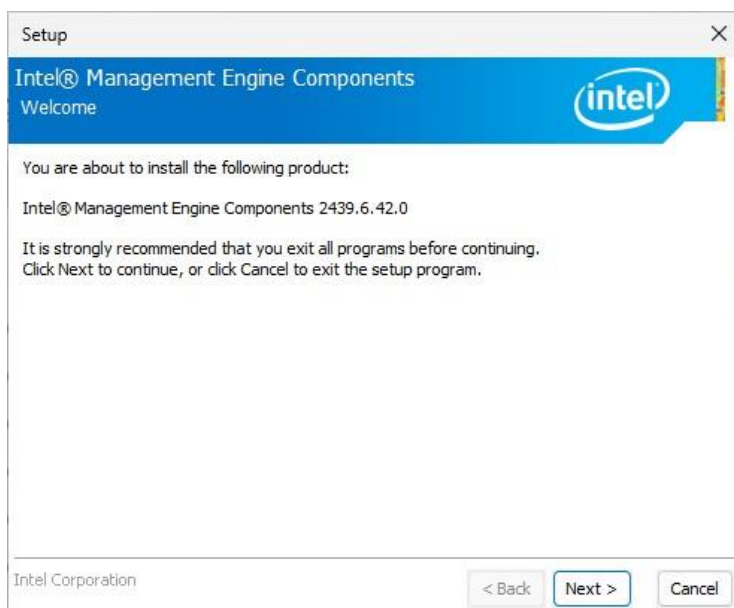

3.3 Restart Windows to apply driver changes

4. Graphic

4.1 Enter 4.Intel_Graphics_Driver_101.5542 folder

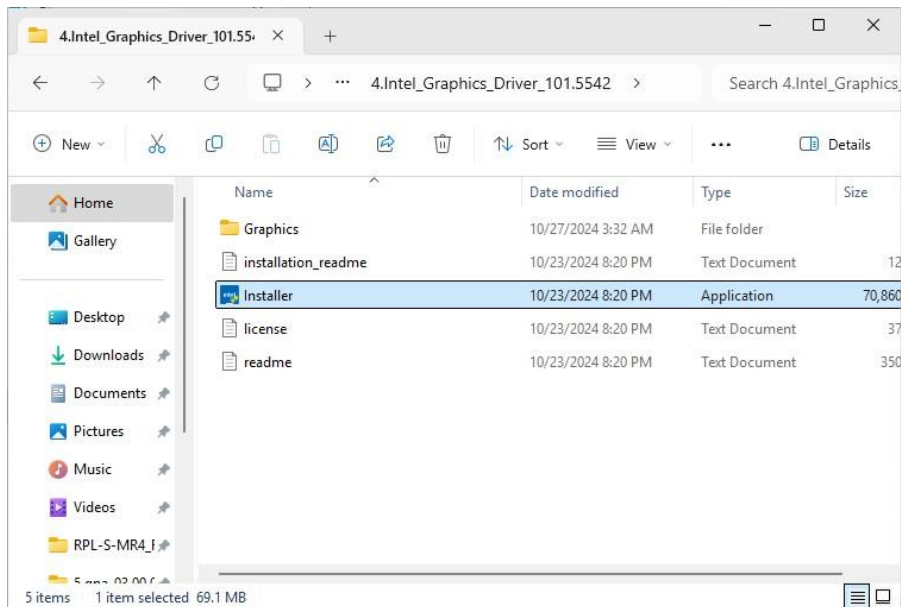


4.2 Execute Installer.exe




4.3 Restart Windows to apply driver changes

5. GNA

5.1 Enter 5.gna-03.00.00.1457-win-3_0 sv2 resign-20220819 folder

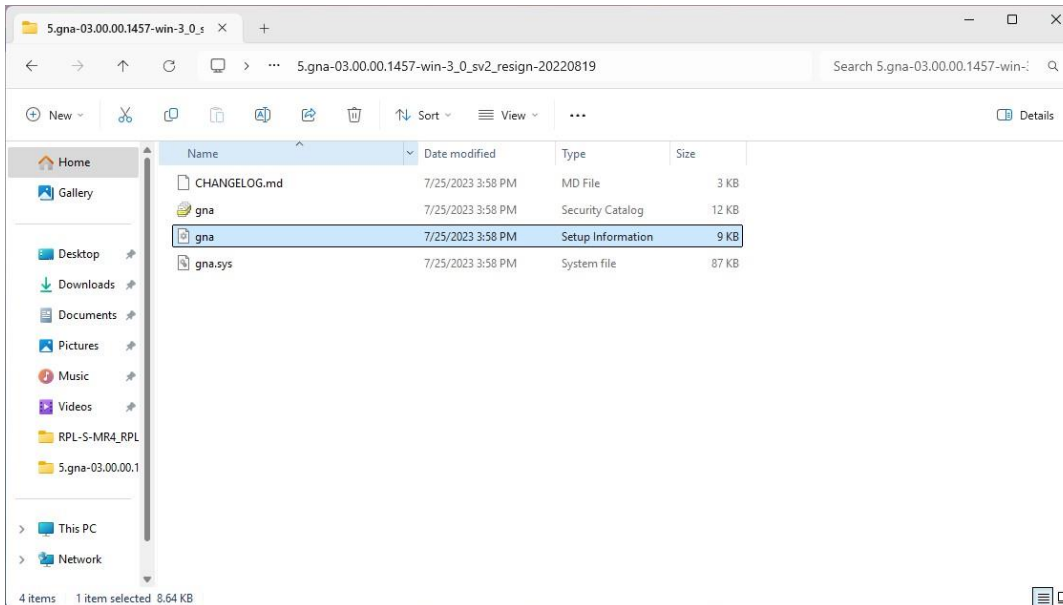


5.2 Right-Click on gna.inf and Install

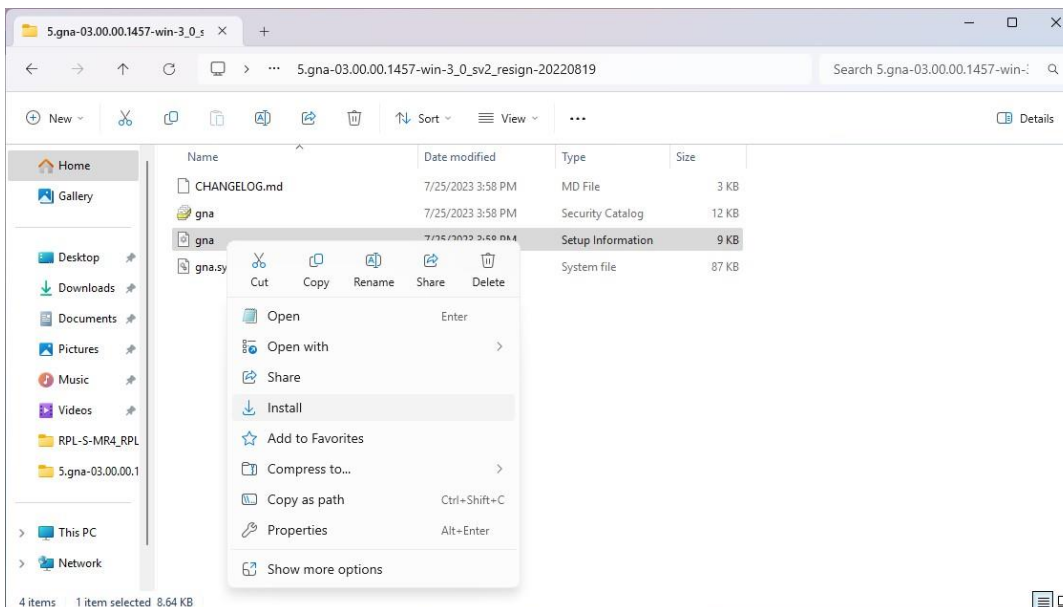


5.3 Restart Windows to apply driver changes

6. HID Event Filter

6.1 Enter 6.HIDEventFilterDriver-2.2.2.10 20H2 21H2 22H2 23H2 24H2 Certified > drivers > x64 folder

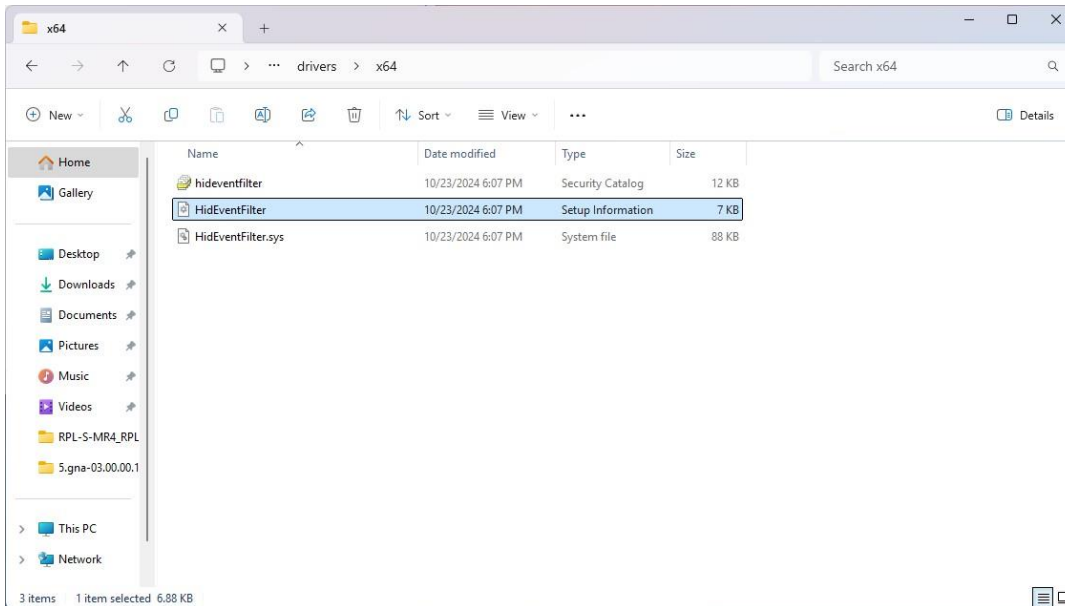


6.2 Right-Click on HidEventFilter.inf and Install

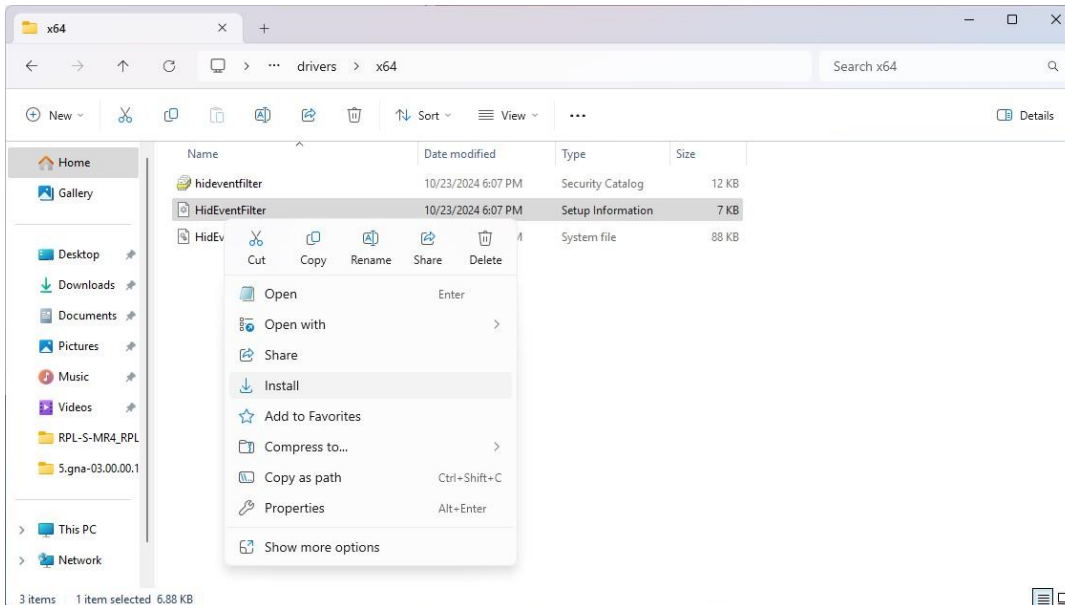


6.3 Restart Windows to apply driver changes

7. LAN

7.1 Enter 7.Intel-I226-NetAdapterCx-Win11-v2.1.4.3 folder

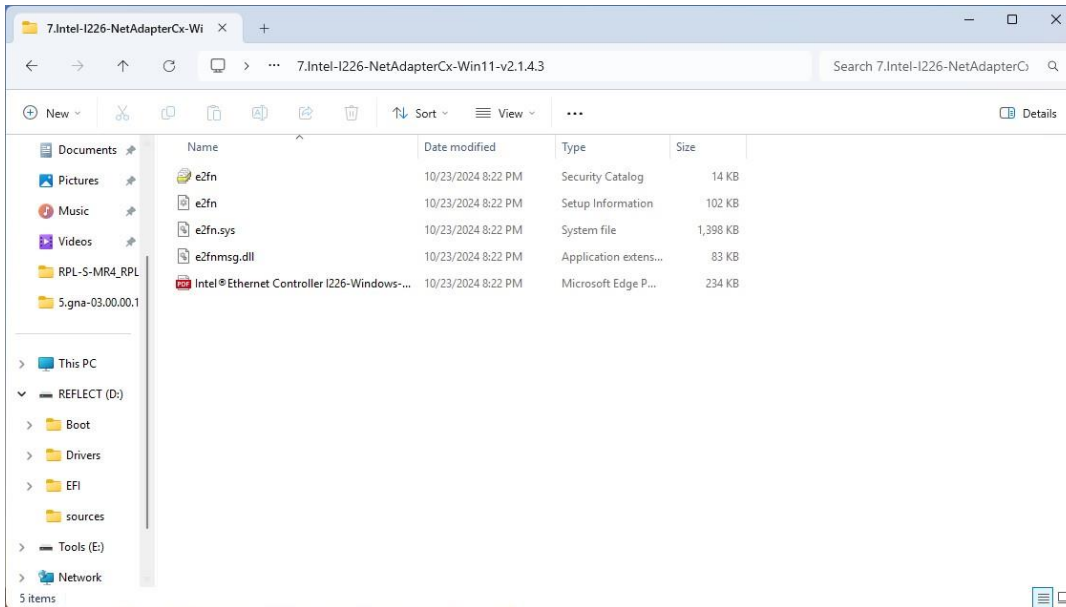

7.2 Right-Click on e2fn.inf and Install

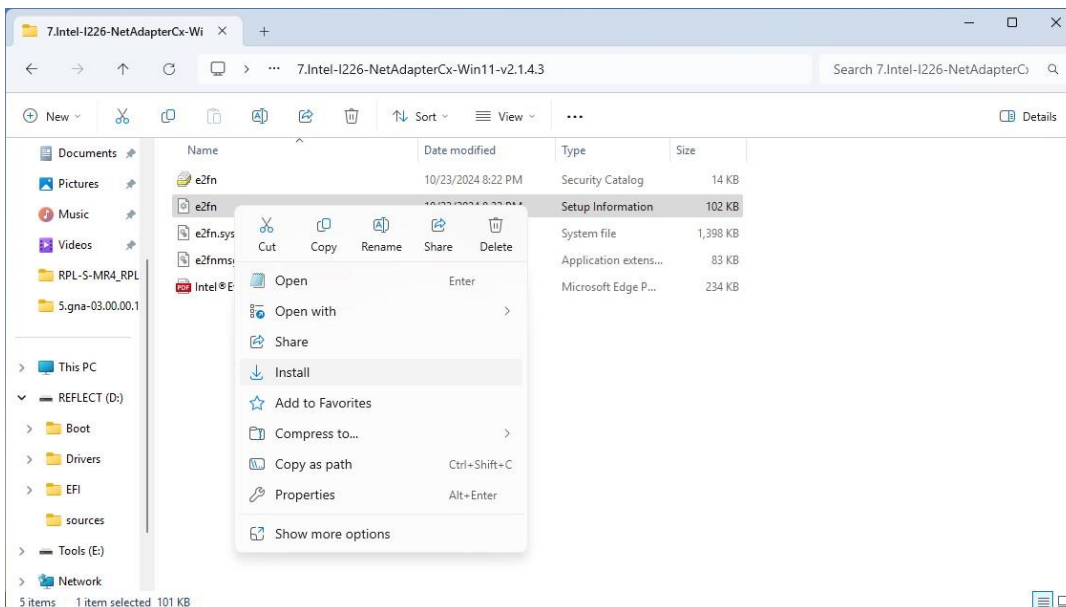

7.3 Restart Windows to apply driver changes