

NexAloT Co., Ltd.

# IoT Automation Solutions Business Group Smart Functional PC TT 300 A-Series User Manual

NexAloT Co., Ltd. Published May 2023

www.nexaiot.com



# CONTENTS

### Preface

Copyright	iv
Disclaimer	iv
Acknowledgements	iv
Regulatory Compliance Statements	iv
Declaration of Conformity	iv
RoHS Compliance	v
Warranty and RMA	v
Installation Recommendations	vi
Safety Information	vii
Safety Precautions	ix
Technical Support and Assistance	x
Conventions Used in this Manual	x
Global Service Contact Information	x
Package Contents	xii
Ordering Information	xiv

#### **Chapter 1: Product Introduction**

Overview:	1
Hardware Specifications:	2
Knowing Your TT 300 Series	4
TT300-A2Q Front Panel	4
TT300-A2Q Rear Panel	5
TT300-A3Q Front Panel	6
TT300-A3Q Rear Panel	7
Mechanical Dimensions	8
TT300-A2Q Rear Panel TT300-A3Q Front Panel TT300-A3Q Rear Panel Mechanical Dimensions	5 6 7 8

#### **Chapter 2: Jumpers and Connectors**

Before You Begin	9
Precautions	9
Jumper Settings	10
Locations of the Jumpers and Connectors for TT 300-A Series	11
Top View	11
Bottom View	12
Jumpers	13
Clear CMOS	13
AT/ATX Mode Select Pin Header	13
External Connector Pin Definitions	14
HDMI Connectors	14
DC-IN Connector	15
LED Indicators	15
DisplayPort Connectors	16
USB3.2 Gen2 + RJ45 Connector	17
USB3.2 Gen1 + RJ45 Connector	18
Internal Connector Pin Definitions	19
RTC Battey Connector	19
System Reset Pin Header	19
M.2 Key M (PCIe/SATA) Connector	20
M.2 Key B (PCIe/SATA_USB3.0_USB2.0) Connector	21
MINI PCIe Connector	22
4x1 COM Port Connector	23
COM5 Connector (Optional)	24
COM6 Connector (Optional)	24

NEXLIDT



Debug Connector	25
Power Button Connector	25
BIOS FW Connector	26
SIM Card Slot	26
PCIe x8 Slot	27
PCIe x16 Slot	29
Locations of Connectors for TT 300-A Series Riser Card	31
Top View	
Internal Connector Pin Definitions of Riser Card	
Fan Connector	
GPIO Connector	
SATA Connectors	
COM Port Connectors	
PCIe x16 Slot	35
PCIe x4 Slot	
PCIe x4 Slot	
Block Diagram	

### Chapter 3: System Setup

Removing the Chassis Cover	40
Installing CPU	44
Installing a SO-DIMM Memory Module	49
Installing a Mini-PCIe 4G LTE/mSATA Module (Full-size)	51
Installing a WLAN/Bluetooth Mini-PCIe Module (Half-size)	53
Installing an Antenna	54
Installing a SIM Card	57
Installing an M.2 Card for Storage and 4G LTE (2242/3042)	59
Installing an M.2 Card for 5G (3052)	60
Installing an M.2 Card for Storage (2280)	61
Installing a PCIe Expansion Card	62
Installing an SATA Storage Drive	63
Wallmount Brackets	66

### Chapter 4: BIOS Setup

68
68
69
69
69
71
71
72
81
85
86

# Appendix A: GPI/O Programming guide

### Appendix B: WatchDog Programming Guide

	_	-	-	
ITE8786 WatchDog Pr	ogramming Gu	ide	<u> </u>	<del>)</del> 0

### Appendix C: Windows Troubleshooting



# PREFACE

# Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NexAloT Co., Ltd.

# Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NexAloT Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: http://www.nexaiot.com. NexAloT shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

# Acknowledgements

TT 300-A Series are the trademark of NexAloT Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

# **Regulatory Compliance Statements**

This section provides the FCC compliance statement for Class A devices and describes how to keep the system CE compliant.

# **Declaration of Conformity**

#### FCC

This equipment has been tested and verified to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

#### CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.



# **RoHS Compliance**



#### NexAloT RoHS Environmental Policy and Status Update

NexAloT is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with

European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2011/65/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NexAloT has established an engineering and manufacturing task force to implement the introduction of green products. The task force will ensure that we follow the standard NexAloT development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NexAloT are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

#### How to recognize NexAloT RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2013 will be RoHS compliant. They will use the usual NexAloT naming convention.



# Warranty and RMA

#### **NexAloT Warranty Period**

NexAloT manufactures products that are new or equivalent to new in accordance with industry standard. NexAloT warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NexAloT.

#### **NexAloT Return Merchandise Authorization (RMA)**

- Customers shall enclose the "NexAloT RMA Service Form" with the returned packages.
- Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the "NexAloT RMA Service Form" for the RMA number apply process.
- Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NexAloT is not responsible for the devices/parts.
- Customers are responsible for the safe packaging of defective products, making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as "Out of Warranty."
- Any products returned by NexAloT to other locations besides the customers' site will bear an extra charge and will be billed to the customer.

#### **Repair Service Charges for Out-of-Warranty Products**

NexAloT will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

#### System Level

- Component fee: NexAloT will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- Items will be replaced with NexAloT products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- Replace with 3rd party products if needed.
- If RMA goods can not be repaired, NexAloT will return it to the customer without any charge.

#### **Board Level**

- Component fee: NexAloT will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- If RMA goods can not be repaired, NexAloT will return it to the customer without any charge.



#### Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

#### Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

# Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.



# **Safety Information**

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.
- This product is intended to be supplied by an approved power adapter, rated 12Vdc, 5A or 24Vdc, 2.5A minimum and Tma 55 degree Celsius. If further assistance is needed, please contact NexAloT for further information.



Danger of explosion if battery is incorrectly replaced. Replace with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

#### ATTENTION



IL Y A RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UNE BATTERIE DE TYPE INCORRECT. METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS.



# **Safety Precautions**

- 1. Read these safety instructions carefully.
- 2. Keep this User Manual for later reference.
- 3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- 4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
- 5. Keep this equipment away from humidity.
- 6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
- 7. The openings on the enclosure are for air convection to protect the equipment from overheating. DO NOT COVER THE OPENINGS.
- 8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- 9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
- 10. All cautions and warnings on the equipment should be noted.
- 11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.

- 12. Never pour any liquid into an opening. This may cause fire or electrical shock.
- 13. This equipment is not suitable for use in locations where children are likely to be present.
- 14. Ensure to connect the power cord to a socket-outlet with earthing connection.
- 15. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
- 16. If one of the following situations arises, get the equipment checked by service personnel:
  - a. The power cord or plug is damaged.
  - b. Liquid has penetrated into the equipment.
  - c. The equipment has been exposed to moisture.
  - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
  - e. The equipment has been dropped and damaged.
  - f. The equipment has obvious signs of breakage.
- 17. Do not place heavy objects on the equipment.
- 18. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
- 19. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

NEXIDT



# **Technical Support and Assistance**

- 1. For the most updated information of NexAloT products, visit NexAloT's website at www.nexaiot.com.
- 2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
  - Product name and serial number
  - Detailed information of the peripheral devices
  - Detailed information of the installed software (operating system, version, application software, etc.)
  - A complete description of the problem
  - The exact wordings of the error messages

#### Warning!

- 1. Handling the unit: carry the unit with both hands and handle it with care.
- 2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.

# **Conventions Used in this Manual**



#### Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



#### Caution:

Information to avoid damaging components or losing data.

Note:

Provides additional information to complete a task easily.



# **Global Service Contact Information**

#### Headquarters NEXCOM International Co., Ltd.

9F, No. 920, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7782 www.nexcom.com

### Asia

#### Taiwan NexAloT Headquarters Industry 4.0 and Cloud Services

13F, No.922, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7796 Fax: +886-2-8226-7926 Email: jacobhuang@nexaiot.com www.nexaiot.com

#### NexAloT Co., Ltd. Taichung Office

NEXIOT

16F, No.250, Sec.2, Chongde Rd., Beitun District, Taichung City, 406, Taiwan, R.O.C. Tel: +886-4-2249-1179 Fax: +886-4-2249-1172 Email: jacobhuang@nexaiot.com www.nexaiot.com

#### NexCOBOT Taiwan Co., Ltd.

13F, No.916, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7926 Email: jennyshern@nexcobot.com www.nexcobot.com

#### GreenBase Technology Corp.

13F, No.922, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7900 Email: vivianlin@nexcom.com.tw www.nexcom.com.tw

#### DivioTec Inc.

19F-1A, No.97, Sec.4, ChongXin Rd., Sanchong District, New Taipei City, 24161, Taiwan, R.O.C. Tel: +886-2-8976-3077 Email: sales@diviotec.com www.diviotec.com

#### AloT Cloud Corp.

13F, No.922, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7782 Email: alantsai@aiotcloud.net www.aiotcloud.dev

#### EMBUX TECHNOLOGY CO., LTD.

13F, No.916, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7782 Email: info@embux.com www.embux.com

#### TMR TECHNOLOGIES CO., LTD.

13F, No.916, Zhongzheng Rd., Zhonghe District, New Taipei City, 23586, Taiwan, R.O.C. Tel: +886-2-8226-7786 Fax: +886-2-8226-7782 Email: services@tmrtek.com www.tmrtek.com



#### China NEXSEC Incorporated

201, Floor 2, Unit 2, Building 15, Yard 3, Gaolizhang Road, Haidian District, Beijing, 100094, China Tel: +86-10-5704-2680 Fax: +86-10-5704-2681 Email: marketing@nexsec.cn www.nexsec.cn

#### **NEXCOM Shanghai**

Room 406-407, Building C, No 154, Lane 953, Jianchuan Road, Minhang District, Shanghai, 201108, China Tel: +86-21-5278-5868 Fax: +86-21-3251-6358 Email: sales@nexcom.cn www.nexcom.cn

#### NEXCOM Surveillance Technology Corp.

Floor 8, Building B3, Xiufeng Industrial Zone, GanKeng Community, Buji Street, LongGang District, ShenZhen, 518112, China Tel: +86-755-8364-7768 Fax: +86-755-8364-7738 Email: steveyang@nexcom.com.tw www.nexcom.cn

### **NEXGOL Chongqing**

1st Building No.999, Star Boulevard, Yongchuan Dist, Chongqing City, 402160, China Tel: +86-23-4960-9080 Fax: +86-23-4966-5855 Email: sales@nexgol.com.cn www.nexcom.cn

#### Beijing NexGemo Technology Co.,Ltd.

Room 205, No.1, Fazhan Rd., Beijing International Information Industry Base, Changping District, Beijing, 102206, China Tel: +86-10-8072-2025 Fax: +86-10-8072-2022 Email: sales@nexgemo.cn www.nexgemo.com

#### Japan NEXCOM Japan

9F, Tamachi Hara Bldg., 4-11-5, Shiba Minato-ku, Tokyo, 108-0014, Japan Tel: +81-3-5419-7830 Fax: +81-3-5419-7832 Email: sales@nexcom-jp.com www.nexcom-jp.com

#### America USA NEXCOM USA

46665 Fremont Blvd., Fremont CA 94538, USA Tel: +1-510-656-2248 Fax: +1-510-656-2158 Email: sales@nexcom.com www.nexcomusa.com



# **Package Contents**

Before continuing, verify that the package that you received is complete. Your TT 300-A Series package should have all the items listed in the following table.

ltem	Part Number	Description	Specification
1	6014606898X00	LABEL BLANK WAI GHA	60x60mm ART PAPER CLW5
2	Z300000040X00	OUTSIDE BOX LABEL FOR STANDARD VER.A	60x60mm ART PAPER CLW5
3	60111A0887X00	OUTSIDE CARTON FOR TT300-F31 VER:A BOTH SQUERITY	350x280x300mm AB FLUTE 16KG
4	6013301557X00	EPE FOR TT300-F31 VER:A BOTH SQUERITY	280x300x112mm EPE FOAM
5	6012200198X00	PE BAG FOR APPC1940T SERIES VER: A MP	457x610mm T=0.08mm
6	6012200052X00	PE ZIPPER BAG #8 炎洲:印刷由任袋8號	170x240mm,W/China RoHS SYMBOL
7	6012200053X00	PE ZIPPER BAG #3 炎洲:印刷由任袋3號	100x70mm,W/China RoHS SYMBOL
8	4NCPM00302X00	(T)TERMINAL BLOCKS 3P PHOENIX CONTACT: 1777992	5.08mm MALE DIP GREEN
9	50311F0098X00	(H)ROUND HEAD SCREW LONG FEI	P3x5mm TWIN WASHER 8mm NYLOK NI
10	5061711760X00	MINI PCI-E BRACKET FOR NISE106 SERIES VER:A ASDA	30x29x2.1mm SPCC T=1.0mm
11	50311F0295X00	FLAT HEAD SCREW LONG FEI:F2x4 NYLOK NIGP	F2x4 NIGP NYLOK
12	50311F0330X00	ROUND HEAD SCREW LONG FEI:P2x3 ISO+NYLON	P2x3 NI NYLOK
13	5061600245X00	WASHER KANGYANG:TW-320-01	10.4x6.4mm T=1mm NYLON BLACK
1/1	5034400370200		WITH FEMALE/MALE
14	3034400379800	COFFER FOST FOR INISESS SERIES VER.A LONG FEI	(FEMALE)6mmx(MALE)5mmxM3
15	50311F0215X00	(H)I HEAD SCREW LONG FEI:I3x5ISO+NYLOK NIGP	I3x5 NI NYLOK
16	50311F0575X00	P HEAD SCREW W/WASHER LONG FEI	P3x10 ISO / OUTER TEETH NI
17	50311P0020X00	F HEAD SCREW KANG YANG:M3-6F(B)	M3x6mm PLASTICS
18	50311F0213X00	FLAT HEAD SCREW LONG FEI:F3x4ISO+NYLOK NIGP	F3x4 NI NYLOK



# **Ordering Information**

The following information below provides ordering information for TT 300-A Series.

- TT 300-A2Q barebone (P/N: 10JT0030017X0)
- TT 300-A3Q barebone (P/N: 10JT0030018X0)
- 24V, 120W AC to DC power adapter w/o power cord (P/N: 7400120029X00)
- 24V, 180W AC to DC power adapter w/o power cord (P/N: 7400180012X00)



# CHAPTER 1: PRODUCT INTRODUCTION

## **Overview:**

TT 300-A2Q



# TT 300-A3Q



#### **Key Features**

- Support 12/13th Gen Intel® Core™ i7/i5/i3 socket type processor
- Intel<sup>®</sup> Q670E PCH
- 2 x HDMI & 2 x DP
- 4 x USB 3.0, 2 x RS232/422/485, 6 x RS232 (4 x RS232 if-A3Q)
- 1 x M.2 2280 Key M (PCIe x4, SATA)
- 1 x M.2 Key B 2242/3042/3052 (PCle x1, USB 3.0, SATA)
- 1 x mini-PCle (PCle x1, USB 2.0, SATA)
- 1 x PCIe x16 (TT300-A3Q only)
- 2 x PCle x4
- 1 x SIM card socket
- Support 24VDC input; support ATX power mode



# Hardware Specifications:

#### **CPU Support**

- Support 12/13th Gen Intel<sup>®</sup> Core™ i7/i5/i3 socket type processor

#### **Main Memory**

• 1 x DDR5 4800MHz SO-DIMM socket, supports up to 32GB

#### **Display Option**

- Quad independent display
  - 2 x HDMI
  - 2 x DP

#### Front I/O Interface Status LEDs

- 2 x GPO status
- COM TX/RX LEDS

#### Front I/O Interface

- ATX power on/off switch
- 4 x USB 3.0 ports (2 x USB 3.2 Gen2, 2 x USB 3.2 Gen1)
- 2 x HDMI
- 2 x GbE LAN port with Intel® I225- V
- 4 x DB9 for COM1 to COM4
  - COM1/2: RS232/422/485 auto flow control
  - COM3/4: RS232
  - COM5/6/7/8: RS232 (TT 300-if A2Q)

#### **Rear I/O Interface**

• 6 x Antenna holes

#### Storage Device

- 2 x 2.5" SSD slots
- 1 x M.2 Key M 2280 (PCIe x4, SATA)
- 1 x M.2 Key B 2242/3042/3052 (PCIe x1, USB 3.0, SATA)
- 1 x mini-PCIe socket (PCIe x1, USB 2.0, SATA)

#### **Expansion Slot**

- 1 x PCIe x16 (TT 300-A3Q only)
- Add-on card length: 225mm max (w/ system fan)
- Power consumption: 75W/slot max
- 2 x PCIe x4
- Add-on card length: 169mm max
- Power consumption: 25W/slot max
- 1 x mini-PCIe socket support optional mSATA/Wi-Fi/4G LTE
- 1 x Nano SIM card slot

#### **Power Requirements**

- AT/ATX power mode (default: ATX power mode)
- Power input: +24V DC in
- Power adapter: optional AC to DC power adapter (24V DC, 120W /180W)

# **NEXIOT**

#### Dimensions

• 200.2 (W) x 270 (D) x 141.8 (H) mm

#### Construction

• Aluminum and metal chassis with design

#### Environment

- Operating temperature: Ambient with air flow: -5°C to 50° (according to IEC60068-2-1, IEC60068-2-2, IEC60068-2-14)
- Storage temperature: -20°C to 80°C
- Relative humidity: 10% to 95% (non-condensing)
- Shock protection:
  - SSD: 20G, half sine, 11ms, IEC60068-2-27
  - M.2: 50G, half sine, 11ms, IEC60068-2-27
- Vibration protection with SSD & M.2 condition:
  - Random: 0.5Grms@5~500 Hz, IEC60068-2-64
  - Sinusoidal: 0.5Grms@5~500 Hz, IEC60068-2-6
- Vibration protection with SSD & M.2 condition:
  - Random: 2Grms@5~500 Hz, IEC60068-2-64
  - Sinusoidal: 2Grms@5~500 Hz, IEC60068-2-6

#### Certifications

- CE approval- EN61000-6-2- EN61000-6-4
- FCC Class A

#### OS Support

• Windows 10, 64-bit

#### Weight Information

- Gross weight: 5.3kg
- Net weight: 4.4kg



# Knowing Your TT 300 Series

TT300-A2Q Front Panel



#### 1. Power Switch

Press to turn the power on or off. Lights up in blue when the power is on.

#### 2. 3-Pin DC-In (24VDC)

Plug a DC power cord.

#### 3. DiplayPort 1.4a

Connect a monitor with a DisplayPort interface, supporting resolution up to 4k@60Hz.

#### 4. HDMI 2.1

Connect a monitor with an HDMI interface, supporting resolution up to 4k@30Hz.

#### 5. LAN1 Port

Connect the system to a local area network at speeds of up to 1GbE.

#### 6. USB 3.2 Gen 1

Connect a USB device with data transfer speeds of up to 10Gbps.

#### 7. LAN2 Port

Connect the system to a local area network at speeds of up to 1GbE.

#### 8. USB 3.2 Gen 2

Connect a USB device with data transfer speeds of up to 5Gbps.

#### 9. LED Indicator

- 9.1: GPIO1 (lights up in green when activated)
- 9.2: GPIO2 (lights up in green when activated)
- 9.3: COM Tx (only for COM Port on the motherboard)
- 9.4: COM Rx (only for COM Port on the motherboard)

Continued on the next page

-

# **NEXIOT**

# TT300-A2Q Rear Panel



- **10. COM Port (1~8)** Connect to a serial device.
- **11. Antenna Hole** Used to install an external antenna.



#### TT300-A3Q Front Panel



#### 1. Power Switch

Press to turn the power on or off. Lights up in blue when the power is on.

#### 2. 3-Pin DC-In (24VDC)

Plug a DC power cord.

#### 3. DiplayPort 1.4a

Connect a monitor with a DisplayPort interface, supporting resolution up to 4k@60Hz.

#### 4. HDMI 2.1

Connect a monitor with an HDMI interface, supporting resolution up to 4k@30Hz.

#### 5. LAN1 Port

Connect the system to a local area network at speeds of up to 1GbE.

#### 6. USB 3.2 Gen 1

Connect a USB device with data transfer speeds of up to 10Gbps.

#### 7. LAN2 Port

Connect the system to a local area network at speeds of up to 1GbE.

#### 8. USB 3.2 Gen 2

Connect a USB device with data transfer speeds of up to 5Gbps.

#### 9. LED Indicator

- 9.1: GPIO1 (lights up in green when activated)
- 9.2: GPIO2 (lights up in green when activated)
- 9.3: COM Tx (only for COM Port on the motherboard)
- 9.4: COM Rx (only for COM Port on the motherboard)

Continued on the next page

-

# **NEXIOT**

# TT300-A3Q Rear Panel



- **10. COM Port (1~4)** Connect to a serial device.
- **11. Antenna Hole** Used to install an external antenna.



# **Mechanical Dimensions**







# **CHAPTER 2: JUMPERS AND CONNECTORS**

This chapter describes how to set the jumpers and connectors on the TT 300-A Series motherboard.

# **Before You Begin**

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
  - A Philips screwdriver
  - A flat-tipped screwdriver
  - A set of jewelers screwdrivers
  - A grounding strap
  - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic components. Humid environments tend to have less static electricity than

dry environments. A grounding strap is warranted whenever danger of static electricity exists.

# Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:

- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.



# **Jumper Settings**

A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is short. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is open.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)



Three-Pin Jumpers: Pins 1 and 2 are Short





# Locations of the Jumpers and Connectors for TT 300-A Series

**Top View** 





**Bottom View** 





# Jumpers

-

# **Clear CMOS**

Connector location and type: SW1 / 25mA PIT: 1.27mm SMD

	1 3
--	--------

### AT/ATX Mode Select Pin Header

Connector location and type: JP2 / 2.0mm MALE 180D DIP

Pin	Definition
1	RTCRST_N
2	SRTCRST_N
3	GND
4	GND

Pin	Settings
1-2 Off	Normal (Default)
1-2 On	Clear CMOS

Pin	Definition
1	AT_PWRBT#
2	S_PWRBTN#
3	ATX_PWRBT#

Pin	Settings	
1-2 On	AT Mode	
2-3 On	ATX Mode (Default)	



# **External Connector Pin Definitions**

#### **HDMI** Connectors

Connector location: CN1



Pin	Definition	Pin	Definition
A1	HDMITX2P1	A2	GND
A3	HDMITX2N1	A4	HDMITX1P1
A5	GND	A6	HDMITX1N1
A7	HDMITX0P1	A8	GND
A9	HDMITX0N1	A10	HDMICLKP1
A11	GND	A12	HDMICLKN1
A15	HDMIDDCSCL	A16	HDMIDDCSDA
A17	GND	A18	VCC5HDMI
A19	HDMIHPD		

Pin	Definition	Pin	Definition
B1	HDMITX2P1_2	B2	GND
B3	HDMITX2N1_2	B4	HDMITX1P1_2
B5	GND	B6	HDMITX1N1_2
B7	HDMITX0P1_2	B8	GND
B9	HDMITX0N1_2	B10	HDMICLKP1_2
B11	GND	B12	HDMICLKN1_2
B15	HDMIDDCSCL_2	B16	HDMIDDCSDA_2
B17	GND	B18	VCC5HDMI_2
B19	HDMIHPD_2		



### **DC-IN Connector**

Connector location: CN2



Connector location: LED1



Pin	Definition	
1	VINPIN1	
2	VINVSS	
3	VINPIN3	

Pin	Definition		
A1	LED1+		
C1	COM_RXLEDN		
A2	LED2+		
C2	COM_TXLEDN		
A3	LED3+		
C3	S_GP34		
A4	LED4+		
C4	S_GP33		



# **DisplayPort Connectors**

Connector location: DP1



Pin	Definition	Pin	Definition
1	DP1TX0P	2	GND
3	DP1TX0N	4	DP1TX1P
5	GND	6	DP1TX1N
7	DP1TX2P	8	GND
9	DP1TX2N	10	DP1TX3P
11	GND	12	DP1TX3N
13	DP1CFG1	14	DP1CFG2
15	DP1AUXP	16	GND
17	DP1AUXN	18	DP1HPD
19	DP1RETURN	20	VCC3DP1

Pin	Definition	Pin	Definition
21	DP2TX0P	22	GND
23	DP2TX0N	24	DP2TX1P
25	GND	26	DP2TX1N
27	DP2TX2P	28	GND
29	DP2TX2N	30	DP2TX3P
31	GND	32	DP2TX3N
33	DP2CFG1	34	DP2CFG2
35	DP2AUXP	36	GND
37	DP2AUXN	38	DP2HPD
39	DP2RETURN	40	VCC3DP2



### USB3.2 Gen2 + RJ45 Connector

Connector location: LAN1



Pin	Definition	Pin	Definition
1	5VUSB1	2	USB2N_1
3	USB2P_1	4	GND
5	USB32_RXN1	6	USB32_RXP1
7	GND	8	USB32_TXN1
9	USB32_TXP1	10	5VUSB1
11	USB2N_2	12	USB2P_2
13	GND	14	USB32_RXN2
15	USB32_RXP2	16	GND
17	USB32_TXN2	18	USB32_TXP2
19	LAN1TCT	20	LAN1_MDIAP

Pin	Definition	Pin	Definition
21	LAN1_MDIAN	22	LAN1_MDIBP
23	LAN1_MDIBN	24	LAN1_MDICP
25	LAN1_MDICN	26	LAN1_MDIDP
27	LAN1_MDIDN	28	GND
29	LAN1_ACTPW	30	LAN1LEDACTN
31	LAN1_LED2500	32	LAN1_LED1GL
MH1	CHASIS_GND	MH2	CHASIS_GND
MH3	CHASIS_GND	MH4	CHASIS_GND
MH5	CHASIS_GND	MH6	CHASIS_GND
MH7	CHASIS_GND	MH8	CHASIS_GND



### USB3.2 Gen1 + RJ45 Connector

Connector location: LAN2



Pin	Definition	Pin	Definition
1	5VUSB2	2	USB2N_3
3	USB2P_3	4	GND
5	USB32_RXN3	6	USB32_RXP3
7	GND	8	USB32_TXN3
9	USB32_TXP3	10	5VUSB2
11	USB2N_4	12	USB2P_4
13	GND	14	USB32_RXN4
15	USB32_RXP4	16	GND
17	USB32_TXN4	18	USB32_TXP4
19	LAN2TCT	20	LAN2_MDIAP

Pin	Definition	Pin	Definition
21	LAN2_MDIAN	22	LAN2_MDIBP
23	LAN2_MDIBN	24	LAN2_MDICP
25	LAN2_MDICN	26	LAN2_MDIDP
27	LAN2_MDIDN	28	GND
29	LAN2_ACTPW	30	LAN2LEDACTN
31	LAN2_LED2500	32	LAN2_LED1GL
MH1	CHASIS_GND	MH2	CHASIS_GND
MH3	CHASIS_GND	MH4	CHASIS_GND
MH5	CHASIS_GND	MH6	CHASIS_GND
MH7	CHASIS_GND	MH8	CHASIS_GND



# **Internal Connector Pin Definitions**

#### **RTC Battey Connector**

Connector location and type: BAT1 / 1.25mm MALE 180D SMD



#### System Reset Pin Header

Connector location and type: JP1 / 2.0mm MALE 180D DIP

1 🗖 2

Pin	Definition	
1	GND	
2	3V_BAT1	

Pin	Definition		
1	SYSRESETN		
2	GND		



# M.2 Key M (PCIe/SATA) Connector

Connector location and type: CN3 / SMD H:8.5mm



Pin	Definition	Pin	Definition
1	GND	2	M2MKEYPWR
3	GND	4	M2MKEYPWR
5	H_PCIEM2MRXN3	6	NC
7	H_PCIEM2MRXP3	8	NC
9	GND	10	M2SATADSSL
11	H_PCIEM2MTXN3	12	M2MKEYPWR
13	H_PCIEM2MTXP3	14	M2MKEYPWR
15	GND	16	M2MKEYPWR
17	H_PCIEM2MRXN2	18	M2MKEYPWR
19	H_PCIEM2MRXP2	20	NC
21	GND	22	NC
23	H_PCIEM2MTXN2	24	NC
25	H_PCIEM2MTXP2	26	NC
27	GND	28	NC
29	H_PCIEM2MRXN1	30	NC
31	H_PCIEM2MRXP1	32	NC
33	GND	34	NC
35	H_PCIEM2MTXN1	36	NC
37	H_PCIEM2MTXP1	38	DEVSLP_0

Pin	Definition	Pin	Definition
39	GND	40	NC
41	PCIE_mSATA_RXN_R	42	NC
43	PCIE_mSATA_RXP_R	44	NC
45	GND	46	NC
47	PCIE_mSATA_TXN_R	48	NC
49	PCIE_mSATA_TXP_R	50	M2M_PLTRSTN
51	GND	52	SRCCLKREQ7L
53	CLK_PCIE_M2M_N	54	I_WAKEN
55	CLK_PCIE_M2M_P	56	NC
57	GND	58	NC
59		60	
61		62	
63		64	
65		66	
67	NC	68	M2MSUSCLK
69	PCIE_mSATA_SEL	70	M2MKEYPWR
71	GND	72	M2MKEYPWR
73	GND	74	M2MKEYPWR
75	GND		



### M.2 Key B (PCIe/SATA\_USB3.0\_USB2.0) Connector

Connector location and type: CN4 / SMD H:8.5mm 90D



-

Pin	Definition	Pin	Definition
1	GND	2	M2LTEPWR
3	GND	4	M2LTEPWR
5	GND	6	M2POWEROFF
7	USB_M2B_DP	8	M2LTEDISL
9	USB_M2B_DN	10	M2SATADSSL
11	GND	12	
13		14	
15		16	
17		18	
19		20	NC
21	M2LTECONFIG0	22	NC
23	NC	24	NC
25	NC	26	NC
27	GND	28	BKEY_UIM_VPP
29	USB_M2B_RXN	30	BKEY_UIM_RESET
31	USB_M2B_RXP	32	BKEY_UIM_CLK
33	GND	34	BKEY_UIM_DATA
35	USB_M2B_TXN	36	BKEY_UIM_PWR
37	USB_M2B_TXP	38	NC

Pin	Definition	Pin	Definition
39	GND	40	NC
41	NGFF_PE_SSD_RXP1	42	NC
43	NGFF_PE_SSD_RXN1	44	NC
45	GND	46	NC
47	NGFF_PE_SSD_TXN1	48	NC
49	NGFF_PE_SSD_TXP1	50	M2B_PLTRSTN
51	GND	52	SRCCLKREQ3L_M2B
53	CLK_PCIE_M2B_N	54	I_WAKEN
55	CLK_PCIE_M2B_P	56	NC
57	GND	58	NC
59	NC	60	NC
61	NC	62	NC
63	NC	64	NC
65	NC	66	NC
67	M2LTERSTL	68	M2SUSCLK
69	M2LTECONFIG1	70	M2LTEPWR
71	GND	72	M2LTEPWR
73	GND	74	M2LTEPWR
75	M2LTECONFIG2		



### **MINI PCIe Connector**

Connector location and type: CN5 / H: 8mm 90D 3u SMD



Pin	Definition	Pin	Definition
1	I_WAKEN	27	GND
2	<b>3VSBMINIPCIE</b>	28	1V5MINIPCIE
3	N/A	29	GND
4	GND	30	SMB_CLK
5	N/A	31	PCIE_mSATA_TXN_1R
6	1V5MINIPCIE	32	SMB_DATA
7	SRCCLKREQ2L_MINIPCIE	33	PCIE_mSATA_TXP_1R
8	UIM_PWR	34	GND
9	GND	35	GND
10	UIM_DATA	36	USB2_DN7
11	CLK_PCIE_MINIPCIE_N	37	GND
12	UIM_CLK	38	USB2_DP7
13	CLK_PCIE_MINIPCIE_P	39	<b>3VSBMINIPCIE</b>

Pin	Definition	Pin	Definition
14	UIM_RESET	40	GND
15	GND	41	3VSBMINIPCIE
16	UIM_VPP	42	N/A
17	N/A	43	GND
18	GND	44	N/A
19	N/A	45	N/A
20	MINICARD2DIS#	46	N/A
21	GND	47	N/A
22	MINIPCIEPERSTN	48	1V5MINIPCIE
23	PCIE_mSATA_RXN_1R	49	N/A
24	<b>3VSBMINIPCIE</b>	50	GND
25	PCIE_mSATA_RXP_1R	51	PCIE_mSATA_SEL_1
26	GND	52	<b>3VSBMINIPCIE</b>


## 4x1 COM Port Connector

Connector location and type: CN6 / 1.25mm FEMALE 180D SMD

Pin	Definition	Pin	Definition
1	NC	2	NC
3	NC	4	NC
5	COM1_DTRL	6	COM3_DTRL
7	COM1_RTSL	8	COM3_RTSL
9	COM1_TXD	10	COM3_TXD
11	COM1_DCDL	12	COM3_DCDL
13	COM1_CTSL	14	COM3_CTSL
15	COM1_DSRL	16	COM3_DSRL
17	COM1_RXD	18	COM3_RXD
19	COM1_RIL	20	COM3_RIL

Pin	Definition	Pin	Definition
21	GND	22	GND
23	COM2_RTSL	24	COM4_RTSL
25	COM2_TXD	26	COM4_TXD
27	COM2_DTRL	28	COM4_DTRL
29	COM2_DCDL	30	COM4_DCDL
31	COM2_CTSL	32	COM4_CTSL
33	COM2_DSRL	34	COM4_DSRL
35	COM2_RXD	36	COM4_RXD
37	COM2_RIL	38	COM4_RIL
39	GND	40	GND



### **COM5 Connector (Optional)**

Connector location and type: COM5 / 1.0mm MALE 180D 0.5A SMD

## **COM6 Connector (Optional)**

Connector location and type: COM6 / 1.0mm MALE 180D 0.5A SMD





Pin	Definition	Pin	Definition
1	COM5_DCDL	2	COM5_RXD
3	COM5_TXD	4	COM5_DTRL
5	GND	6	COM5_DSRL
7	COM5_RTSL	8	COM5_CTSL
9	COM5_RIL	10	GND

Pin	Definition	Pin	Definition
1	COM6_DCDL	2	COM6_RXD
3	COM6_TXD	4	COM6_DTRL
5	GND	6	COM6_DSRL
7	COM6_RTSL	8	COM6_CTSL
9	COM6_RIL	10	GND



### **Debug Connector**

Connector location and type: DE1 / 1.0mm MALE 180D 0.5A SMD

# 

-

### **Power Button Connector**

Connector location and type: J1 / 1.25mm MALE 180D SMD



Pin	Definition	Pin	Definition
1	GND	6	I_ESPIIO2
2	I_PLTRSTN	7	I_ESPIIO1
3	I_ESPICLK	8	I_ESPIIO0
4	I_ESPIC SOL	9	I_ESPIRSTL
5	I_ESPIIO3	10	3VSB
MH1	GND	MH2	GND

Pin	Definition		
1	PBT_PU		
2	GND		
3	PB_POWER		



### **BIOS FW Connector**

Connector location and type: JFW1 / 1.0mm MALE 90D 0.5A SMD



- -

## SIM Card Slot

Connector location and type: SIM1 / 12.4x14x1.5mm SMD NO PUSH TYPE



Pin	Definition		
1	BIOSSPISI		
2	BIOSSPISO		
3	BIOSSPICLK		
4	BIOSSPICSLO		
5	GND		
6	VSPI		

Pin	Definition	Pin	Definition
C1	UIM_PWR	C2	UIM_RESET
C3	UIM_CLK	C5	GND
C6	UIM_VPP	C7	UIM_DATA
MH1	N/A	MH2	N/A
MH3	N/A	MH4	N/A



## PCIe x8 Slot

Connector location and type: SLOT1 / SMD H:11.1mm 180D 15u

A49	A11	A1
	10000000-000000000000000000000000000000	100-
0	0	
	10000000-000000000000000000000000000000	
B49	B12 B11	B1

Pin	Definition	Pin	Definition
	Demition		Demitton
A1	VIN	A2	VIN
A3	VIN	A4	VIN
A5	VCC5	A6	VCC5
A7	VCC5	A8	VCC5
A9	1V8SB	A10	1V8SB
A11	I_PLTRSTN	A12	GND
A13	CLK_PCIE_SLOT1_P	A14	CLK_PCIE_SLOT1_N
A15	GND	A16	I_SATATXP3
A17	I_SATATXN3	A18	GND
A19	I_SATARXN3	A20	I_SATARXP3
A21	GND	A22	NC
A23	NC	A24	NC
A25	GND	A26	PCIEX8_SLOT1_RXP

Pin	Definition	Pin	Definition
A27	PCIEX8_SLOT1_RXN	A28	GND
A29	PCIE22_SLOT_RXP	A30	PCIE22_SLOT_RXN
A31	GND	A32	PCIE23_SLOT_RXP
A33	PCIE23_SLOT_RXN	A34	GND
A35	PCIE24_SLOT_RXP	A36	PCIE24_SLOT_RXN
A37	GND	A38	PCIEX8_SLOT2_RXP
A39	PCIEX8_SLOT2_RXN	A40	GND
A41	PCIE26_SLOT_RXP	A42	PCIE26_SLOT_RXN
A43	GND	A44	PCIE27_SLOT_RXP
A45	PCIE27_SLOT_RXN	A46	GND
A47	PCIE28_SLOT_RXP	A48	PCIE28_SLOT_RXN
A49	GND		

#### Continued on the next page



Pin	Definition	Pin	Definition
B1	VIN	B2	VIN
B3	VIN	B4	GND
B5	SMB_CLK	B6	SMB_DATA
B7	GND	B8	5VSB
B9	5VSB	B10	5VSB
B11	I_WAKEN	B12	GND
B13	CLK_PCIE_SLOT2_P	B14	CLK_PCIE_SLOT2_N
B15	GND	B16	12VSB
B17	12VSB	B18	12VSB
B19	12VSB	B20	12VSB
B21	12VSB	B22	NC
B23	NC	B24	NC
B25	GND	B26	PCIEX8_SLOT1_TXP

Pin	Definition	Pin	Definition
B27	PCIEX8_SLOT1_TXN	B28	GND
B29	PCIE22_SLOT_TXP	B30	PCIE22_SLOT_TXN
B31	GND	B32	PCIE23_SLOT_TXP
B33	PCIE23_SLOT_TXN	B34	GND
B35	PCIE24_SLOT_TXP	B36	PCIE24_SLOT_TXN
B37	GND	B38	PCIEX8_SLOT2_TXP
B39	PCIEX8_SLOT2_TXN	B40	GND
B41	PCIE26_SLOT_TXP	B42	PCIE26_SLOT_TXN
B43	GND	B44	PCIE27_SLOT_TXP
B45	PCIE27_SLOT_TXN	B46	GND
B47	PCIE28_SLOT_TXP	B48	PCIE28_SLOT_TXN
B49	GND		



## PCIe x16 Slot

Connector location and type: SLOT2 / H: 10.66mm 180D 15u SMD

A82		A11	A1
	100-	-000000000000	
0	0		
	100-	-00000000000	لكرا
B82 B3	12	B11	B1

Pin	Definition	Pin	Definition
A1	VIN	A2	VIN
A3	VIN	A4	VIN
A5	SATA_TXP3	A6	SATA_TXN3
A7	GND	A8	VCC3
A9	VCC3	A10	VCC3
A11	I_PLTRSTN	A12	GND
A13	CLK_PCIEX16_SLOT_P	A14	CLK_PCIEX16_SLOT_N
A15	GND	A16	I_ESPIALERTOL
A17	I_ESPIC SOL	A18	I_ESPIIO0
A19	I_ESPIIO1	A20	I_ESPIIO2
A21	I_ESPIIO3	A22	NC
A23	I_ESPICLK	A24	CLK_RUNL
A25	I_ESPIRSTL	A26	VCCRTC

Pin	Definition	Pin	Definition
A27	H_PECI	A28	NC
A29	PCH_RSMRST_N	A30	S_PMEL
A31	I_SLPS3_N	A32	I_SLPS4_N
A33	I_SLPS5_N	A34	GND
A35	PEG_RXP15	A36	PEG_RXN15
A37	GND	A38	PEG_RXP14
A39	PEG_RXN14	A40	GND
A41	PEG_RXP12	A42	PEG_RXN13
A43	GND	A44	PEG_RXP12
A45	PEG_RXN12	A46	GND
A47	PEG_RXP11	A48	PEG_RXN11
A49	GND	A50	PEG_RXP10
A51	PEG_RXN10	A52	GND

#### Continued on the next page



Pin	Definition	Pin	Definition	
A53	PEG_RXP9	A54	PEG_RXN9	
A55	GND	A56	PEG_RXP8	
A57	PEG_RXN8	A58	GND	
A59	PEG_RXP7	A60	PEG_RXN7	
A61	GND	A62	PEG_RXP6	
A63	PEG_RXN6	A64	GND	
A65	PEG_RXP5	A66	PEG_RXN5	
A67	GND	A68	PEG_RXP4	
A69	PEG_RXN4	A70	GND	
A71	PEG_RXP3	A72	PEG_RXN3	
A73	GND	A74	PEG_RXP2	
A75	PEG_RXN2	A76	GND	
A77	PEG_RXP1	A78	PEG_RXN1	
A79	GND	A80	PEG_RXP0	
A81	PEG_RXN0	A82	GND	
B1	VIN	B2	VIN	
B3	VIN	B4	VIN	
B5	SATA_RXN3	B6	SATA_RXP3	
B7	GND	B8	3VSB	
B9	3VSB	B10	3VSB	
B11	3VSB	B12	FAN_TAC1	
B13	FAN_CTL1	B14	S_GP31	
B15	S_GP32	B16	3V3ALW	
B17	24V_EN	B18	NC	
B19	I_ESPIALERT1L	B20	I_ESPICS1L	

Pin	Definition	Pin	Definition	
B21	NC	B22	FAN_TAC2	
B23	FAN_CTL2	B24	NC	
B25	I_ESPIALERT2L	B26	I_ESPICS2L	
B27	NC	B28	RISER_CARD_INL	
B29	S_GP30	B30	NC	
B31	NC	B32	NC	
B33	NC	B34	GND	
B35	PEG_TXP15	B36	PEG_TXN15	
B37	GND	B38	PEG_TXP14	
B39	PEG_TXN14	B40	GND	
B41	PEG_TXP13	B42	PEG_TXN13	
B43	GND	B44	PEG_TXP12	
B45	PEG_TXN12	B46	GND	
B47	PEG_TXP11	B48	PEG_TXN11	
B49	GND	B50	PEG_TXP10	
B51	PEG_TXN10	B52	GND	
B53	PEG_TXP9	B54	PEG_TXN9	
B55	GND	B56	PEG_TXP8	
B57	PEG_TXN8	B58	GND	
B59	PEG_TXP7	B60	PEG_TXN7	
B61	GND	B62	PEG_TX6	
B63	PEG_TXN6	B64	GND	
B65	PEG_TXP5	B66	PEG_TXN5	
B67	GND	B68	PEG_TXP4	



## Locations of Connectors for TT 300-A Series Riser Card

**Top View** 





## **Internal Connector Pin Definitions of Riser Card**

### **Fan Connector**

Connector location and type: CN1 / 2.54mm MALE 180D DIP

### **GPIO Connector**

23

24

Connector location and type: JP1 / SMD 1.27mm MALE 180D



Pin	Definition	Pin	Definition
1	GND	2	VCC12
3	FAN1TACH	4	FAN1PWM

Pin	Definition	Pin	Definition
1	VCC5	2	GND
3	SGPI1	4	SGPO1
5	SGPI2	6	SGPO2
7	SGP13	8	SGPO3
9	SGPI4	10	SGPO4
11	SGPI5	12	SGPO5
13	SGPI6	14	SGPO6
15	SGPI7	16	SGPO7
17	SGP18	18	SGPO8
19	NC	20	NC
21	NC	22	NC
23	NC	24	NC



## **SATA Connectors**

Connector location and type: CN2 and CN3 / 1.27mm H:9mm FEMALE DIP

5	000000	0 🗆	0 0	0	2
Υ.	000000	0	00	0 🗆	Ч
	P15	P1	S7	S1	

#### CN2

Pin	Definition	Pin	Definition
S1	GND	S2	SATA_TXP3
S3	SATA_TXN3	S4	GND
S5	SATA_RXN3	S6	SATA_RXP3
S7	GND		
P1	VCC3	P2	VCC3
РЗ	VCC3	P4	GND
P5	GND	P6	GND
P7	VCC5	P8	VCC5
P9	VCC5	P10	GND
P11	NC	P12	GND
P13	VCC12	P14	VCC12
P15	VCC12		

#### CN3

Pin	Definition	Pin	Definition
S1	GND	S2	SATA_TXP2
S3	SATA_TXN2	S4	GND
S5	SATA_RXN2	S6	SATA_RXP2
S7	GND		
P1	VCC3	P2	VCC3
P3	VCC3	P4	GND
P5	GND	P6	GND
P7	VCC5	P8	VCC5
P9	VCC5	P10	GND
P11	NC	P12	GND
P13	VCC12	P14	VCC12
P15	VCC12		



## **COM Port Connectors**

Connector location and type: COM1~4 / 1.0mm MALE 180D 0.5A SMD



#### COM1

Pin	Definition	Pin	Definition
1	COM_DCD#1	2	COM_RXD1
3	COM_TXD1	4	COM_DTR#1
5	GND	6	COM_DSR#1
7	COM_RTS#1	8	COM_CTS#1
9	COM_RI#1	10	GND

#### COM3

Pin	Definition	Pin	Definition
1	COM_DCD#3	2	COM_RXD3
3	COM_TXD3	4	COM_DTR#3
5	GND	6	COM_DSR#3
7	COM_RTS#3	8	COM_CTS#3
9	COM_RI#3	10	GND

#### COM2

Pin	Definition	Pin	Definition
1	COM_DCD#2	2	COM_RXD2
3	COM_TXD2	4	COM_DTR#2
5	GND	6	COM_DSR#2
7	COM_RTS#2	8	COM_CTS#2
9	COM_RI#2	10	GND

#### COM4

Pin	Definition	Pin	Definition
1	COM_DCD#4	2	COM_RXD4
3	COM_TXD4	4	COM_DTR#4
5	GND	6	COM_DSR#4
7	COM_RTS#4	8	COM_CTS#4
9	COM_RI#4	10	GND



## PCIe x16 Slot

Connector location and type: SLOT1 / SMD H:10.66mm 180D 15u

B82 B3	12	B11	B1
	000-	-0000000	
0		0	
	000-	-0000000	
A82 A	12	A11	A1

Pin	Definition	Pin	Definition
A1	GND	B1	VCC12
A2	VCC12	B2	VCC12
A3	VCC12	B3	VCC12
A4	GND	B4	GND
A5	ТСК	B5	SMB_CLK
A6	TDI	B6	SMB_DATA
A7	GND	Β7	GND
A8	TMS	B8	VCC3
A9	VCC3	B9	JTAG1
A10	VCC3	B10	3VSB
A11	PCIEX8PLTRSTN	B11	I_WAKEN
A12	GND	B12	NC
A13	I_CLKOUTPCIEP10	B13	GND
A14	I_CLKOUTPCIEN10	B14	PEG_TXP0

Pin	Definition	Pin	Definition
A15	GND	B15	PEG_TXN0
A16	PEG_RXP0	B16	GND
A17	PEG_RXN0	B17	PRSNT2_1
A18	GND	B18	GND
A19	NC	B19	PEG_TXP1
A20	GND	B20	PEG_TXN1
A21	PEG_RXP1	B21	GND
A22	PEG_RXN1	B22	GND
A23	GND	B23	PEG_TXP2
A24	GND	B24	PEG_TXN2
A25	PEG_RXP2	B25	GND
A26	PEG_RXN2	B26	GND
A27	GND	B27	PEG_TXP3
A28	GND	B28	PEG_TXN3

#### Continued on the next page



Pin	Definition	Pin	Definition
A29	PEG_RXP3	B29	GND
A30	PEG_RXN3	B30	NC
A31	GND	B31	PRSNT2_2
A32	NC	B32	GND
A33	NC	B33	PEG_TXP4
A34	GND	B34	PEG_TXN4
A35	PEG_RXP4	B35	GND
A36	PEG_RXN4	B36	GND
A37	GND	B37	PEG_TXP5
A38	GND	B38	PEG_TXN5
A39	PEG_RXP5	B39	GND
A40	PEG_RXN5	B40	GND
A41	GND	B41	PEG_TXP6
A42	GND	B42	PEG_TXN6
A43	PEG_RXP6	B43	GND
A44	PEG_RXN6	B44	GND
A45	GND	B45	PEG_TXP7
A46	GND	B46	PEG_TXN7
A47	PEG_RXP7	B47	GND
A48	PEG_RXN7	B48	PRSNT2_3
A49	GND	B49	GND
A50	NC	B50	PEG_TXP8
A51	GND	B51	PEG_TXN8
A52	PEG_RXP8	B52	GND
A53	PEG_RXN8	B53	GND
A54	GND	B54	PEG_TXP9
A55	GND	B55	PEG_TXN9

Pin	Definition	Pin	Definition
A56	PEG_RXP9	B56	GND
A57	PEG_RXN9	B57	GND
A58	GND	B58	PEG_TXP10
A59	GND	B59	PEG_TXN10
A60	PEG_RXP10	B60	GND
A61	PEG_RXN10	B61	GND
A62	GND	B62	PEG_TXP11
A63	GND	B63	PEG_TXN11
A64	PEG_RXP11	B64	GND
A65	PEG_RXN11	B65	GND
A66	GND	B66	PEG_TXP12
A67	GND	B67	PEG_TXN12
A68	PEG_RXP12	B68	GND
A69	PEG_RXN12	B69	GND
A70	GND	B70	PEG_TXP13
A71	GND	B71	PEG_TXN13
A72	PEG_RXP13	B72	GND
A73	PEG_RXN13	B73	GND
A74	GND	B74	PEG_TXP14
A75	GND	B75	PEG_TXN14
A76	PEG_RXP14	B76	GND
A77	PEG_RXN14	B77	GND
A78	GND	B78	PEG_TXP15
A79	GND	B79	PEG_TXN15
A80	PEG_RXP15	B80	GND
A81	PEG_RXN15	B81	PRSNT2_4
A82	GND	B82	NC



## PCIe x4 Slot

Connector location and type: SLOT2 / SMD H:7.98mm 180D 30u

#### 

-	T	r	
Pin	Definition	Pin	Definition
A1	GND	A17	H_PCIERXN7
A2	VCC12	A18	GND
A3	VCC12	A19	NC
A4	GND	A20	GND
A5	JTAG2	A21	H_PCIERXP7_1
A6	JTAG3	A22	H_PCIERXN7_1
A7	NC	A23	GND
A8	JTAG5	A24	GND
A9	VCC3	A25	H_PCIERXP7_2
A10	VCC3	A26	H_PCIERXN7_2
A11	PCIEX8PLTRSTN	A27	GND
A12	GND	A28	GND
A13	I_CLKOUTPCIEP11	A29	H_PCIERXP7_3
A14	I_CLKOUTPCIEN11	A30	H_PCIERXN7_3
A15	GND	A31	GND
A16	H_PCIERXP7	A32	NC

Pin	Definition	Pin	Definition
B1	VCC12	B17	PRSNT2_1
B2	VCC12	B18	GND
B3	VCC12	B19	H_PCIETXP7_1
B4	GND	B20	H_PCIETXN7_1
B5	SMB_CLK	B21	GND
B6	SMB_DATA	B22	GND
B7	GND	B23	H_PCIETXP7_2
B8	VCC3	B24	H_PCIETXN7_2
B9	JTAG1	B25	GND
B10	3VSB	B26	GND
B11	I_WAKEN	B27	H_PCIETXP7_3
B12	NC	B28	H_PCIETXN7_3
B13	GND	B29	GND
B14	H_PCIETXP7	B30	NC
B15	H_PCIETXN7	B31	PRSNT2_2
B16	GND	B32	GND



## PCIe x4 Slot

Connector location and type: SLOT3 / SMD H:7.98mm 180D 30u

#### 

		r	
Pin	Definition	Pin	Definition
A1	GND	A17	H_PCIERXN6
A2	VCC12	A18	GND
A3	VCC12	A19	NC
A4	GND	A20	GND
A5	JTAG2	A21	H_PCIERXP6_1
A6	JTAG3	A22	H_PCIERXN6_1
A7	NC	A23	GND
A8	JTAG5	A24	GND
A9	VCC3	A25	H_PCIERXP6_2
A10	VCC3	A26	H_PCIERXN6_2
A11	PCIEX8PLTRSTN	A27	GND
A12	GND	A28	GND
A13	I_CLKOUTPCIEP9	A29	H_PCIERXP6_3
A14	I_CLKOUTPCIEN9	A30	H_PCIERXN6_3
A15	GND	A31	GND
A16	H_PCIERXP6	A32	NC

Pin	Definition	Pin	Definition
B1	VCC12	B17	PRSNT2_1
B2	VCC12	B18	GND
B3	VCC12	B19	H_PCIETXP6_1
B4	GND	B20	H_PCIETXN6_1
B5	SMB_CLK	B21	GND
B6	SMB_DATA	B22	GND
B7	GND	B23	H_PCIETXP6_2
B8	VCC3	B24	H_PCIETXN6_2
B9	JTAG1	B25	GND
B10	3VSB	B26	GND
B11	I_WAKEN	B27	H_PCIETXP6_3
B12	NC	B28	H_PCIETXN6_3
B13	GND	B29	GND
B14	H_PCIETXP6	B30	NC
B15	H_PCIETXN6	B31	PRSNT2_2
B16	GND	B32	GND



## **Block Diagram**





# CHAPTER 3: SYSTEM SETUP

## **Removing the Chassis Cover**



Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.

1. Remove the thumb screw on the side of the chassis cover.



2. With the screw removed, push the cover to the right and remove it from the chassis.









3. Remove the screws and copper posts from the chassis.







4. Remove the cable ties from the cables of the board's COM ports.





-



- 5. With the screws, copper posts, and cable removed, lift up the cover and remove it from the chassis.
- 6. Complete.







-



## Installing CPU

1. Remove the screws from the top cover of the chassis.



2. Remove the top cover.





3. Locate the CPU socket on the board.



4. Unlock the socket by pushing the load lever down, moving it sideways until it is released from the retention tab.





5. Lift the load lever up to open the CPU retention bracket.

6. Insert the CPU into the socket. The triangular edge on the CPU must align with the corner of the CPU socket shown in the following photo.





The notch on the CPU will also fit into the alignment key on the socket.





7. With the CPU installed, close the retention bracket and then hook the load lever under the retention tab. Ensure that the notch on the retention bracket is slid under the screw before lowering the load lever as shown below.



Screw Notch



Handle the CPU by its edges and avoid touching the pins.The CPU will fit in only one orientation and can easily be inserted without exerting any force.



•

Do not force the CPU into the socket. Forcing the CPU into the socket may bend the pins and damage the CPU.





<Reminder> After installing the CPU, remove the plastic protective film

attached to the CPU thermal pad on the top cover.

8. Ensure that one end of the top cover is pushed towards the end of the chassis then lower the top cover when assembling.









## Installing a SO-DIMM Memory Module

**Note:** Follow the previous section to remove the chassis before installing a SO-DIMM module.

1. Locate the SO-DIMM socket.



2. Insert the module into the socket at an approximately 30-degree angle. The ejector tab at the ends of the socket will automatically snap into the locked position to hold the module in place.



Memory Module



3. Complete.





## Installing a Mini-PCIe 4G LTE/mSATA Module (Full-size)

1. Locate the Mini-PCIe slot on the board.



2. Insert the module into the Mini-PCIe slot at a 45-degree angle until the gold-plated connector on the edge of the module completely disappears into the slot.





3. Push the module down and secure it with a screw.





## Installing a WLAN/Bluetooth Mini-PCIe Module (Half-size)

1. Align the wireless LAN module to the module bracket and secure both together with screws.



2. Fix the antenna cable onto the WiFi module and insert the WiFi module into the Mini-PCIe slot. Push the module down and then secure it with a mounting screw.



Mounting screw



## **Installing an Antenna**

**Note:** Please remove the gaskets (ring1 and ring 2) on the SMA antenna jack first.

1. Remove the antenna hole covers located on the rear panel.





- Chapter 3: System Setup
- 2. Insert ring 1 through the SMA antenna jack end of the cable, then pass it through the antenna hole in the chassis. Attach the ring 2 and 2 washers onto the antenna jack in sequence.









.





-

Note: When installing WiFi or 4G LTE antennas, make sure the washers (P/N: 5061600245X00) are fitted onto the antenna connector, one on each side as shown below.



Copyright © 2023 NexAloT Co., Ltd. All Rights Reserved.

Side A

.



## Installing a SIM Card

1. Locate the SIM card holder on the board.



SIM Card Cover

2. Open the cover and place the SIM card on the holder.



SIM Card



3. Close the cover and secure it to the original position.




## Installing an M.2 Card for Storage and 4G LTE (2242/3042)

1. Locate the M.2 Key B slot on the board.





M.2 Key B



3. Push the module down and then secure it with a mounting screw.





## Installing an M.2 Card for 5G (3052)

1. Locate the M.2 Key B slot on the board.





2. Tighten the copper post from the accessory kit.



3. Insert the M.2 module into the slot at a 30-degree angle. Push the module down and then secure it with a mounting screw.



60



## Installing an M.2 Card for Storage (2280)

1. Locate the M.2 Key M slot on the board.



M.2 Key M

2. Insert the M.2 module into the slot at a 30-degree angle.



3. Push the module down and then secure it with a mounting screw.





## Installing a PCIe Expansion Card

1. Remove the PCIe slot cover from the chassis.



2. Insert the PCIe expansion card and fasten the screw to secure the card in place.





Note: TT 300-A2Q is equipped with two PCle x 4 expansion slots. Whereas, TT 300-A3Q is equipped with one PCle x 16 and two PCle x 4 slots.

.



## Installing an SATA Storage Drive

1. Open the side cover, there are two SSD trays at the bottom of the case.





Chapter 3: System Setup

2. Insert the storage drive into the drive bay with SATA data facing towards the end. Next, while supporting the storage drive, turn the bracket to the other side. From the outside of the storage bracket, secure the drive in place with screws.



3. Push the tray disk with the SSD installed to the end, and confirm that it is stuck in the SATA connector.









Note: When pushing the SSD tray back, pay attention to the four positioning/fixing rivets in the middle of the tray.





## **Wallmount Brackets**

• The bundled wallmount brackets allow users to easily mount the system on the wall in either a horizontal or vertical orientation. By default, the brackets are fixed at the bottom of the system, which places the system in a horizontal position.









2. Position the mounting brackets onto the side cover, and then secure them in place with the screws that were previously loosened from the bottom.





Note: Make sure the brackets are properly aligned with the screw holes indicated in the image above.



# CHAPTER 4: BIOS SETUP

This chapter describes how to use the BIOS setup program for TT 300-A Series. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NexAloT website at www.nexaiot.com.

## **About BIOS Setup**

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure items such as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the setup options, and second, to make settings appropriate for the way you use the computer.

## When to Configure the BIOS

- This program should be executed under the following conditions:
- When changing the system configuration
- When a configuration error is detected by the system and you are prompted to make changes to the setup program
- When resetting the system clock
- When redefining the communication ports to prevent any conflicts
- When making changes to the Power Management configuration
- When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.



## **Default Configuration**

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

## **Entering Setup**

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing  $\int_{Del}$  allows you to enter Setup.

## Legends

Кеу	Function
← →	Moves the highlight left or right to select a menu.
↑ ↓	Moves the highlight up or down between sub-menu or fields.
Esc	Exits the BIOS Setup Utility.
+	Scrolls forward through the values or options of the highlighted field.
-	Scrolls backward through the values or options of the highlighted field.
Tab t	Selects a field.
F1	Displays General Help.
F2	Load previous values.
F3	Load optimized default values.
F4	Saves and exits the Setup program.
Enter,	Press <enter> to enter the highlighted sub-menu.</enter>

69

# NEXIOT

## Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

## Submenu

When " $\blacktriangleright$ " appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press from .



## **BIOS Setup Utility**

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from several setup functions and one exit. Use arrow keys to select among the items and press to accept or enter the submenu.

## Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

Main     Advanced     Chipset     Security     Boot     Save & Exit       BIOS Information     American Megatrends     5.25       Corre Version     5.25       Compliancy     UEFI 2.8; PI 1.7       Project Version     T300A.010 x64       Build Date and Time     12/23/2022 12:01:14       Access Level     Administrator       Processor Information     AdderLake DT       Type     12/th Gen Intel(R)       Core(TM) i7-12700TE     14       ID     0x90672       Stepping     C0       Memory     32768 MB       Hemory Frequency     4800 MHz       PCH Information     PCH-S       Name     PCH-S       PCH SKU     Q670E       Stepping     EX: Exit	Aptio Setup Utility - AMI							
BIOS Information       American Megatrends         BIOS Vendor       American Megatrends         Core Version       5.25         Compliancy       UEFI 2.8; PI 1.7         Project Version       T300A.010 x64         Build Date and Time       12/23/2022 12:01:14         Access Level       Administrator         Processor Information       Name         Name       AlderLake DT         Type       12th Gen Intel(R)         Core(TM) i7-12700TE       Stepping         ID       0x90672         Stepping       C0         Memory       32768 MB         PCH Information       PCH Information         Name       PCH Is         Name       PCH SKU         Q670E       B1	Main Advanced	Chipset	Security	Boot	Save	& Exit		
v	BIOS Information BIOS Vendor Core Version Compliancy Project Version Build Date and Time Access Level Processor Information Name Type Speed ID Stepping Microcode Revision IGFX GOP Version Total Memory Memory Frequency PCH Information Name PCH SKU Stepping		American M 5.25 UEFI 2.8; PI T300A010 xč I2/23/2022 1 Administrato 12th Gen Int Core(TM) i7 1400GHz 0x90672 C0 1A 17.0.1073 32768 MB 4800 MHz PCH-S Q670E B1	egatrends   1.7   2:01:14   2:01:14		→+-: Select Screen 1: Select Hem Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit		
					•			

## System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Monday to Sunday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 2005 to 2099.

## System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.



## **Advanced**

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Setting incorrect field values may cause the system to malfunction.

Aptio Setup Utility - AMI								
Main	Advanced	Chipset	Boot	Security	Save & Exit			
<ul> <li>CPU Confi;</li> <li>Power &amp; Pi</li> <li>Trusted Co</li> <li>NCT6126D</li> <li>Hardware I</li> <li>NCT6126dS</li> <li>USB Confi;</li> <li>Network St</li> <li>NVMe Con</li> <li>Intel(R) Eti</li> <li>Intel(R) Eti</li> </ul>	uration erformance mputing Super IO Con Monitor Sec Super IO C uration ack Configura figuration hernet Control	figuration Configuration tion ler 1226-V - ( ler 1226-V - (	00:10: F3:A 00:10: F3:A	.6:E4:36 .6:E4:37	CPU Configuration Parameters →+-: Select Screen 1: Select Item Enter: Select +/-: Change Opt. FI: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit			
		Version 2.22	.1284 Copyr	right (C) 2022 .	AMI			



## **CPU Configuration**

This section is used to configure CPU settings.



## **Efficient-core Information**

Display the E-core information.

## Intel (VMX) Virtualization Technology

When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

## **Active Performance-cores**

Select the number of P-cores to activate in each processor package.

## **Active Efficient-cores**

Select the number of E-cores to activate in each processor package.

## Hyper-threading

Enable or disable hyper-threading technology.



### Power & Performance > CPU - Power Management Control

This section is used to configure the CPU power management features.



## Intel(R) SpeedStep(tm)

Enable or disable Intel<sup>®</sup> SpeedStep.

## Turbo mode

Enable or disable processor turbo mode.

### C states

Enable or disable CPU power management. It allows CPU to go to C states when it's not 100% utilized.



## **Trusted Computing**

This section is used to configure Trusted Platform Module (TPM) settings.



## **Security Device Support**

Enable or disable BIOS support for security device. O.S will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

## SHA256 PCR Bank

Enable or disable SHA256 PCR Bank.

## **Pending operation**

Schedule an operation for the security device. Note that your device will reboot during restart in order to change State of Security Device.

## Platform Hierarchy

Enable or disable platform hierarchy.

## Storage Hierarchy

Enable or disable storage hierarchy.

## Endorsement Hierarchy

Enable or disable endorsement hierarchy.

## **Physical Presence Spec Version**

Configure the physical presence spec version. Note that some HCK tests might not support 1.3.

## **Device Select**

Configure the TPM version. TPM 1.2 will restrict support to TPM 1.2 devices and TPM 2.0 will restrict support to TPM 2.0 devices. Auto will support both TPM 1.2 and 2.0 devices with the default set to TPM 2.0 devices if not found, and TPM 1.2 devices will be enumerated.



## **NCT6126D Super IO Configuration**

This section is used to configure the serial ports.



## Super IO Chip

Displays the Super I/O chip used on the board.

## Serial Port 1/2/3/4 Configuration > Serial Port

Enable or disable the serial port.

## Serial Port 1/2/3/4 Configuration > Device Settings

## Serial Port 1/2 Configuration > Onboard Serial Port Mode

Select to change the serial port mode to RS232, RS422, or RS485 Auto.



## **Hardware Monitor**

This section is used to monitor hardware status such as temperature, fan speed, and voltages.

	Aptio Setup Utility - AMI	
Advanced		
Pc Health Status CPU Temperature System temperature CPU Fan Speed System Fan Speed +12V +5V +3.3V VCORE	: +55 °C : +29 °C : 1689 RPM : N/A : +12.000 V : +5.020 V : +3.328 V : +0.736 V	
		→→: Select Screen 1]: Select Item Enter: Select +/- Change Opt. FI: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Vers	ion 2.22.1284 Copyright (C) 2023	2 AMI

## **CPU** Temperature

Detect and display the current CPU temperature.

## System Temperature

Detect and display the current system temperature.

## **CPU Fan Speed** Detect and display the CPU fan speed.

## System Fan Speed

Detect and display the system fan speed.

## VCore

Detect and display the Vcore CPU voltage.



## NCT6126dSec Super IO Configuration

This section is used to configure the serial ports.



## Super IO Chip

Displays the Super I/O chip used on the board.

## Serial Port 5/6/7/8 Configuration > Serial Port

Enable or disable the serial port.

### Serial Port 5/6/7/8 Configuration > Device Settings

## **USB** Configuration

This section is used to configure the USB.

USB Configuration		Enables Legacy USB support. AUTO option disables legacy
USB Module Version USB Controllers:	28	support if no USB devices are connected. DISABLE option wi keep USB devices available only for EFI applications.
USB Devices: 2 Keyboard, 2 Mice		
Legacy USB Support XHCI Hand-off	[Enabled] [Enabled]	
USB hardware delays and time-outs: Device reset time-out	[20 sec]	→→→: Select Screen ↑1: Select Item Enter. Select +/- Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

### Legacy USB Support

Enable: Enables Legacy USB. Auto: Disables support for Legacy when no USB devices are connected. Disable: Keeps USB devices available only for EFI applications.

## **XHCI Hand-off**

This is a workaround for OSs without XHCI hnd-off support. The XHCI ownership change should be claimed by XHCI driver.

### Device reset time-out

Select the USB mass storage device's start unit command time-out.



## **Network Stack Configuration**

This section is used to configure the network stack settings.

Aptio Setup Utility - AMI					
Advanced					
Network Stack	[Disabled]	Enable/Disable UEF1 Network Stack			
		-→: Select Screen  1: Select Item Enter: Select			
		<ul> <li>+/-: Change Opt.</li> <li>F1: General Help</li> <li>F2: Previous Values</li> <li>F3: Optimized Defaults</li> <li>F4: Save &amp; Exit</li> <li>ESC: Exit</li> </ul>			
Version 2.22.1284 Copyright (C) 2022 AMI					

### Network Stack

Enable or disable UEFI network stack.

## **NVMe Configuration**

This section is used to display information on the NVMe devices installed.

Aptio Setup	Utility - AMI
Advanced	
NMVe Configuration	
No NVME Device Found	
	→←' Select Screen
	↑↓: Select Item Enter: Select
	+/-: Change Opt. F1: General Help
	F2: Previous Values F3: Optimized Defaults
	F4: Save & Exit ESC: Exit



## Intel(R) Ethernet Controller I226-V

This section is used to display information of the Intel Ethernet controller.

Aptio Setup Utility - AMI					
Advanced					
UEFI Driver Device Name	Intel (R) 2.5G Ethernet Controller 0.10.04 Intel(R) Ethernet Controller 1226-V				
Link Status	[Disconnected]				
Mac Address	00:10:F3:A6:E4:36				
Version 2.22	1284 Copyright (C) 2022 AMI				



## Chipset

-

This section gives you functions to configure the system based on the specific features of the chipset. The chipset manages bus speeds and access to system memory resources.

Aptio Setup Utility - AMI							
Main	Advanced	Chipset	Security	Boot	Save & Exit		
System Age PCH-IO Co	ent (SA) Config onfiguration	guration			PCII Parameters		
					→→-: Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit		
		Version 2.22	.1284 Convri	pht (C) 2022	AMI		



## System Agent (SA) Configuration

This section is used to configure the System Agent (SA) configuration.



## Graphic Configuration > DVMT Pre-Allocated

Select DVMT 5.0 Pre-Allocated (Fixed) graphic memory size used by the internal graphic device.

## VMD Setup Menu > Enable VMD controller(Raid)

Enable or disable the VMD controller.

### VT-d

Enable or disable VT-d function on MCH.



## **PCH-IO Configuration**

This section is used to configure PCH-IO configuration.



## **SATA Configuration**

Enter the SATA configuration sub-menu.

## SATA Configuration > SATA Controller(s)

Enable or disable the SATA controller. The devices shown on screen may vary depending on the SATA devices you have installed.

## **Security Configuration**

Enter the Security Configuration sub-menu.

## Security Configuration > RTC Memory Lock

Enable will lock bytes 38h-3Fh in the lower/upper 128-byte bank of RTC RAM.

## State After G3

Specify what state to go to when power is re-applied after a power failure (G3 state).

### **USB(LAN1)** Power State in Standby

Select USB LAN1 power state in standby mode.

### USB(LAN2) Power State in Standby

Select USB LAN2 power state in standby mode.



## Security



### Administrator Password

Select this to reconfigure the administrator's password.

### User Password

Select this to reconfigure the user's password.



## Boot

.

This section is used to configure the boot features.



## **Setup Prompt Timeout**

Selects the number of seconds to wait for the setup activation key. 65535(0xFFFF) denotes indefinite waiting.

## Bootup NumLock State

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

## Quiet Boot

Enable or disable quiet boot option.

## **Boot Option Priorities**

Adjust the boot sequence of the system. Boot Option #1 is the first boot device that the system will boot from, next will be #2 and so forth.

## Fast Boot

Enables or disables fast boot technology to speed up the system boot time. This is achieved by skipping specific tests during BIOS POST routine. When enabled, the BIOS will shorten or skip some check items during POST. This will decrease the time needed to boot the system.



## Save & Exit



## Save Changes and Exit

To save the changes and exit the Setup utility, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes. You can also press <F4> to save and exit Setup.

### **Discard Changes and Exit**

To exit the Setup utility without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting. You can also press <ESC> to exit without saving the changes.

### Save Changes and Reset

To save the changes and reset, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

### **Discard Changes and Reset**

To exit the Setup utility and reset without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting.

### Save Changes

To save changes and continue configuring the BIOS, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

### **Discard Changes**

To discard the changes, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes to discard all changes made and restore the previously saved settings.

### **Restore Defaults**

To restore the BIOS to default settings, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

### Save as User Defaults

To use the current configurations as user default settings for the BIOS, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

### **Restore User Defaults**

To restore the BIOS to user default settings, select this field then press <Enter>. A dialog box will appear. Confirm by selecing Yes.

### Boot Override

To bypass the boot sequence from the Boot Option List and boot from a particular device, select the desired device and press <Enter>.



# APPENDIX A: GPI/O PROGRAMMING GUIDE

GPI/O (General Purpose Input/Output) pins are provided for custom system design. This appendix provides definitions and its default setting for the ten GPI/O pins in the TT 300-A series. The pin definition is shown in the following table:

## First Set A40h to 0x00

Pin No.	GPI/O mode	Address	Pin No.	GPI/O mode	Address
1	VCC	-	2	GND	-
3	GPIO	A42h (Bit1)			
5	GPI1	A42h (Bit2)			
7	GPI2	A42h (Bit3)			
9	GPI3	A42h (Bit4)			
11	GPI4	A42h (Bit5)			
13	GPI5	A42h (Bit6)			
15	GPI6	A42h (Bit7)			

JP1 - GPI/O Connector(1)

## First Set A40h to 0x01

Pin No.	GPI/O mode	Address	Pin No.	GPI/O mode	Address
17	GP17	A42h (Bit0)	4	GPI11	A42h (Bit3)
19	GPI8	A42h (Bit1)	6	GPI12	A42h (Bit4)
21	GPI9	A42h (Bit2)	8	GPI13	A42h (Bit5)
			10	GPI14	A42h (Bit6)
			12	GPI15	A42h (Bit7)

JP1 - GPI/O Connector(2)

## First Set A40h to 0x02

Pin No.	GPI/O mode	Address	Pin No.	GPI/O mode	Address
			14	GPI16	A42h (Bit0)
			16	GPI17	A42h (Bit1)
			18	GPI18	A42h (Bit2)
			20	GPI19	A42h (Bit3)
			22	GPI20	A42h (Bit4)
			24	GPI21	A42h (Bit5)

JP1 - GPI/O Connector(3)



## First Set A40h to 0x09

Pin No.	GPI/O mode	Address	Pin No.	GPI/O mode	Address
23	GP10	A42h (Bit6)			

JP1 - GPI/O Connector(4)

## First Set A40h to 0x02

Pin No.	GPI/O mode	PowerOn Default	Address	Pin No.	GPI/O mode	Address
1	VCC	-	-	2	GND	-
3	GPO0	Low	A42h (Bit6)			
5	GPO1	Low	A42h (Bit7)			

JP2 - GPI/O Connector(1)

## First Set A40h to 0x03

Pin No.	GPI/O mode	PowerOn Default	Address	Pin No.	GPI/O mode	Address
7	GPO2	Low	A42h (Bit0)			
9	GPO3	Low	A42h (Bit1)			
11	GPO4	Low	A42h (Bit2)			
13	GPO5	Low	A42h (Bit3)			
15	GPO6	Low	A42h (Bit4)			
17	GPO7	Low	A42h (Bit5)			
19	GPO8	Low	A42h (Bit6)			
21	GPO9	Low	A42h (Bit7)			

JP2 - GPI/O Connector(2)

## First Set A40h to 0x04

Pin No.	GPI/O mode	PowerOn Default	Address	Pin No.	GPI/O mode	PowerOn Default	Address
23	GPO10	Low	A42h (Bit0)	4	GPO11	Low	A42h (Bit1)
				6	GPO12	Low	A42h (Bit2)
				8	GPO13	Low	A42h (Bit3)
				12	GPO15	Low	A42h (Bit4)
				14	GPO16	Low	A42h (Bit5)
				16	GPO17	Low	A42h (Bit6)
				18	GPO18	Low	A42h (Bit7)

JP2 - GPI/O Connector(3)

## First Set A40h to 0x09

Pin No.	GPI/O mode	PowerOn Default	Address	Pin No.	GPI/O mode	PowerOn Default	Address
				10	GPO14	Low	A42h (Bit0)
				20	GPO19	Low	A42h (Bit1)
				24	GPO21	Low	A42h (Bit7)

JP2 - GPI/O Connector(4)

## First Set A40h to 0x00

Pin No.	GPI/O mode	PowerOn Default	Address	Pin No.	GPI/O mode	PowerOn Default	Address
				22	GPO20	Low	A42h (Bit0)

JP2 - GPI/O Connector(5)



Pin No.	GPI/O mode	PowerOn Default	Address
A4	GPO	High	A06h (Bit2)
A3	GPO	High	A06h (Bit3)

LED1 - GPO LED

Control the GPO pin (A3/A4) level from I/O port A06h bit (3/2). The bit is Set/Clear indicated output High/Low.



# APPENDIX B: WATCHDOG PROGRAMMING GUIDE

## ITE8786 WatchDog Programming Guide

#define SUPERIO\_PORT 0x2E
#define WDT\_ PWRGD 0xFA
#define WDT\_SET 0x72
#define WDT\_VALUE 0x73

void main(void)

{

#Enter SuperIO Configuration outportb(SUPERIO\_PORT, 0x87); outportb(SUPERIO\_PORT, 0x01); outportb(SUPERIO\_PORT, 0x55); outportb(SUPERIO\_PORT, 0x55);

# Set LDN

outportb(SUPERIO\_PORT, 0x07); outportb(SUPERIO\_PORT+1,0x04);

## # Set WDT setting

outportb(SUPERIO\_PORT, WDT\_PWRGD); outportb(SUPERIO\_PORT+1, 0x20); # WDT output through PWRGD

### # Set LDN

outportb(SUPERIO\_PORT, 0x07); outportb(SUPERIO\_PORT+1,0x07); 

# **APPENDIX C: WINDOWS TROUBLESHOOTING**

If you install Windows 10 Enterprise 64 bit and encounter the following warning. Please don't be worried. OOBE or "Out-of-Box Experience" is a new auto operating tool that comprises a guided setup and an introduction to the features of Windows.

It facilitates the process of device enrollment when you are trying to set up new system. Microsoft claims in the documentation that OOBEAADV10 error can be a result of time difference, which is necessary for Kerberos-based authentication.

Error OOBEAADV10 generally occurs in the last stage of installing or resetting the PC when setting configurations of Windows 10. Although the error screen shows a "Try again" link, using it rarely works anything positive.

Just click on **Skip**, then you can complete OS installation and succeed entering OS normally.

Something went wrong You can try again, or skip for now.							
OOBEAAI	DV10						
	Skip	Try again					