



NEXCOM International Co., Ltd.

Intelligent Platform & Services Business Unit

Wide Screen Touch Computer

XPPC 16-101

User Manual

CONTENTS

Preface

| | |
|--|------|
| Copyright | iv |
| Disclaimer | iv |
| Acknowledgements | iv |
| Regulatory Compliance Statements | iv |
| Declaration of Conformity | iv |
| RoHS Compliance | v |
| Warranty and RMA | vi |
| Safety Information | viii |
| Installation Recommendations | viii |
| Safety Precautions | ix |
| Technical Support and Assistance | x |
| Conventions Used in this Manual | x |
| Global Service Contact Information | xi |
| Package Contents | xiii |
| Ordering Information | xiv |

Chapter 1: Product Introduction

| | |
|--------------------------------|---|
| XPPC 16-101 | 1 |
| Overview | 1 |
| Key Features | 1 |
| Hardware Specifications | 2 |
| Knowing Your XPPC 16-101 | 4 |
| Rear Bottom | 4 |
| Rear Top | 4 |
| Mechanical Dimensions | 5 |

Chapter 2: Jumpers and Connectors

| | |
|---|----|
| Before You Begin | 6 |
| Precautions | 6 |
| Jumper Settings | 7 |
| Locations of the Jumpers and Connectors for XPPC 16-101 | 8 |
| Top View | 8 |
| Bottom View | 9 |
| Jumpers & DIP Switches | 10 |
| AT/ATX Mode Select | 10 |
| Clear CMOS | 10 |
| LVDS Panel Voltage Select | 11 |
| LVDS Enable Select | 11 |
| LVDS Resolution Select | 12 |
| Connector Pin Definitions | 13 |
| External Connector | 13 |
| COM1 DB9 Male Connector | 13 |
| COM2 DB9 Male Connector | 13 |
| Connector Pin Definitions | 14 |
| Internal Connectors | 14 |
| LVDS Inverter Connector | 14 |
| System Reset Header | 14 |
| Power LED Connector | 15 |
| BIOS update connector | 15 |
| USB2.0 Connector | 16 |
| SIM Card Connector | 16 |
| GPIO Connector | 17 |



| | |
|------------------------------------|----|
| Audio MIC Line Out Connector | 17 |
| Speaker Connector | 18 |
| FAN Connector | 18 |
| Debug Port/LPC Bus Connector | 19 |
| COMPORT Ring Connector | 19 |
| Battery Connector | 20 |
| DC Power Input | 20 |
| LVDS Panel Connector | 21 |
| eDP Panel Connector | 22 |
| Mini-PCIe Connector | 23 |
| M.2 Connector (M-Key) | 24 |
| Block Diagram | 25 |

Chapter 3: System Setup

| | |
|---|----|
| Removing the Top Cover from the Chassis | 26 |
| Installing DDR or SSD module | 26 |
| Installing Wi-Fi module | 27 |
| Installing VESA Mount Kit | 28 |
| Installing Open Frame Kit | 28 |
| System Dimensions with Open Frame Kit | 29 |
| Panel Mounting | 30 |

Chapter 4: BIOS Setup

| | |
|----------------------------------|----|
| About BIOS Setup | 26 |
| When to Configure the BIOS | 26 |
| Default Configuration | 27 |
| Entering Setup | 27 |
| Legends | 27 |
| BIOS Setup Utility | 29 |
| Main | 29 |
| Advanced | 30 |
| Chipset | 39 |
| Security | 42 |
| Boot | 43 |
| Save & Exit | 44 |



PREFACE

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexcom.com>. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

XPPC 16-101 is a trademark of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class A devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

RoHS Compliance



NEXCOM RoHS Environmental Policy and Status Update

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2011/65/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2013 will be RoHS compliant. They will use the usual NEXCOM naming convention.

Warranty and RMA

NEXCOM Warranty Period

NEXCOM manufactures products that are new or equivalent to new in accordance with industry standard. NEXCOM warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NEXCOM.

NEXCOM Return Merchandise Authorization (RMA)

- Customers shall enclose the “NEXCOM RMA Service Form” with the returned packages.
- Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the “NEXCOM RMA Service Form” for the RMA number apply process.
- Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NEXCOM is not responsible for the devices/parts.
- Customers are responsible for the safe packaging of defective products, making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as “Out of Warranty.”
- Any products returned by NEXCOM to other locations besides the customers’ site will bear an extra charge and will be billed to the customer.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

System Level

- Component fee: NEXCOM will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- Items will be replaced with NEXCOM products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- Replace with 3rd party products if needed.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Board Level

- Component fee: NEXCOM will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection to protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. Do not place heavy objects on the equipment.
16. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
17. **ATTENTION:** Risque d'explosion si la batterie est remplacée par un type incorrect. Mettre au rebus les batteries usagées selon les instructions.

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at www.nexcom.com.
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
 - Product name and serial number
 - Detailed information of the peripheral devices
 - Detailed information of the installed software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wordings of the error messages

Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.

Conventions Used in this Manual



Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



Caution:

Information to avoid damaging components or losing data.



Note:

Provides additional information to complete a task easily.

Global Service Contact Information

Headquarters

NEXCOM International Co., Ltd.

9F, No. 920, Zhongzheng Rd.,
Zhonghe District, New Taipei City, 23586,
Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7782
www.nexcom.com

Asia

Taiwan

NexAIoT Headquarters

Industry 4.0 and Cloud Services

13F, No.922, Zhongzheng Rd.,
Zhonghe District, New Taipei City,
23586, Taiwan, R.O.C.
Tel: +886-2-8226-7796
Fax: +886-2-8226-7926
Email: jacobhuang@nexaiot.com
www.nexaiot.com

NexAIoT Co., Ltd.

Taichung Office

16F, No.250, Sec.2, Chongde Rd.,
Beitun District,
Taichung City, 406, Taiwan, R.O.C.
Tel: +886-4-2249-1179
Fax: +886-4-2249-1172
Email: jacobhuang@nexaiot.com
www.nexaiot.com

NexCOBOT Taiwan Co., Ltd.

13F, No.916, Zhongzheng Rd.,
Zhonghe District,
New Taipei City, 23586, Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7926
Email: jennyshern@nexcobot.com
www.nexcobot.com

GreenBase Technology Corp.

13F, No.922, Zhongzheng Rd.,
Zhonghe District,
New Taipei City, 23586, Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7900
Email: vivianlin@nexcom.com.tw
www.nexcom.com.tw

DivioTec Inc.

19F-1A, No.97, Sec.4, ChongXin Rd.,
Sanhong District,
New Taipei City, 24161, Taiwan, R.O.C.
Tel: +886-2-8976-3077
Email: sales@diviotec.com
www.diviotec.com

AIoT Cloud Corp.

13F, No.922, Zhongzheng Rd.,
Zhonghe District,
New Taipei City, 23586, Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7782
Email: alantsai@aiotcloud.net
www.aiotcloud.dev

EMBUX TECHNOLOGY CO., LTD.

13F, No.916, Zhongzheng Rd.,
Zhonghe District,
New Taipei City, 23586, Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7782
Email: info@embux.com
www.embux.com

TMR TECHNOLOGIES CO., LTD.

13F, No.916, Zhongzheng Rd.,
Zhonghe District,
New Taipei City, 23586, Taiwan, R.O.C.
Tel: +886-2-8226-7786
Fax: +886-2-8226-7782
Email: services@tmrtek.com
www.tmrtek.com

China NEXSEC Incorporated

201, Floor 2, Unit 2, Building 15, Yard 3,
Gaolizhang Road, Haidian District,
Beijing, 100094, China
Tel: +86-10-5704-2680
Fax: +86-10-5704-2681
Email: marketing@nexsec.cn
www.nexsec.cn

NEXCOM Shanghai

Room 406-407, Building C, No 154, Lane 953,
Jianchuan Road, Minhang District,
Shanghai, 201108, China
Tel: +86-21-5278-5868
Fax: +86-21-3251-6358
Email: sales@nexcom.cn
www.nexcom.cn

NEXCOM Surveillance Technology Corp.

Floor 8, Building B3, Xiufeng Industrial Zone,
GanKeng Community, Buji Street,
LongGang District,
ShenZhen, 518112, China
Tel: +86-755-8364-7768
Fax: +86-755-8364-7738
Email: steveyang@nexcom.com.tw
www.nexcom.cn

NEXGOL Chongqing

1st Building No.999,
Star Boulevard, Yongchuan Dist,
Chongqing City, 402160, China
Tel: +86-23-4960-9080
Fax: +86-23-4966-5855
Email: sales@nexgol.com.cn
www.nexcobot.cn

Beijing NexGemo Technology Co.,Ltd.

Room 205, No.1, Fazhan Rd.,
Beijing International Information Industry Base,
Changping District,
Beijing, 102206, China
Tel: +86-10-8072-2025
Fax: +86-10-8072-2022
Email: sales@nexgemo.cn
www.nexgemo.com

Japan

NEXCOM Japan

9F, Tamachi Hara Bldg.,
4-11-5, Shiba Minato-ku,
Tokyo, 108-0014, Japan
Tel: +81-3-5419-7830
Fax: +81-3-5419-7832
Email: sales@nexcom-jp.com
www.nexcom-jp.com

America

USA NEXCOM USA

46665 Fremont Blvd.,
Fremont CA 94538, USA
Tel: +1-510-656-2248
Fax: +1-510-656-2158
Email: sales@nexcom.com
www.nexcomusa.com

Package Contents

Before continuing, verify that the XPPC 16-101 package that you received is complete. Your package should have all the items listed in the following table.

| Item | Part Number | Name | Qty |
|------|---------------|------------------------------------|-----|
| 1 | 10W30XPPC34X0 | XPPC16-101-1 A'ssy | 1 |
| 2 | 7400090003X00 | 90W Power Adapter FSP:FSP090-ABAN3 | 1 |

Optional Accessories 1

| Item | Part Number | Name | Description | Qty |
|------|---------------|---------------------|--|-----|
| 1 | 5061711301X00 | Panel Mount Bracket | Panel Mount BKT for XPPC24-100 SIN SUPER CIRCLE 30x20x6mm SECC T=1.6mm | 6 |
| 2 | 6012200030X00 | Antistaic Air Bag | Double Layers 11x(19+24)CM | 1 |

Optional Accessories 2

| Item | Part Number | Name | Description | Qty |
|------|---------------|--------------------|---|-----|
| 1 | 5040430525X00 | Open Frame Bracket | Wall Mount Bracket for XPPC 10-100 VER:A SHYUNG SHUHN 156. 1x40x16. 40mm T=1.00mm SGCC NI | 2 |
| 2 | 50311F0100X00 | Screw | Round Head Screw w/Spring+Flat Washer Long Fei:P3x6L P3x6 iso/SW6x0.5 NI | 4 |
| 3 | 6012200053X00 | Zipper Bag | PE Zipper Bag #3 100x70mm, W/China RoHS Symbol | 1 |
| 4 | 6012200030X00 | Antistaic Air Bag | Double Layers Antistaic Air Bag 11x(19+24)CM | 1 |

Ordering Information

The following below provides ordering information for XPPC 16-101.

XPPC 16-101-1 (P/N: 10W30XPPC34X0)

15.6" FHD LED P-CAP panel PC, Intel® Celeron® J3455 w/ touch IC 81W84

Panel Mount Kit (P/N: 88W30XPPC04X0)

Open Frame Kit (P/N: 88W30XPPC05X0)

CHAPTER 1: PRODUCT INTRODUCTION

XPPC 16-101

Overview



Key Features

- 15.6" TFT FHD 16:9 panel
- 10 points P-Cap multi-touch with slim bezel design
- IP65 protection on the front
- Support: VESA/panel/open frame mount
- Intel® Celeron® processor J3455, 2.30 GHz
- 1 x DDR3L up to 8GB, M.2 M-Key 2242 for storage device
- Support power input 19 VDC

Hardware Specifications

Panel

- LCD size: Innolux G-series 15.6", 16:9
- Resolution: Full HD 1920 x 1080
- Luminance
 - LCD panel: 450cd/m²
 - XPPC PCAP touch: 90% of panel's luminance after optical bonding
- Contrast ratio: 700
- LCD color: 16.7M
- Viewing angle: 89 (U), 89 (D), 89 (L), 89 (R)

Touch Screen

- 10 points multi-touch P-Cap (projected capacitive touch)
- Optical bonding with LCD panel
- Glass surface treatment: AS

System

- CPU: Intel® Celeron® processor J3455, 2M cache, up to 2.30 GHz
- Graphics: Intel® HD Graphics 500

Main Memory

- 1 x 204-pin SO-DIMM socket, support up to DDR3L 1600 MHz, non-ECC, un-buffered memory up to 8GB

Storage Device

- 1 x M.2 M key 2242 SSD (support SATA 3.0)

Expansion

- 1 x mini-PCIe full-size connector with SIM slot (nano size) onboard, supports Wi-Fi/LTE module

Rear I/O

- Power button with LED
- 19V DC-in power Jack lock type
- 2 x RJ45 with LEDs for Gigabit LAN
- 2 x HDMI 1.4, resolution 3840 x 2160 30Hz
- 2 x USB 3.0
- 2 x USB 2.0
- 1 x Line out
- 1 x Serial port
 - COM1: RS232/422/485

Front I/O

- 2 x Antenna holes
- 1 x Serial port
 - COM2: RS232 (RI/5V/12V) (optional)

Mechanical

- Color/material: black silver/metal sheet
- Support
 - VESA mount 100mm x 100mm
 - Panel mount
 - Open frame

Environment

- Vibration
 - IEC 60068-2-64
 - 2Grms @ sine, 5~500Hz, 1hr/axis
 - 2.2Grms @ random condition, 5~500Hz, 0.5hr/axis (non-operating)

- Shock
 - IEC 60068 2-27
 - 20g peak acceleration (11 msec. duration)
- Temperature
 - Operating temperature: 0°C~50°C
 - Storage temperature: -20°C~60°C
- Operating humidity: 10%~90% relative humidity, non-condensing limits to be at 90%

Dimensions

- System: 382.6mm x 251.4mm x 51.79mm
- System weight: 3.0kg
- Package: 476mm x 355mm x 206mm
- Package weight: 4.7kg

Power Supply

- 1 x 90W AC/DC lockable adapter included in accessory
- Input: 100VAC to 240VAC
- Output: DC+19VDC

Certification


- CE (EN55035 + EN55032)
- FCC Class A (EMI part 15B)
- LVD (EN62368-1)

Operating System Support


- Windows 10 64-bit
- Linux 4.1

Knowing Your XPPC 16-101

Rear Top

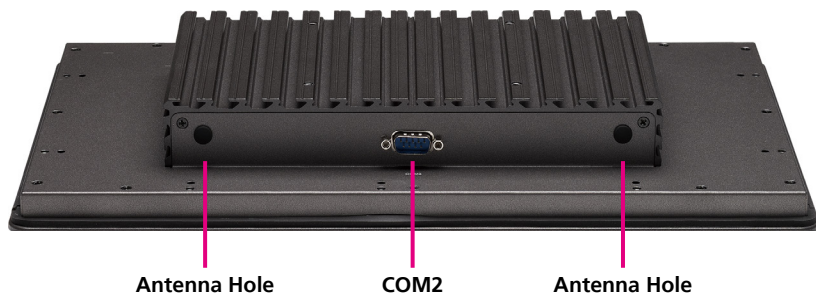

Rear Bottom

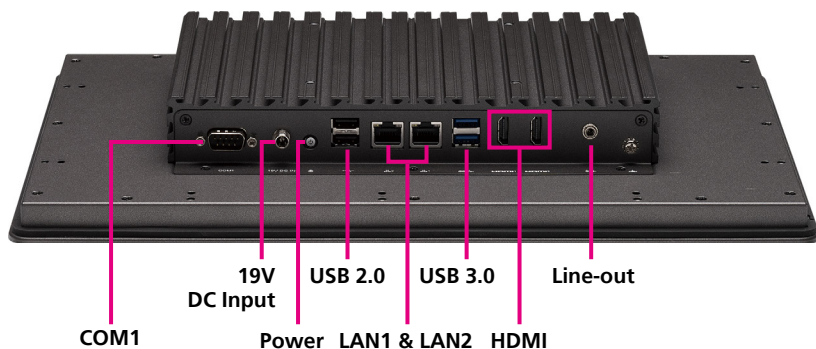

Antenna Holes

The external antenna mounting holes are used to mount and connect optional Wi-Fi antennas.

COM2 (optional)

DB9 port used to connect RS232 (R/5V/12V optional) compatible devices.

COM1

DB9 port used to connect RS232/422/485 compatible devices.

19V DC Input

Used to plug a DC power adapter.

Power Button with LED

Press to power-on or power-off the system with LED indicating power status.

USB 2.0

Used to connect USB 2.0 devices.

LAN1 & LAN2

Used to connect the system to a local area network.

USB 3.0

Used to connect USB 3.0/2.0 devices.


HDMI

Used to connect an HDMI interface monitor.

Line-out

Used to connect a headphone or a speaker.

Mechanical Dimensions

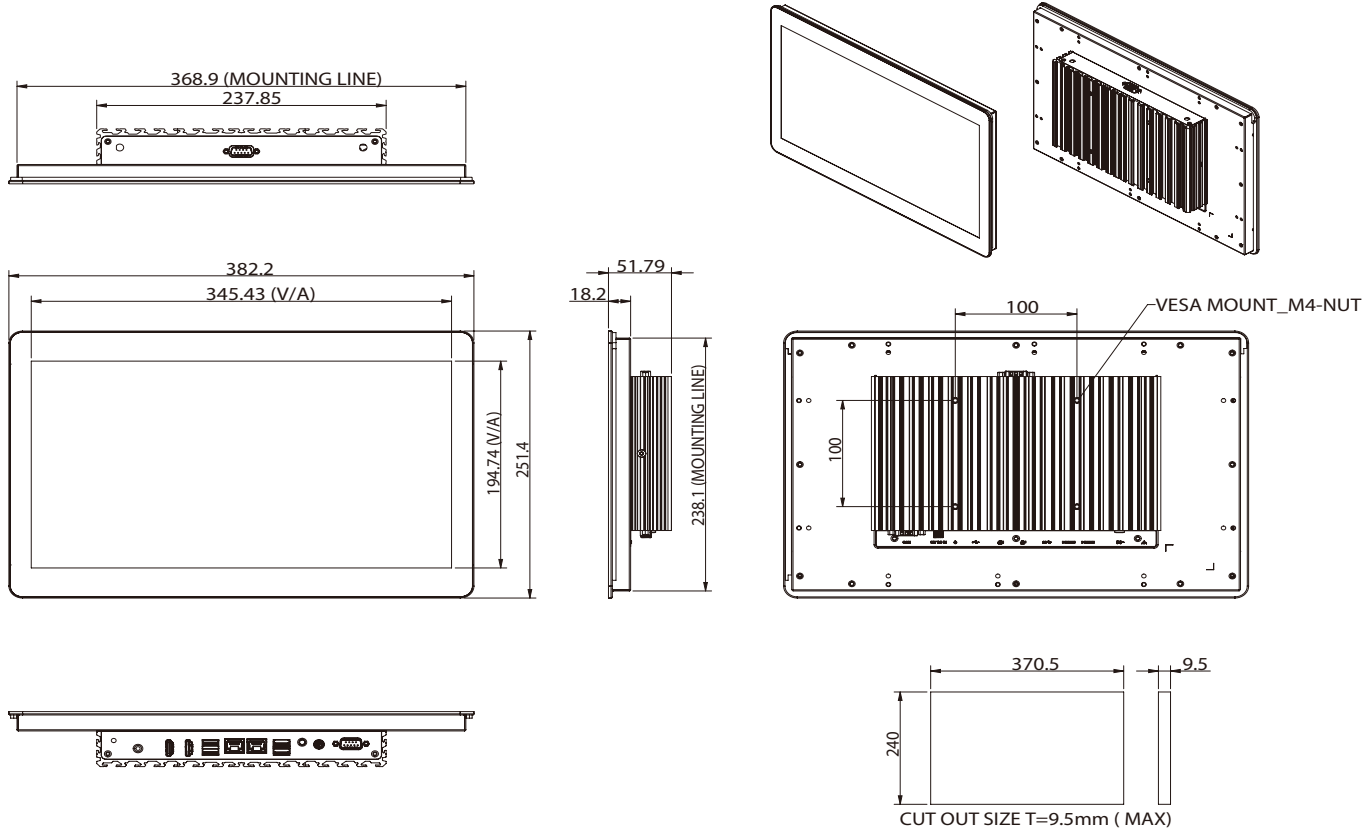

CHAPTER 2: JUMPERS AND CONNECTORS

This chapter describes how to set the jumpers and connectors on the XPPC 16-101 motherboard.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
 - A Philips screwdriver
 - A flat-tipped screwdriver
 - A set of jewelers screwdrivers
 - A grounding strap
 - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic components. Humid environments tend to have less static electricity than

dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:


- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.

Jumper Settings


A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is short. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is open.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)

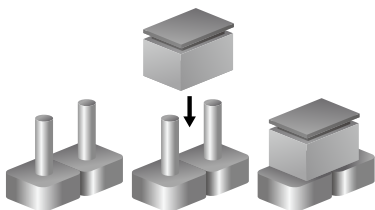


Three-Pin Jumpers: Pins 1 and 2 are Short

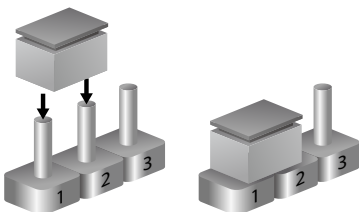


Locations of the Jumpers and Connectors for XPPC 16-101

The figure below is the top and bottom view of the mainboard used in XPPC 16-101. It shows the locations of the jumpers and connectors.

Top View

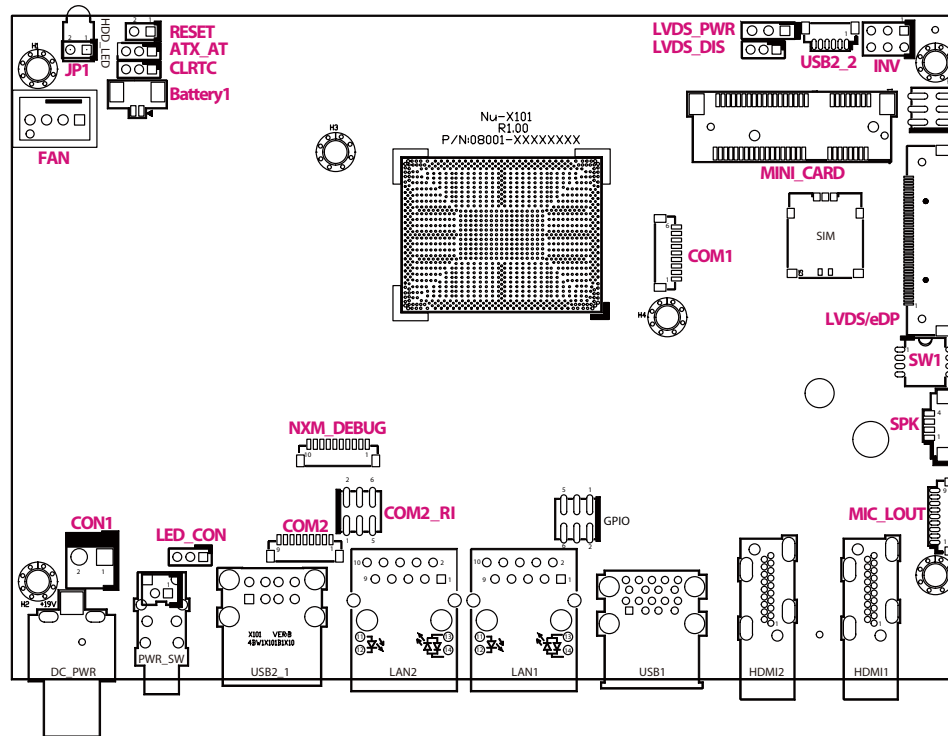

Bottom View

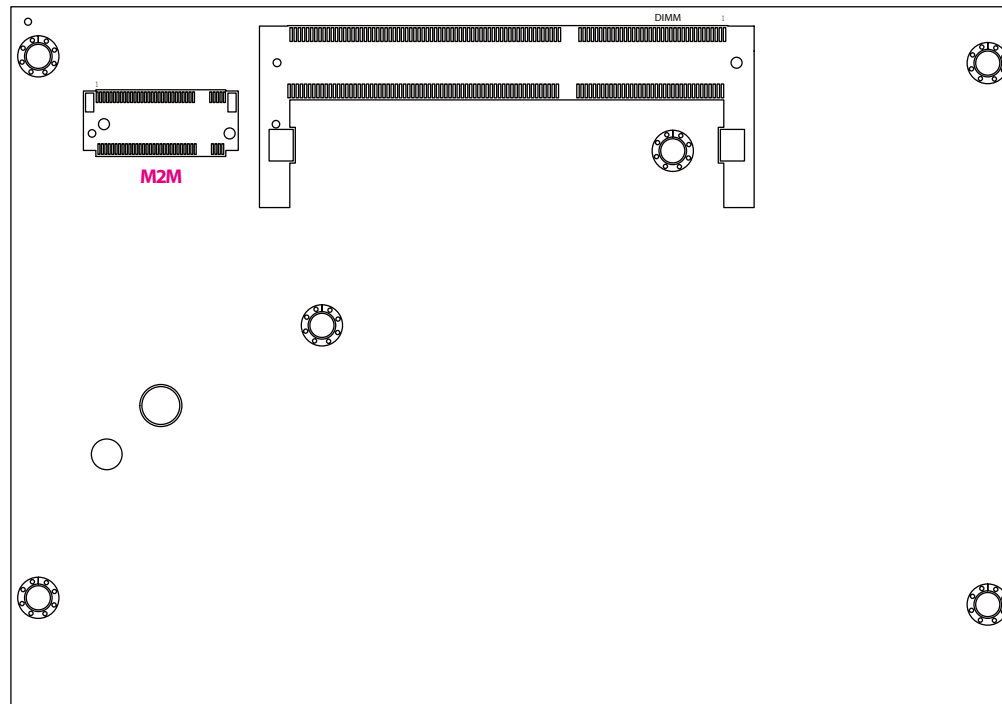


Jumpers & DIP Switches

AT/ATX Mode Select

Connector type: 1x3 3-pin header, 2.0mm pitch

 Connector location: ATX_AT

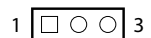


| Pin | Settings |
|--------|----------|
| 1-2 On | ATX Mode |
| 2-3 On | AT Mode |

1-2 On: default

Clear CMOS

Connector type: 1x3 3-pin header, 2.0mm pitch

 Connector location: CLRTC

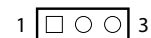


| Pin | Settings |
|--------|------------|
| 1-2 On | Normal |
| 2-3 On | Clear CMOS |

1-2 On: default

LVDS Panel Voltage Select

Connector type: 1x3 3-pin header, 2.54mm pitch

 Connector location: LVDS_PWR

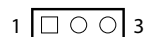

| Pin | Settings |
|--------|----------|
| 1-2 On | 3.3V |
| 2-3 On | 5V |

1-2 On: default

LVDS Enable Select

Connector type: 1x3 3-pin header, 2.0mm pitch

Connector location: LVDS_DIS




| Pin | Settings |
|--------|----------|
| 1-2 On | Enable |
| 2-3 On | Disable |

1-2 On: default

LVDS Resolution Select

Connector type: 4-pin DIP switch

Connector location: SW1

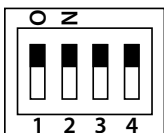

| SW [3:0] | SW1 [3] | SW1 [2] | SW1 [1] | SW1 [0] | Function |
|----------|---------|---------|---------|---------|-------------------------------|
| 0000 | ON | ON | ON | ON | 800 x 600 6-bit Single Port |
| 0001 | ON | ON | ON | OFF | 1024 x 768 6-bit Single Port |
| 0010 | ON | ON | OFF | ON | 1024 x 768 8-bit Single Port |
| 0011 | ON | ON | OFF | OFF | 1280 x 1024 6-bit Single Port |
| 0100 | ON | OFF | ON | ON | 1280 x 800 6-bit Single Port |
| 0101 | ON | OFF | ON | OFF | 1280 x 800 8-bit Single Port |
| 0110 | ON | OFF | OFF | ON | 1280 x 1024 8-bit Dual Port |
| 0111 | ON | OFF | OFF | OFF | 1366 x 768 6-bit Single Port |
| 1000 | OFF | ON | ON | ON | 1366 x 768 8-bit Single Port |
| 1001 | OFF | ON | ON | OFF | 1440 x 900 8-bit Dual Port |
| 1010 | OFF | ON | OFF | ON | 1400 x 1050 8-bit Dual Port |
| 1011 | OFF | ON | OFF | OFF | 1600 x 900 8-bit Dual Port |
| 1100 | OFF | OFF | ON | ON | 1680 x 1050 8-bit Dual Port |
| 1101 | OFF | OFF | ON | OFF | 1600 x 1200 8-bit Dual Port |
| 1110 | OFF | OFF | OFF | ON | 1920 x 1080 8-bit Dual Port |
| 1111 | OFF | OFF | OFF | OFF | 1920 x 1200 8-bit Dual Port |

 
Connector Pin Definitions

External Connector

COM1 DB9 Male Connector

Connector type: DB-9 port, 9-pin D-Sub

Connector location: COM1

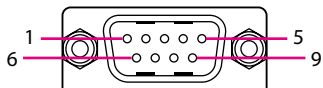


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | DCD | 2 | RXD |
| 3 | TXD | 4 | DTR |
| 5 | GND | 6 | DSR |
| 7 | RTS | 8 | CTS |
| 9 | RI | | |

COM2 DB9 Male Connector

Connector type: DB-9 port, 9-pin D-Sub

 Connector location: COM2

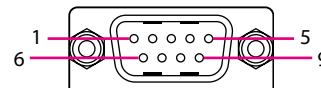

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | DCD | 2 | RXD |
| 3 | TXD | 4 | DTR |
| 5 | GND | 6 | DSR |
| 7 | RTS | 8 | CTS |
| 9 | RI | | |

 
Connector Pin Definitions

Internal Connectors

LVDS Inverter Connector

Connector type: 2x3 6-pin header JST, 2.54mm pitch

Connector location: INV

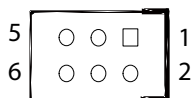

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | GND |
| 3 | 12V | 4 | 12V |
| 5 | INV_ENABKL | 6 | BKLTCTRL_V |

System Reset Header

Connector type: 1x2 2-pin header, 2.54mm pitch

Connector location: RESET



| Pin | Definition |
|-----|------------|
| 1 | RESET# |
| 2 | GND |

Power LED Connector


Connector type: 1x3 3-pin header, 2.0mm pitch
Connector location: LED_CON



| Pin | Definition |
|-----|------------|
| 1 | POWER_LED |
| 2 | STBY_LED_8 |
| 3 | GND |

BIOS update connector

Connector type: 2x4 8-pin header, 1.27mm pitch
Connector location: SPI

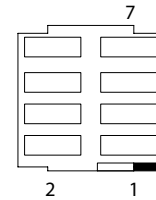


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | +1.8V_SPI | 2 | SPI_CS0#_F |
| 3 | SPI_HOLD# | 4 | SPI_SO_F |
| 5 | SPI_CLK_F | 6 | SPI_D2_WP# |
| 7 | SPI_SI_F | 8 | GND |

USB2.0 Connector

Connector type: 1x6 6-pin header

Connector location: USB2_2

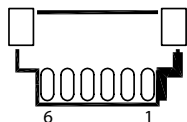


| Pin | Definition | Pin | Definition |
|-----|------------|-----|--------------|
| 1 | GND | 2 | S_USB2DN5 |
| 3 | S_USB2DP5 | 4 | S_USB2DN4 |
| 5 | S_USB2DP4 | 6 | +5V_USB2_P45 |

SIM Card Connector

Connector type: 2x3 6-pin header, 2.0mm pitch

Connector location: SIM1

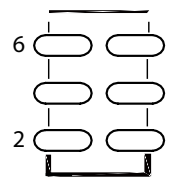


| Pin | Definition | Pin | Definition |
|-----|------------|-----|-------------|
| 1 | UIM_DATA_R | 2 | UIM_CLK_R |
| 3 | UIM_VPP_R | 4 | UIM_RESET_R |
| 5 | GND | 6 | UIM_PWR_R |

GPIO Connector

Connector type: 2x3 6-pin header, 2.0mm pitch

Connector location: GPIO

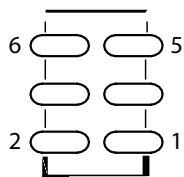


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GPIO_PWR | 2 | GPO_GND |
| 3 | GPO0_OUT | 4 | GPIO_IN |
| 5 | GPO1_OUT | 6 | GPI1_IN |

Audio MIC Line Out Connector

Connector type: 1x9 9-pin header, 1.0mm pitch

Connector location: MIC_LOUT

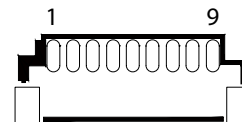


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | A_LOUT_R | 2 | LINEOUT_JD |
| 3 | NC | 4 | A_LOUT_L |
| 5 | GND | 6 | A_MIC1_R |
| 7 | MIC_JD | 8 | A_MIC1_L |
| 9 | GND | | |

Speaker Connector

Connector type: 1x4 4-pin header, 1.25mm pitch

 Connector location: SPK

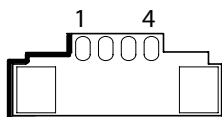


| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | LOUTP_40 | 2 | LOUTN_40 |
| 3 | ROUTP_40 | 4 | ROUTN_40 |

FAN Connector

Connector type: 1x4 4-pin header

 Connector location: FAN

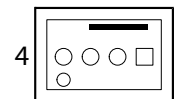

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | 12V |
| 3 | FANIN | 4 | FANOUT |

Debug Port/LPC Bus Connector

Connector type: 1x10 10-pin header, 1.0mm pitch

Connector location: NXM_DEBUG




| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | +3V | 2 | SERIRQ |
| 3 | LAD0 | 4 | LAD1 |
| 5 | LAD2 | 6 | LAD3 |
| 7 | LFRAME# | 8 | 25MHZ |
| 9 | PLTRST# | 10 | GND |

COMPORT Ring Connector

Connector type: 2x3 6-pin, 2.00mm pitch


Connector location: COM2_RI

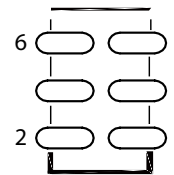

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | 12V | 2 | RI_COMPORT |
| 3 | 5V | 4 | RI_COMPORT |
| 5 | RI | 6 | RI_COMPORT |

Battery Connector

 
Connector type: 1x2 2-pin header, 1.25mm pitch
Connector location: BATTERY1

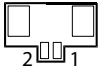

| Pin | Definition |
|-----|------------|
| 1 | BAT |
| 2 | GND |

DC Power Input

 Connector type: 1x2 2-pin header, 3.96mm pitch
Connector location: CON1

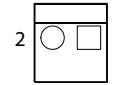


| Pin | Definition |
|-----|------------|
| 1 | GND |
| 2 | +DC_IN |

LVDS Panel Connector

Connector type: 1x40 40-pin header, 0.5mm pitch

 
Connector location: LVDS

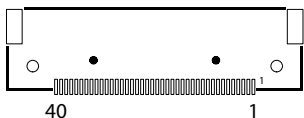

| Pin | Definition | Pin | Definition |
|-----|-----------------------|-----|-----------------------|
| 1 | LVDS0_D3+ | 2 | LVDS0_D3- |
| 3 | LVDS0_D2+ | 4 | LVDS0_D2- |
| 5 | LVDS0_D1+ | 6 | LVDS0_D1- |
| 7 | LVDS0_D0+ | 8 | LVDS0_D0- |
| 9 | LVDS1_D3+ | 10 | LVDS1_D3- |
| 11 | LVDS1_D2+ | 12 | LVDS1_D2- |
| 13 | LVDS1_D1+ | 14 | LVDS1_D1- |
| 15 | LVDS1_D0+ | 16 | LVDS1_D0- |
| 17 | GND | 18 | +V_PANEL (3.3V or 5V) |
| 19 | +V_PANEL (3.3V or 5V) | 20 | +V_PANEL (3.3V or 5V) |
| 21 | GND | 22 | +V_PANEL (3.3V or 5V) |
| 23 | GND | 24 | GND |
| 25 | GND | 26 | LVDS0_CLK+ |
| 27 | LVDS0_CLK- | 28 | GND |
| 29 | GND | 30 | GND |
| 31 | N/A | 32 | Backlight Enable |
| 33 | Backlight Control | 34 | LVDS1_CLK+ |
| 35 | LVDS1_CLK- | 36 | +12V |
| 37 | +12V | 38 | +12V |
| 39 | +12V | 40 | N/A |

eDP Panel Connector

Connector location: eDP

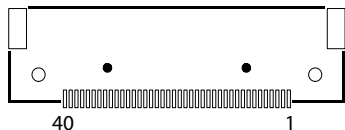


| Pin | Definition | Pin | Definition |
|-----|-----------------------|-----|-----------------------|
| 1 | EDP_3N | 2 | EDP_3P |
| 3 | GND | 4 | EDP_2N |
| 5 | EDP_2P | 6 | GND |
| 7 | EDP_1N | 8 | EDP_1P |
| 9 | GND | 10 | EDP_ON |
| 11 | EDP_OP | 12 | GND |
| 13 | N/A | 14 | N/A |
| 15 | N/A | 16 | N/A |
| 17 | GND | 18 | +V_PANEL (3.3V or 5V) |
| 19 | +V_PANEL (3.3V or 5V) | 20 | +V_PANEL (3.3V or 5V) |
| 21 | GND | 22 | N/A |
| 23 | GND | 24 | GND |
| 25 | GND | 26 | EDP_AUXP |

| Pin | Definition | Pin | Definition |
|-----|----------------|-----|-------------------|
| 27 | EDP_AUXN | 28 | GND |
| 29 | GND | 30 | GND |
| 31 | EDP_HPD | 32 | Back Light Enable |
| 33 | Back Light PWM | 34 | N/A |
| 35 | N/A | 36 | +12V |
| 37 | +12V | 38 | +12V |
| 39 | +12V | 40 | N/A |

Mini-PCIe Connector

Connector location: MINI_CARD

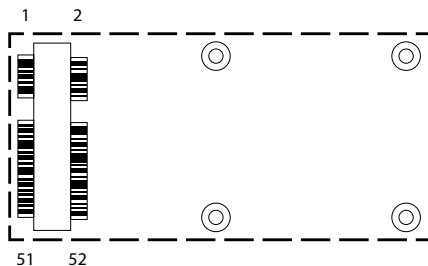


| Pin | Definition | Pin | Definition |
|-----|------------|-----|---------------|
| 1 | WAKE# | 2 | +3VSB |
| 3 | NC | 4 | GND |
| 5 | NC | 6 | +1.5V |
| 7 | NC | 8 | SIM_PWR |
| 9 | GND | 10 | SIM_DATA |
| 11 | REFCLK- | 12 | SIM_CLK |
| 13 | REFCLK+ | 14 | SIM_RESET |
| 15 | GND | 16 | SIM_VPP |
| 17 | NC | 18 | GND |
| 19 | NC | 20 | WLAN_DISABLE# |
| 21 | GND | 22 | RESET# |
| 23 | PERn0 | 24 | +3VSB |
| 25 | PERp0 | 26 | GND |

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 27 | GND | 28 | +1.5V |
| 29 | GND | 30 | SMB_CLK |
| 31 | PETn0 | 32 | SMB_DATA |
| 33 | PETp0 | 34 | GND |
| 35 | GND | 36 | USB_D- |
| 37 | GND | 38 | USB_D+ |
| 39 | +3VSB | 40 | GND |
| 41 | +3VSB | 42 | NC |
| 43 | GND | 44 | NC |
| 45 | NC | 46 | NC |
| 47 | NC | 48 | +1.5V |
| 49 | NC | 50 | GND |
| 51 | NC | 52 | +3VSB |

M.2 Connector (M-Key)


Connector location: M2M

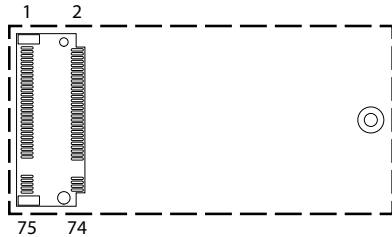

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 1 | GND | 2 | +3VSB |
| 3 | GND | 4 | +3VSB |
| 5 | NC | 6 | NC |
| 7 | NC | 8 | NC |
| 9 | GND | 10 | M2M_LED# |
| 11 | NC | 12 | +3VSB |
| 13 | NC | 14 | +3VSB |
| 15 | GND | 16 | +3VSB |
| 17 | NC | 18 | +3VSB |
| 19 | NC | 20 | NC |
| 21 | GND | 22 | NC |
| 23 | NC | 24 | NC |
| 25 | NC | 26 | NC |
| 27 | GND | 28 | NC |
| 29 | NC | 30 | NC |
| 31 | NC | 32 | NC |
| 33 | GND | 34 | NC |
| 35 | NC | 36 | NC |
| 37 | NC | 38 | DEVSLP |

| Pin | Definition | Pin | Definition |
|-----|------------|-----|------------|
| 39 | GND | 40 | NC |
| 41 | SATA_RXP | 42 | NC |
| 43 | SATA_RXN | 44 | NC |
| 45 | GND | 46 | NC |
| 47 | SATA_TXN | 48 | NC |
| 49 | SATA_TXP | 50 | RESET# |
| 51 | GND | 52 | NC |
| 53 | NC | 54 | NC |
| 55 | NC | 56 | NC |
| 57 | GND | 58 | NC |
| 67 | NC | 68 | NC |
| 69 | NC | 70 | +3VSB |
| 71 | GND | 72 | +3VSB |
| 73 | GND | 74 | +3VSB |
| 75 | GND | | |


Block Diagram

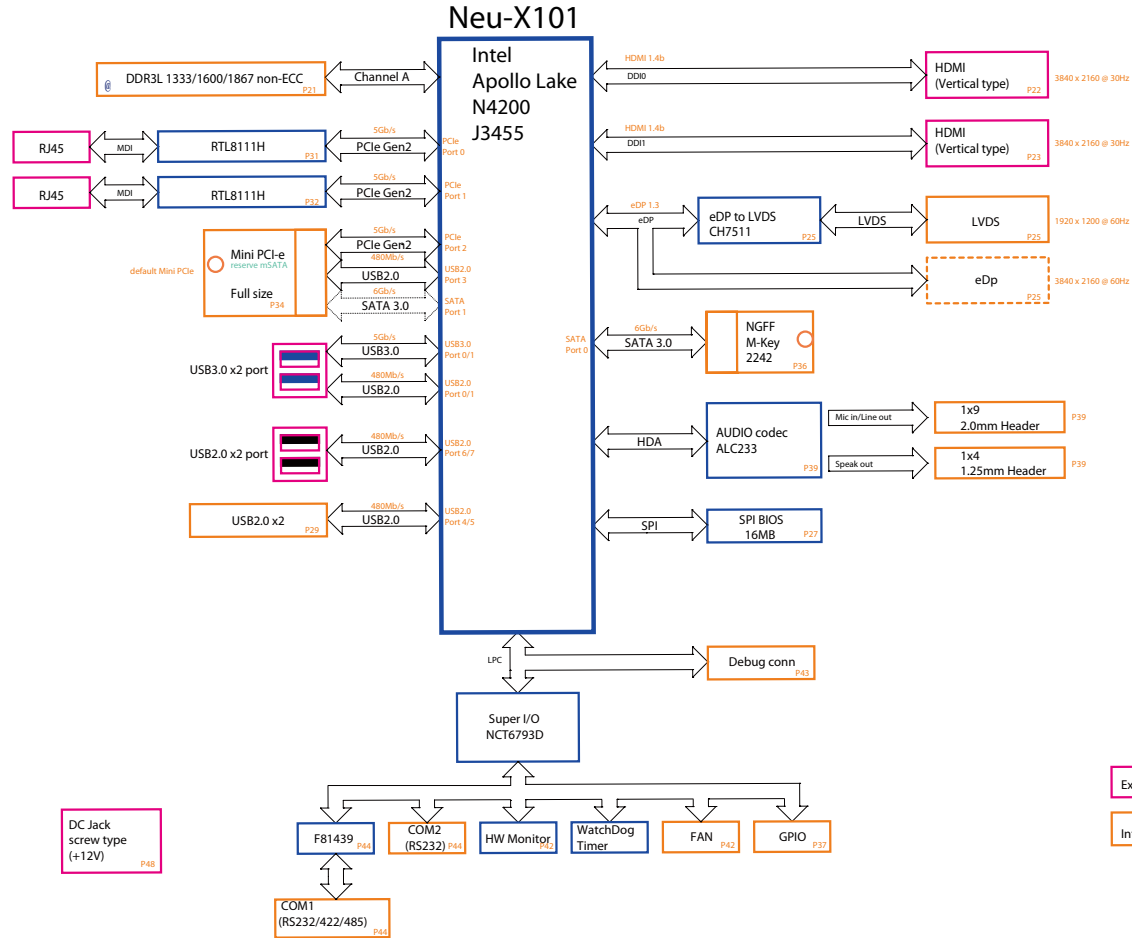

CHAPTER 3: SYSTEM SETUP


Removing the Top Cover from the Chassis

1. Remove the 7 screws from the top cover, then lift up the system chassis box to access the mainboard.

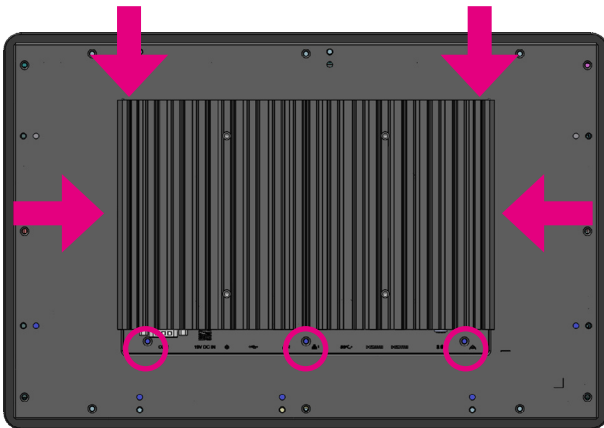

Installing DDR or SSD module


1. With the top cover removed, locate and install the DDR or SSD module.

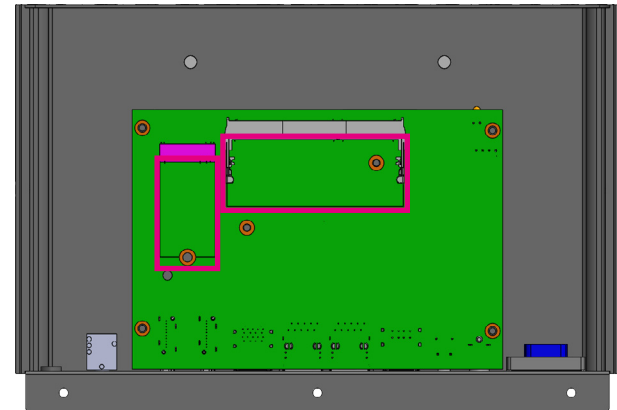


Prior to removing the top cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.

Installing Wi-Fi module

1. Remove the top cover and loosen the screws.

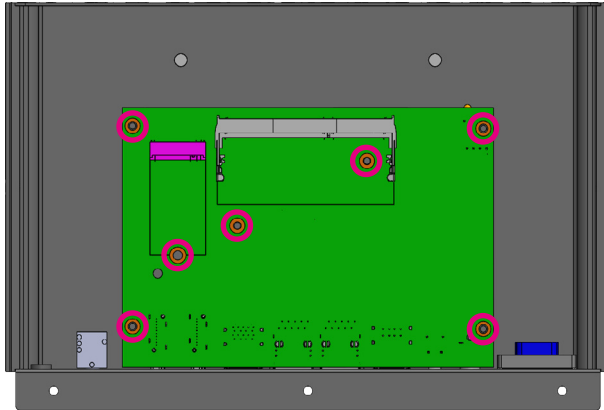


2. Locate the mini-PCIe connector on the other side of the motherboard and install the Wi-Fi module.

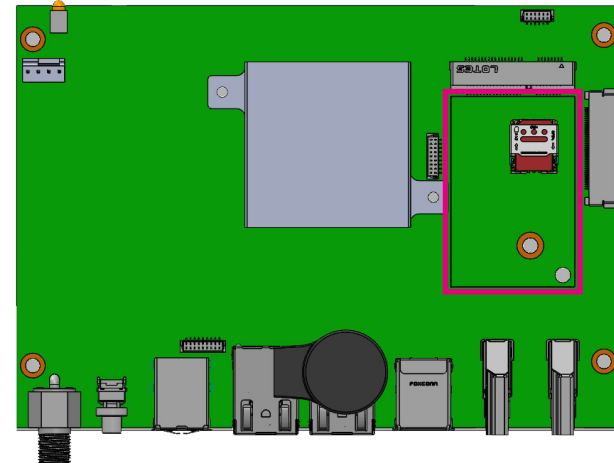

Installing VESA Mount Kit



1. Align the mounting holes on the VESA mount bracket to the VESA mounting holes on the back of the panel PC, then secure the VESA mount bracket with screws.

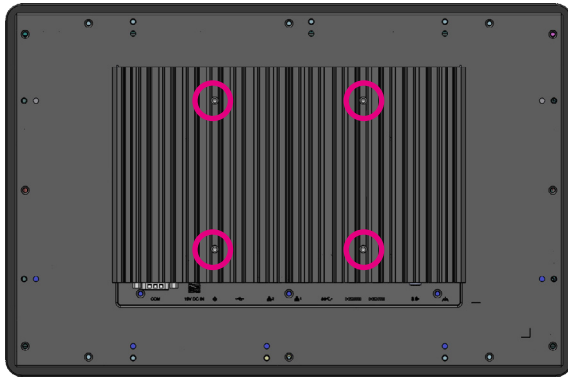

Recommended screws for the VESA mount kit:
4 * M4x8 screws.


Installing Open Frame Kit

1. Turn to the rear side of the panel PC and align the mounting holes on the open frame bracket to the open frame mounting holes on the panel PC, then secure the open frame bracket with screws.

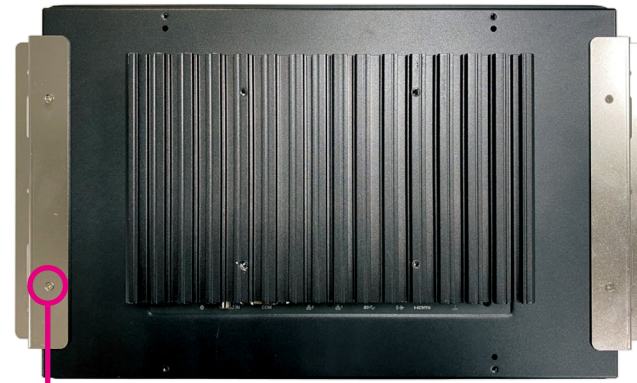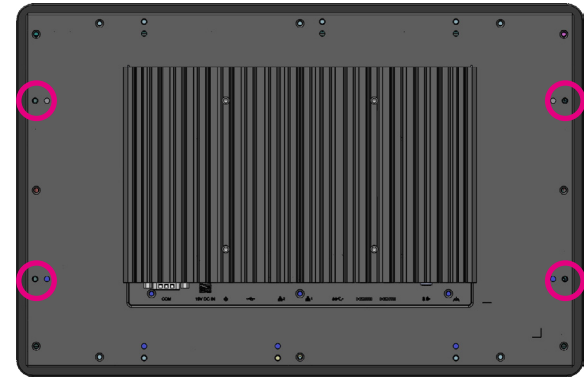

4 * Screws (P3x6)


System Dimensions with Open Frame Kit

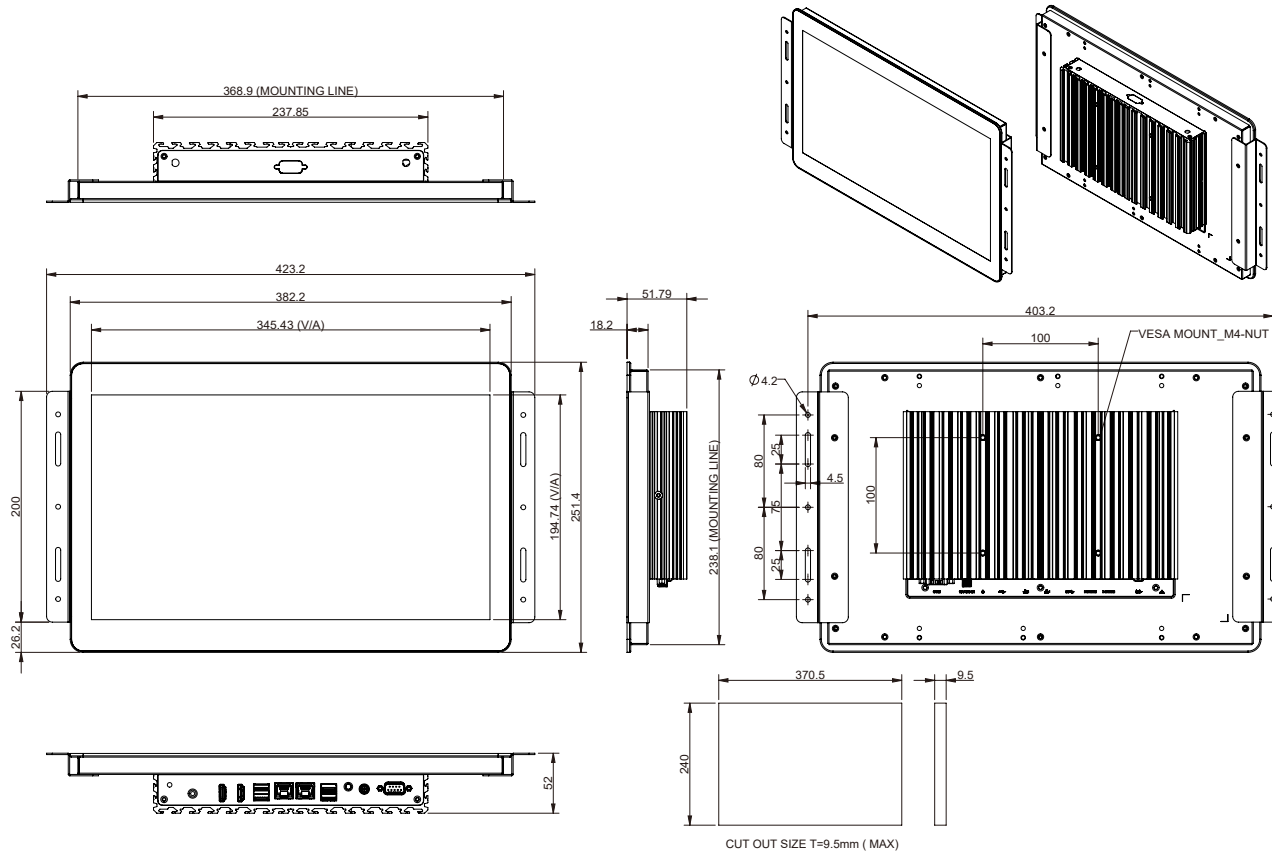

Panel Mounting

1. Select a place on the panel where you will mount the panel PC.
2. Cut out a shape on the panel that corresponds to the panel PC's rear dimensions.



The thickness of the panel (e.g. steel board, plank, acrylic board, wall, etc.) where you will mount the panel PC must not exceed 9.5mm. If the distance between the front bezel and panel mount hole is too wide, it will not fit the panel mount kit.

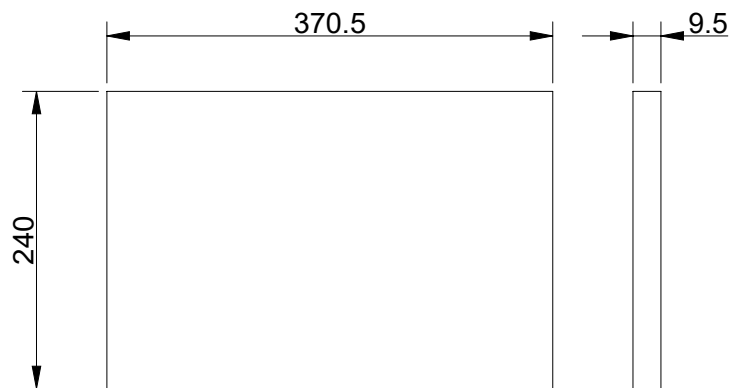


CUT OUT SIZE T=9.5mm (MAX)

3. Slide the panel PC through the hole until it is properly fitted against the panel.

4. Position the mounting clamps along the rear edges of the panel PC. The first and second clamps must be positioned and secured diagonally prior to mounting the rest of the clamps.

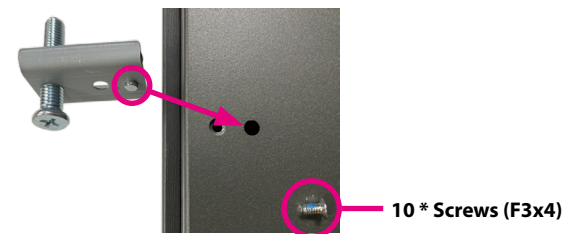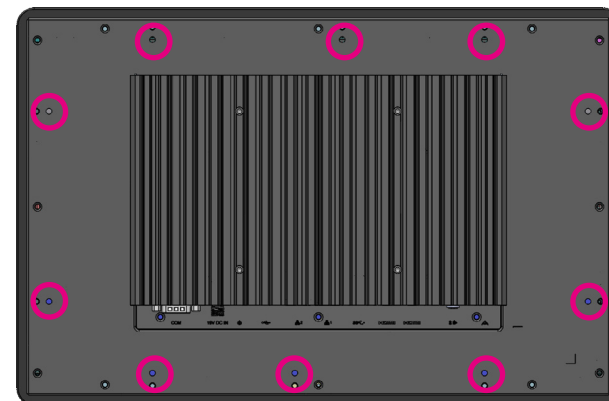

5. Tighten the clamp's screw until it touches the panel.

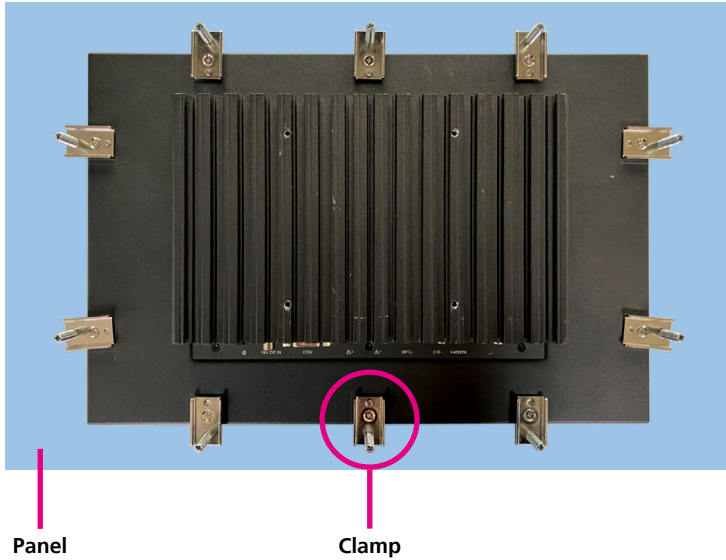

Do not overtighten the screws to prevent damaging the Panel PC.

CHAPTER 4: BIOS SETUP

This chapter describes how to use the BIOS setup program for XPPC 16-101. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM website at www.nexcom.com.tw.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

- This program should be executed under the following conditions:
 - When changing the system configuration
 - When a configuration error is detected by the system and you are prompted to make changes to the setup program
 - When resetting the system clock
 - When redefining the communication ports to prevent any conflicts
 - When making changes to the Power Management configuration
 - When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.

Default Configuration


Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering Setup






 





When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing allows you to enter Setup.

Press the  key to enter Setup:


Legends

| Key | Function |
|---|--|
|  | Moves the highlight left or right to select a menu. |
|  | Moves the highlight up or down between sub-menus or fields. |
|  | Exits the BIOS Setup Utility. |
|  | Scrolls forward through the values or options of the highlighted field. |
|  | Scrolls backward through the values or options of the highlighted field. |
|  | Selects a field. |
|  | Displays General Help. |
|  | Load previous values. |
|  | Load optimized default values. |
|  | Saves and exits the Setup program. |
|  | Press <Enter> to enter the highlighted sub-menu |


Scroll Bar

When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

 Submenu


When “▶” appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press  .

 BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from several setup functions and one exit. Use arrow keys to select among the items and press  to accept or enter the submenu.

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

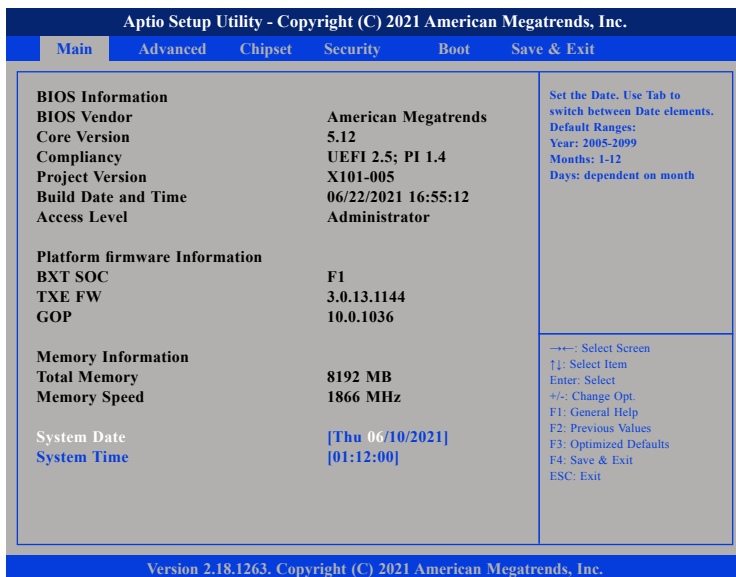

| Aptio Setup Utility - Copyright (C) 2021 American Megatrends, Inc. | | | | | |
|--|---------------------|---------------------|--------------------------|--|-------------|
| Main | Advanced | Chipset | Security | Boot | Save & Exit |
| BIOS Information | | American Megatrends | | Set the Date. Use Tab to switch between Date elements. | |
| BIOS Vendor | 5.12 | | Default Ranges: | | |
| Core Version | UEFI 2.5; PI 1.4 | | Year: 2005-2099 | | |
| Compliance | X101-005 | | Months: 1-12 | | |
| Project Version | 06/22/2021 16:55:12 | | Days: dependent on month | | |
| Build Date and Time | Administrator | | | | |
| Access Level | | | | | |
| Platform firmware Information | | F1 | | ←→: Select Screen | |
| BXT SOC | 3.0.13.1144 | | ↑↓: Select Item | | |
| TXE FW | 10.0.1036 | | Enter: Select | | |
| GOP | | | +/-: Change Opt. | | |
| Memory Information | | 8192 MB | | F1: General Help | |
| Total Memory | 1866 MHz | | F2: Previous Values | | |
| Memory Speed | | | F3: Optimized Defaults | | |
| System Date | [Thu 06/10/2021] | | F4: Save & Exit | | |
| System Time | [01:12:00] | | ESC: Exit | | |

Version 2.18.1263. Copyright (C) 2021 American Megatrends, Inc.

System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Monday to Sunday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 2005 to 2099.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Setting incorrect field values may cause the system to malfunction.




Restore AC Power Loss

Configures the power state when power is re-applied after a power failure.


Realtek PCIe GbE Family Controller

Displays the driver information of the Ethernet controller 1.

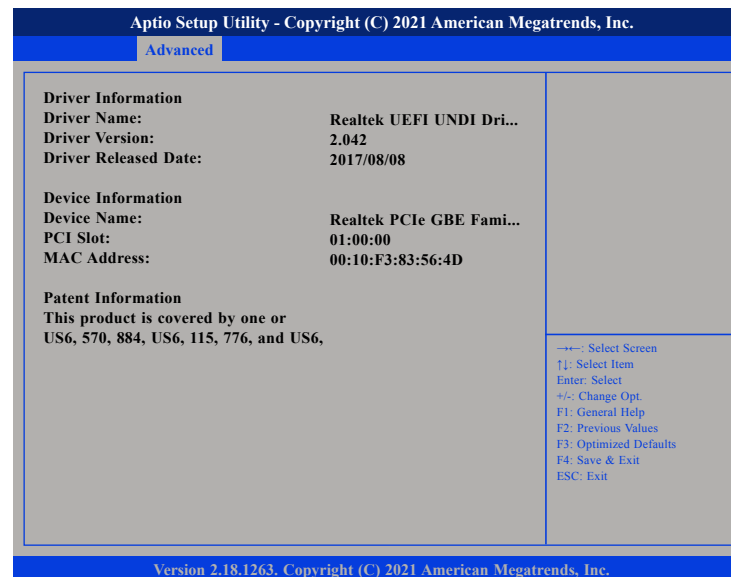


Realtek PCIe GbE Family Controller

Displays the driver information of the Ethernet controller 2.

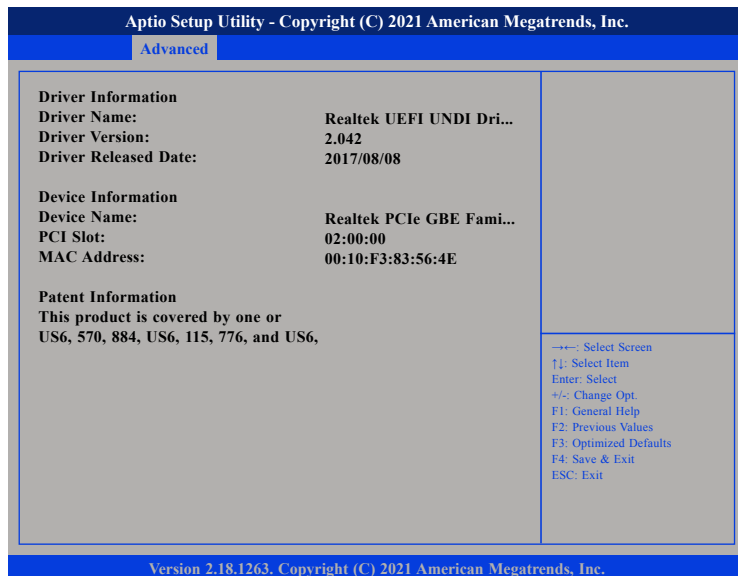

ACPI Settings

This section is used to configure ACPI settings.

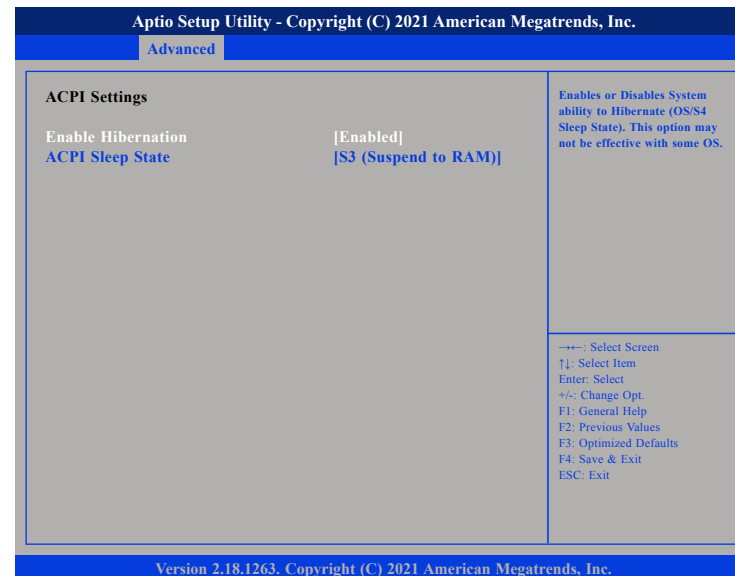

Enable Hibernation

Enables or disables system ability to hibernate (OS/S4 Sleep State). This option may not be effective with some operating systems.

ACPI Sleep State

Select the highest ACPI sleep state the system will enter when the suspend button is pressed. The options are Suspend Disabled and S3 (Suspend to RAM).

NCT6793D Super IO Configuration

This section is used to configure the serial ports.



Super IO Chip

Displays the Super I/O chip used on the board.

Serial Port 1 Configuration



Serial Port

Enables or disables the serial COM port.

Device Settings

Displays the IO address and IRQ of the serial COM port.

Onboard Serial Port Mode

Select this to change the serial port mode to RS232, RS422, RS485 No Terminator or RS485 With Terminator.

Serial Port 2 Configuration



Serial Port


Enables or disables the serial COM port.

Device Settings

Displays the IO address and IRQ of the serial COM port.

Hardware Monitor

This section is used to monitor hardware status such as temperature, fan speed and voltages.

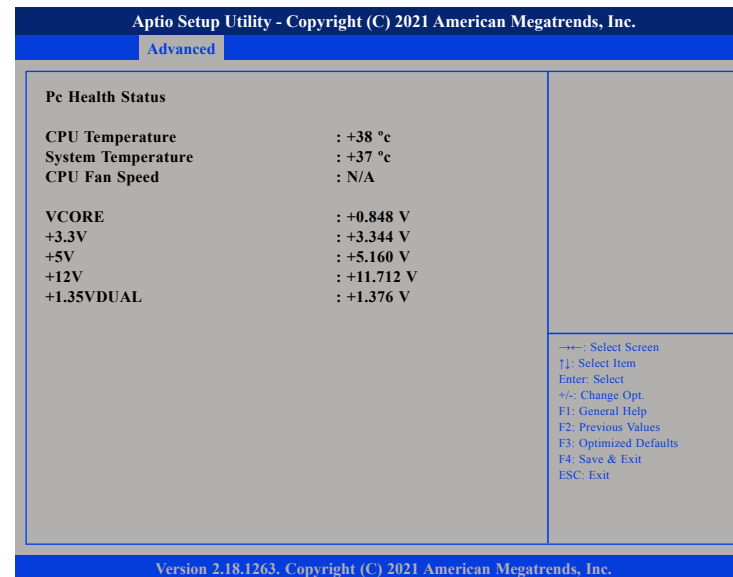

CPU Temperature

Detects and displays the current CPU temperature.

System Temperature

Detects and displays the current system temperature.

CPU Fan Speed


Detects and displays the current CPU fan speed.

VCORE to 1.35VDUAL

Detects and displays the output voltages.

S5 RTC Wake Settings

This section is used to configure the system to wake from S5 using RTC alarm.

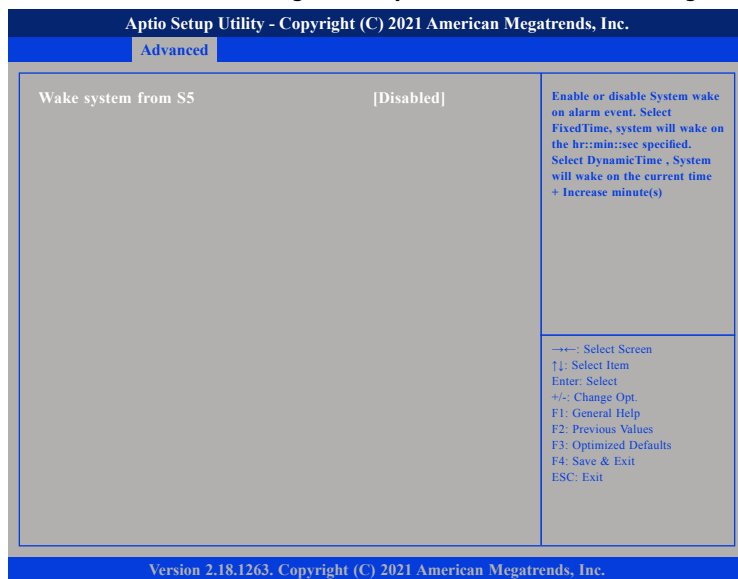


Wake system from S5

Enables or disables system wake on alarm event. When FixedTime is selected, system will wake on the hr::min::sec specified. When DynamicTime is selected, system will wake on the current time + Increase minute(s).

CPU Configuration

This section is used to view CPU status and configure CPU parameters.

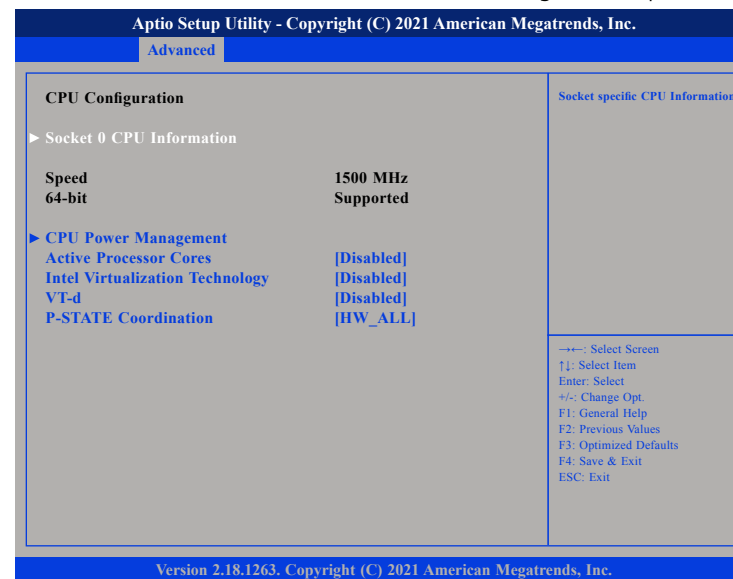

Active Processor Cores

Select the number of cores to enable in each processor package.

Intel® Virtualization Technology

When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

VT-d

Enables or disables VT-d function on MCH.

P-State Coordination

Change P-STATE Coordination type (HW_ALL, SW_ALL, SW_ANY)

Socket 0 CPU Information

Display information on the CPU installed on socket 0.

Aptio Setup Utility - Copyright (C) 2021 American Megatrends, Inc.

Advanced

| Socket 0 CPU Information | |
|---|---------------|
| Intel(R) Celeron(R) CPU J3455 @ 1.50GHz | |
| CPU Signature | 506CA |
| Microcode Patch | 1A |
| Max CPU Speed | 1500 MHz |
| Min CPU Speed | 800 MHz |
| Processor Cores | 4 |
| Intel HT Technology | Not Supported |
| Intel VT-x Technology | Supported |
| L1 Data Cache | 24 kB x 4 |
| L1 Code Cache | 32 kB x 4 |
| L2 Cache | 1024 kB x 2 |
| L3 Cache | Not Present |

→←: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.18.1263. Copyright (C) 2021 American Megatrends, Inc.

CPU Power Management

Aptio Setup Utility - Copyright (C) 2021 American Megatrends, Inc.

Advanced

| CPU Power Management Configuration | |
|------------------------------------|------------|
| EIST | [Disabled] |
| Turbo Mode | [Enabled] |
| Enable/Disable Intel SpeedStep | |

→←: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.18.1263. Copyright (C) 2021 American Megatrends, Inc.

EIST

Enables or disables Intel® SpeedStep.

Network Stack Configuration

This section is used to configure the network stack settings.



Ipv6 PXE Support

Enables or disables IPv6 PXE support. If disabled, the IPv6 boot option will not be created.

Ipv6 HTTP Support

Enables or disables IPv6 HTTP support.

PXE boot wait time

Configures the wait time to press the ESC key to abort the PXE boot.

Media detect count

Configures the number of times the media will be checked.

Network Stack

Enables or disables UEFI network stack.

Ipv4 PXE Support

Enables or disables IPv4 PXE support. If disabled, the IPv4 boot option will not be created.

Ipv4 HTTP Support

Enables or disables IPv4 HTTP support.

Trusted Computing

This section is used to configure Trusted Platform Module (TPM) settings.




Security Device Support

Enables or disables BIOS support for security device. O.S will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

USB Configuration

This section is used to configure the USB.

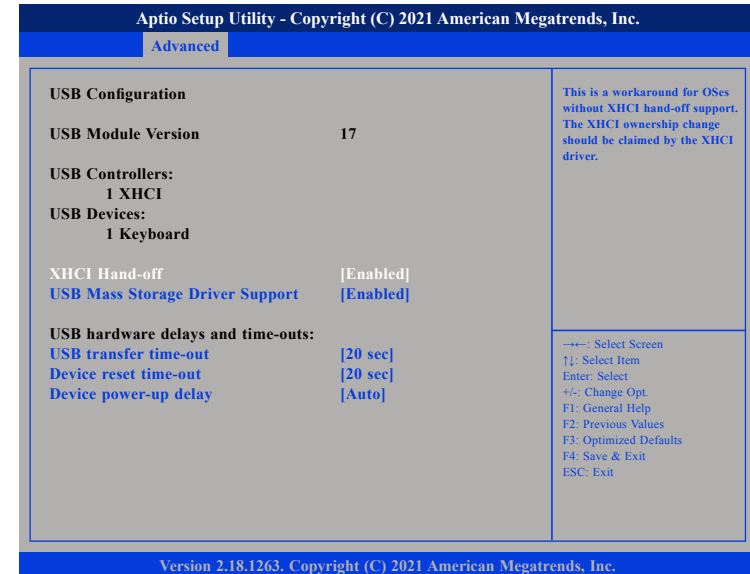

XHCI Hand-off

This is a workaround for OSs that does not support XHCI hand-off. The XHCI ownership change should be claimed by the XHCI driver.

USB Mass Storage Driver Support

Enables or disables USB mass storage driver support.

USB transfer time-out

The time-out value for control, bulk, and Interrupt transfers.



Device reset time-out

Selects the USB mass storage device's start unit command timeout.

Device power-up delay


Maximum time the value will take before it properly reports itself to the Host Controller. "Auto" uses default value: for a Root port it is 100 ms, for a Hub port the delay is taken from Hub descriptor.

Chipset

This section is used to configure the system based on the specific features of the chipset.



South Bridge

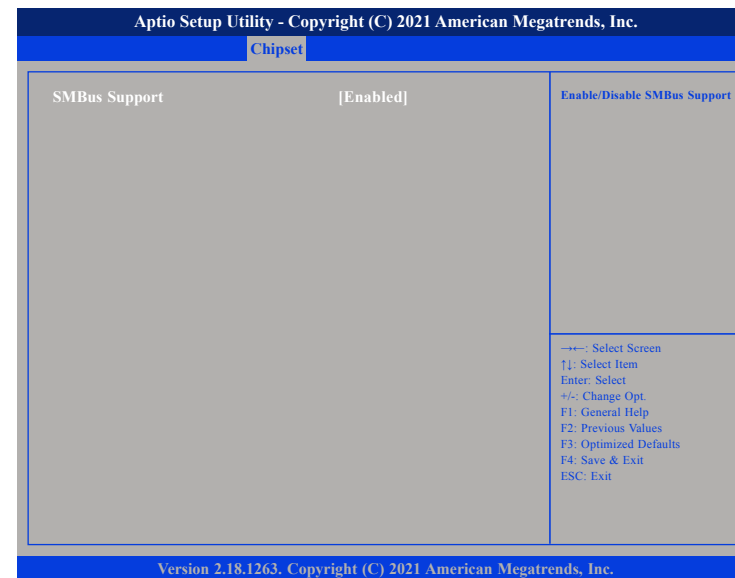

SMBus Support

Enables or disables SMBus support.



Setting incorrect field values may cause the system to malfunction.

South Cluster Configuration



HD-Audio Configuration



HD-Audio Support

Enables or disables HD Audio support.

SATA Drives



Chipset SATA

Enables or disables the SATA controller chipset. The SATA controller chipset supports the 2 black internal SATA ports (up to 3Gb/s supported per port).

SATA Test Mode

Enables or disables SATA test mode.


Port 0

Enables or disables SATA port 0.

Port 1

Enables or disables SATA port 1.

USB Configuration

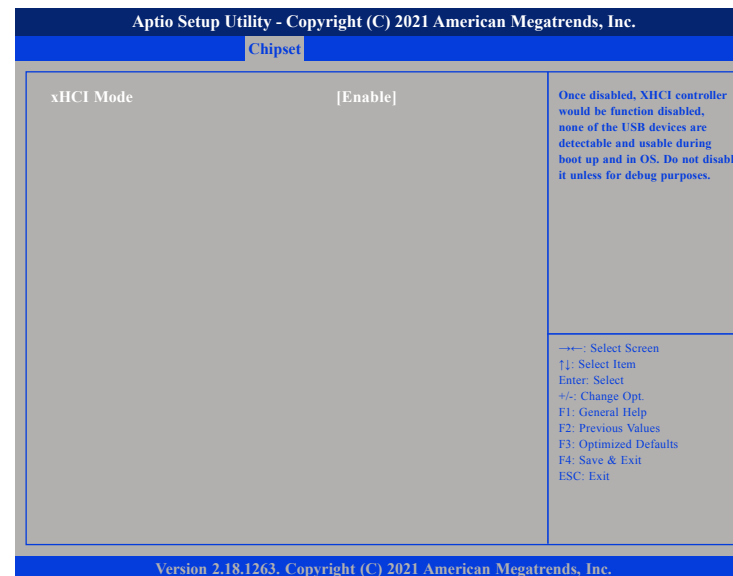

xHCI Mode

Enables or disables XHCI mode. Once disabled, XHCI controller function will be disabled and all the USB devices will not be detectable and usable during boot up and in OS. Please do not disable it unless for debugging purposes.

Miscellaneous Configuration

| Aptio Setup Utility - Copyright (C) 2021 American Megatrends, Inc. | |
|--|---|
| Chipset | |
| Miscellaneous Configuration High Precision Timer [Enable] USB Power State in S5 [ON] | Select USB power state in S5. --- Select Screen ↑ Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit |
| Version 2.18.1263. Copyright (C) 2021 American Megatrends, Inc. | |

High Precision Timer

Enables or disables high precision event timer.

USB Power State in S5

Configures the USB power state in S5.

Security

| Aptio Setup Utility - Copyright (C) 2021 American Megatrends, Inc. | | | | | |
|---|--|---------|----------|------|-------------|
| Main | Advanced | Chipset | Security | Boot | Save & Exit |
| Password Description If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup. If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User Will have Administrator rights. The password length must be in the following range: Minimum length 3 Maximum length 20 Setup Administrator Password User Password | Set Setup Administrator Password --- Select Screen ↑ Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit | | | | |
| Version 2.18.1263. Copyright (C) 2021 American Megatrends, Inc. | | | | | |

Setup Administrator Password

Select this to reconfigure the administrator's password.

User Password

Select this to reconfigure the user's password.

Boot



Bootup NumLock State

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys

Quiet Boot

Enabled Displays OEM logo instead of the POST messages.
Disabled Displays normal POST messages.

Boot Option Priorities

Adjust the boot sequence of the system. Boot Option #1 is the first boot device that the system will boot from, next will be #2 and so forth.

Fast Boot

Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

Save & Exit



Save Changes and Reset

To save the changes and reset, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

Discard Changes and Reset

To exit the Setup utility and reboot the system without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting.

Restore Defaults

To restore the BIOS to default settings, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.