



NEXCOM International Co., Ltd.

Network and Communication Solutions

Network Security Appliance

NSA 3190A

User Manual

NEXCOM International Co., Ltd.

Published January 2022

www.nexcom.com

CONTENTS

Preface

Copyright	iv
Disclaimer	iv
Acknowledgements	iv
Regulatory Compliance Statements	iv
Declaration of Conformity	iv
RoHS Compliance	v
Warranty and RMA	vi
Safety Information	viii
Installation Recommendations	viii
Safety Precautions	ix
Technical Support and Assistance	x
Conventions Used in this Manual	x
Global Service Contact Information	xi
Package Contents	xiii
Ordering Information	xiv

Chapter 1: Product Introduction

Overview	1
Key Features	1
Hardware Specifications	2
Knowing Your NSA 3190A	3
Front Panel	3
Rear Panel	4

Chapter 2: Jumpers and Connectors

Before You Begin	5
Precautions	5
Jumper Settings	6
Locations of the Jumpers and Connectors	7
Jumpers	8
Clear CMOS Function	8
Connector Pin Definitions	9
External I/O Interfaces - Front Panel	9
Reset Button	9
Power Button	9
RJ45 Console Port	10
USB 3.0 Ports	10
LAN1 to LAN8 Ports	11
LAN9 to LAN16 Ports with PoE (Optional)	11
Connector Pin Definitions	12
Internal Connectors	12
Fan Connectors	12
Internal 12V Power Connector	12
Internal 24-Pin ATX Power Connector	13
GPIO Pin Header	13
LCM	14
PMBUS	14
JTAG (CPLD Burn in Header)	15
SATA Connector	15



SATA Connector for SATA DOM	16
BIOS Socket	16
TPM 2.0 Header	17
PCIe x8 Slot.....	18
PCIe x8 Slot (For Non-standard PCIe)	19
Golden Finger (For Non-standard PCIe).....	20

Chapter 3: System Setup

Removing the Chassis Cover	21
Installing an M.2 Module	22
Installing DIMM Memory Modules	24
Installing a 2.5" SATA Hard Drive	26
Installing a CPU.....	31

Chapter 4: BIOS Setup

About BIOS Setup	36
When to Configure the BIOS.....	36
Default Configuration	37
Entering Setup	37
Legends	37
BIOS Setup Utility.....	39
Main	39
Advanced	40
Chipset.....	52
Security	56
Boot	57
Save & Exit	58

PREFACE

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexcom.com>. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

NSA 3190A is a trademark of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class A devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

RoHS Compliance



NEXCOM RoHS Environmental Policy and Status Update

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2011/65/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force in to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2013 will be RoHS compliant. They will use the usual NEXCOM naming convention.

Warranty and RMA

NEXCOM Warranty Period

NEXCOM manufactures products that are new or equivalent to new in accordance with industry standard. NEXCOM warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NEXCOM.

NEXCOM Return Merchandise Authorization (RMA)

- Customers shall enclose the “NEXCOM RMA Service Form” with the returned packages.
- Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the “NEXCOM RMA Service Form” for the RMA number apply process.
- Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NEXCOM is not responsible for the devices/parts.
- Customers are responsible for the safe packaging of defective products, making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as “Out of Warranty.”
- Any products returned by NEXCOM to other locations besides the customers’ site will bear an extra charge and will be billed to the customer.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

System Level

- Component fee: NEXCOM will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- Items will be replaced with NEXCOM products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- Replace with 3rd party products if needed.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Board Level

- Component fee: NEXCOM will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection to protect the equipment from overheating. DO NOT COVER THE OPENINGS.
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by skilled person.
14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. Do not place heavy objects on the equipment.
16. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
17. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

"ATTENTION: Risque d'explosion si la batterie est remplacée par un type incorrect. Mettre au rebus les batteries usagées selon les instructions."
18. This equipment is not suitable for use in locations where children are likely to be present.

Cet équipement ne convient pas à une utilisation dans des lieux pouvant accueillir des enfants.
19. Suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75.

Peut être installé dans des salles de matériel de traitement de l'information conformément à l'article 645 du National Electrical Code et à la NFPA 75.
20. Use certified and rated Laser Class I for Optical Transceiver product.

Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at www.nexcom.com.
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
 - Product name and serial number
 - Detailed information of the peripheral devices
 - Detailed information of the installed software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wordings of the error messages

Warning!

1. Handling the unit: carry the unit with both hands and handle it with care.
2. Maintenance: to keep the unit clean, use only approved cleaning products or clean with a dry cloth.

Conventions Used in this Manual



Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



Caution:

Information to avoid damaging components or losing data.



Note:

Provides additional information to complete a task easily.

Global Service Contact Information

Headquarters

NEXCOM International Co., Ltd.

9F, No. 920, Chung-Cheng Rd.,
ZhongHe District, New Taipei City, 23586,
Taiwan, R.O.C.

Tel: +886-2-8226-7786

Fax: +886-2-8226-7782

www.nexcom.com

Asia

Taiwan

NexAIoT Co., Ltd.

Taipei Office

13F, No.920, Chung-Cheng Rd.,
ZhongHe District,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7796

Fax: +886-2-8226-7792

Email: sales@nexcom.com.tw

www.nexcom.com.tw

NexAIoT Co., Ltd.

Taichung Office

16F, No.250, Sec. 2, Chongde Rd.,
Beitun Dist.,

Taichung City 406, R.O.C.

Tel: +886-4-2249-1179

Fax: +886-4-2249-1172

Email: sales@nexcom.com.tw

www.nexcom.com.tw

NexCOBOT Taiwan Co., Ltd.

13F, No.916, Chung-Cheng Rd.,
ZhongHe District,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7796

Fax: +886-2-8226-7792

Email: sales@nexcom.com.tw

www.nexcom.com.tw

GreenBase Technology Corp.

13F, No.922, Chung-Cheng Rd.,
Zhonghe Dist.,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7786

Fax: +886-2-8226-7900

Email: sales@nexcom.com.tw

www.nexcom.com.tw

China

NEXSEC Incorporated

Floor 5, No.4, No.7 fengxian middle Rd.,
(Beike Industrial Park), Haidian District,
Beijing, 100094, China

Tel: +86-10-5704-2680

Fax: +86-10-5704-2681

Email: sales@nexcom.cn

www.nexcom.cn

NEXCOM Shanghai

Room 603/604, Huiyinmingzun Plaza Bldg., 1,
No. 609, Yunlin East Rd.,
Shanghai, 200062, China
Tel: +86-21-5278-5868
Fax: +86-21-3251-6358
Email: sales@nexcom.cn
www.nexcom.cn

NEXCOM Surveillance Technology Corp.

Floor 5, Building C, ZhenHan Industrial Zone,
GanKeng Community, Buji Street,
LongGang District,
ShenZhen, 518112, China
Tel: +86-755-8364-7768
Fax: +86-755-8364-7738
Email: steveyang@nexcom.com.tw
www.nexcom.cn

NEXCOM United System Service

Room 603/604, Huiyinmingzun Plaza Bldg. 1,
No. 609, Yunlin East Rd.,
Shanghai, 200062, China
Tel: +86-21-5278-5868
Fax: +86-21-3251-6358
Email: renwang@nexcom.com.tw
www.nexcom.cn

NEXGOL

1st Floor, Building B4, Electronic 2nd Area,
(Phoenix Lake Industrial Park), Yongchuan Dist.,
Chongqing City, 402160, China
Tel: +86-23-4960-9080
Fax: +86-23-4966-5855
Email: sales@nexcobot.com
www.nexgol.com/NexGoL

Beijing NexGemo Technology Co.,Ltd.

5th Floor, Gemotech Building, No.1, Development Rd.,
Changping International Information Industry Base,
Changping District,
Beijing, 102206, China
Tel: +86-10-8190-9399
Fax: +86-10-8190-9456

Japan**NEXCOM Japan**

9F, Tamachi Hara Bldg.,
4-11-5, Shiba Minato-ku,
Tokyo, 108-0014, Japan
Tel: +81-3-5419-7830
Fax: +81-3-5419-7832
Email: sales@nexcom-jp.com
www.nexcom-jp.com

Europe**United Kingdom****NEXCOM EUROPE**

10 Vincent Avenue,
Crownhill Business Centre,
Milton Keynes, Buckinghamshire
MK8 0AB, United Kingdom
Tel: +44-1908-267121
Fax: +44-1908-262042
Email: sales.uk@nexcom.eu
www.nexcom.eu

America**USA****NEXCOM USA**

46665 Fremont Blvd.,
Fremont CA 94538, USA
Tel: +1-510-656-2248
Fax: +1-510-656-2158
Email: sales@nexcom.com
www.nexcomusa.com

Package Contents

Before continuing, verify that the NSA 3190A package that you received is complete. Your package should have all the items listed in the following table.

Item	Part Number	Name	Qty
1	19S00319000X0	NSA 3190A	1
2	6013300914X00	EPE for NSA 3170	1
3	60110A0231X00	Accessory Box for NSA 3170	1
4	5044440031X00	Rubber Foot Set	4
5	6023309081X00	DB9-to-RJ45 Console Cable	1
6	5060900301X00	Ear Set (2)	1
7	5040150001X00	Hook Handle (For retrieving LAN module)	1
8	50311F0144X00	I Head Screw	1
9	60233AT133X00	SATA Cable	2
10	50311F0107X00	I Head Bolt Screw	4
11	5060100012X00	Anti-vibration Damper	4

Ordering Information

The following below provides ordering information for NSA 3190A.

Barebone

NSA 3190A (P/N: 10S00319000X0) for ODM projects only.

1U w/ Intel® Comet Lake processor, 8 x 2.5GbE, 1 x LAN module, single PSU

Model	P/N Controller	Speed	Port	LAN Chip	PCIe Device	Bypass #	Location slot
NI 140C	10S10140C01X0	1G	4 RJ45	i350AM4x1	x4	0	All slots
NI 180C	10S10180C01X0	1G	8 RJ45	i350AM4x2	x2x4	0	All slots
NI 140F	10S20140F01X0	1G	4 SFP	i350AM4x1	x4	0	All slots
NI 180F	10S10180F01X0	1G	8 SFP	i350AM4x2	x2x4	0	All slots
NI 184CX1	10S10184C08X0	1G	8 RJ45	i350AM4x2	x2x4	4	All slots
NI 142CX1	10S10142C09X0	1G	4 RJ45	i350AM4x1	x4	2	All slots
NX 140F	10S20140F01X0	10G	4 SFP+	XL710-BM1	x8	0	All slots
NX 142F	10S20142F01X0	10G	4 SFP+	XL710-BM1	x8	2	All slots
NX 142FX1	10S20142F19X0	10G	4 SFP+	XL710-BM1	x8	2	All slots
NX 142FX1-LR	10S20142F20X0	10G	4 SFP+	XL710-BM1	x8	2	All slots
NX 121FX1	10S20121F12X0	10G	2 SFP+	X710-BM2	x8	1	All slots
NX 121FX1-LR	10S20121F13X0	10G	2 SFP+	X710-BM2	x8	1	All slots
25G							All slots
NV 120F	10S50120F01X0	25G	2 SFP28	XXV710-AM2	x8	0	All slots
40G							All slots
NQ 120F	10S40120F04X0	40G	2 QSFP+	XL710-BM2	x8	0	All slots

CHAPTER 1: PRODUCT INTRODUCTION

Overview



Key Features

- Intel® Comet Lake processor (LGA1200)
- 2 x DDR4 ECC/non-ECC (2666/2933) UDIMM
- 2 x 2.5" internal SSD/HDD
- 1 x SATA3 for SATA DOM
- 1 x M.2 2242 Key M
- 8 x 2.5 GbE RJ45 LAN ports
- 1 x LAN module
- Single power supply

Hardware Specifications

Main Board

- Intel® Comet Lake processor (LGA1200), up to 80W
- Intel® W480
- TPM 2.0 (optional)
- Dual BIOS

Main Memory

- 2 x DDR4 2666/2933 ECC/non-ECC UDIMM, up to 32GB

Storage

- 2 x 2.5" internal SSD/HDD bays
- 1 x M.2 2242 Key M (SATA)
- 1 x SATA3 for SATA DOM

I/O Interface-External

- Button: power & reset
- LED: HDD/GPIO
- 2 x USB 3.0 ports
- 1 x RJ45 console
- 8 x 2.5 GbE RJ45 LAN ports
- 1 x LAN module slot
- 1 x HDMI

I/O Interface-Internal

- 2 x Fixed smart fans
- 1 x Power inlet
- 1 x Low profile standard PCIe x8 expansion slot
- LCM

Riser Card

- NVMe with 2 x M.2 SSD

Power Input

- 300W single power supply

Dimensions and Weight


- Chassis dimension: 430 mm x 300 mm x 44 mm
- Carton dimension: 544 mm x 506 mm x 205 mm
- Without packing: 4.7 kg
- With packing: 7.5 kg

Environment

- Operating temperatures: 0°C~40°C
- Storage temperature: -40°C~80°C
- Relative humidity: 10%~90% non-condensing

Knowing Your NSA 3190A

Front Panel

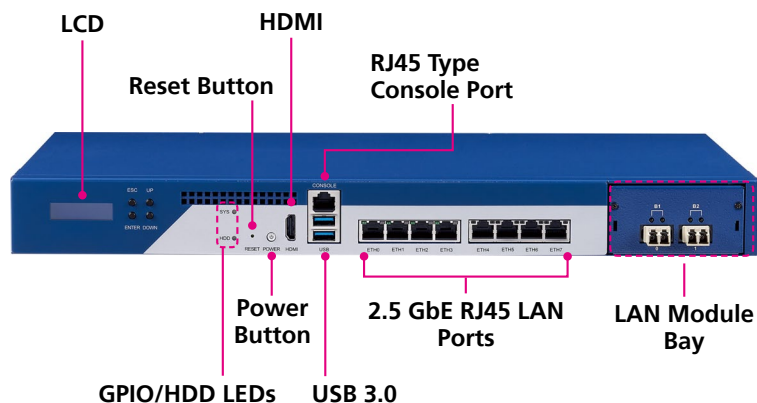

LCD

128x32 characters LCD module.

GPIO/HDD LED Indicators

LED indicators for hard drive activity of the system, as well as one LED reserved for GPIO (user programmable).

Reset Button

Press to restart the system.

Power Button

Press to power-on or power-off the system.

HDMI

Used to connect a high-definition display.

RJ45 Type Console Serial Port

Used to connect console devices with RJ45 type connection.

USB 3.0 Ports

Used to connect USB 3.0/2.0/1.1 devices.

2.5 GbE RJ45 LAN Ports

8 LAN ports used to connect network devices.

LAN Module Bay

LAN module bay used to install add-on network modules.

Rear Panel

Expansion Slot (Optional)

Expansion Slot (Optional)

Used to install a PCI Express x8 add-on card.

AC Power Socket

Plug an AC power cord here before turning on the system.



AC Power Socket

CHAPTER 2: JUMPERS AND CONNECTORS

This chapter describes how to set the jumpers and connectors on the NSA 3190A motherboard.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
 - A Philips screwdriver
 - A flat-tipped screwdriver
 - A set of jewelers screwdrivers
 - A grounding strap
 - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic components. Humid environments tend to have less static electricity than

dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:


- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.

Jumper Settings


A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is short. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is open.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).


Two-Pin Jumpers: Open (Left) and Short (Right)

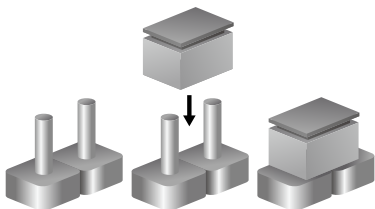

Three-Pin Jumpers: Pins 1 and 2 are Short

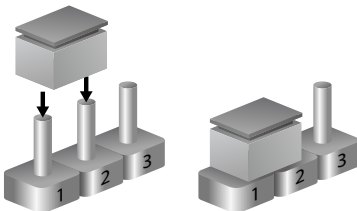

The figure below shows the location of the jumpers and connectors.

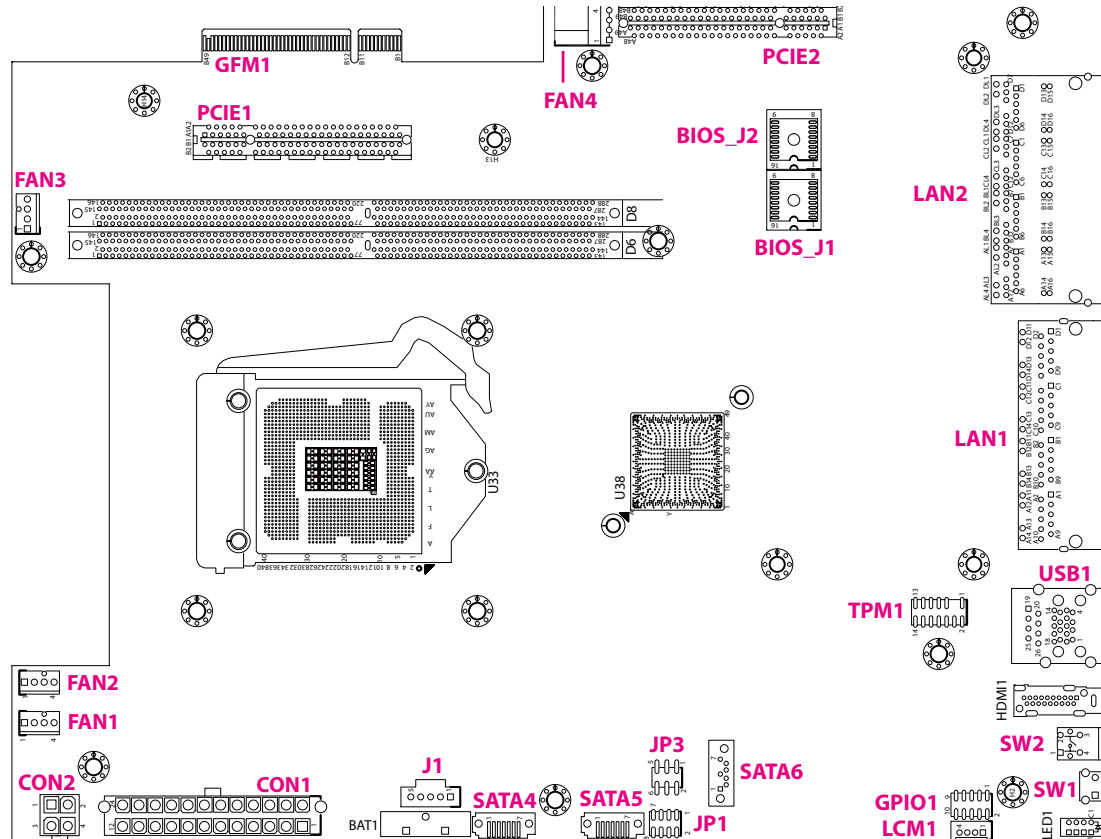




Jumpers

Clear CMOS Function

Connector type: 2x4 8-pin header

Connector location: JP1



Pin	Definition	Pin	Definition
1	NC	2	3.3V
3	RTCRST_N	4	AT_ATX_SEL
5	GND	6	GND
7	GND	8	FP_PWR_BTN_N






Connector Pin Definitions

External I/O Interfaces - Front Panel

Reset Button

Connector location: SW1

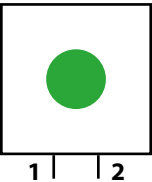

Pin	Definition	Pin	Definition
1	GND	2	Reset signal
3	GND	4	GND

Power Button

Connector location: SW2




Pin	Definition	Pin	Definition
1	GND	2	Power button signal
3	Power button signal	4	GND
L1	Bi-color LED	L2	Bi-color LED



RJ45 Console Port


Connector location: USB1 for RJ45



Pin	Definition	Pin	Definition
19	RTS	20	DTR
21	TXD	22	GND
23	DCD	24	RXD
25	DSR	26	CTS

USB 3.0 Ports

Connector type: Dual USB 3.0 ports
Connector location: USB1

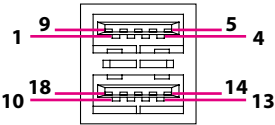


Pin	Definition	Pin	Definition
1	5V	2	D-
3	D+	4	GND
5	RXN	6	RXP
7	GND	8	TXN
9	TXP	10	5V
11	D-	12	D+
13	GND	14	RXN
15	RXP	16	GND
17	TXN	18	TXP

LAN1 to LAN8 Ports

Connector type: RJ45 with LEDs

Connector location: LAN1

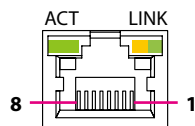

Act	Status
Flashing Green	Data activity
Steady Green	No activity


Link	Status
Steady Green	1G network link
Steady Amber	100Mbps network link
Off	10Mbps or no link

Pin	Definition	Pin	Definition
1	MDI0P	2	MDI0N
3	MDI1P	4	MDI1N
5	CT	6	CT
7	MDI2P	8	MDI2N
9	MDI3P	10	MDI3N
11	Speed LED	12	Speed LED
13	Active LED	14	Active LED

LAN9 to LAN16 Ports with PoE (Optional)

Connector type: RJ45 with LEDs

Connector location: LAN2

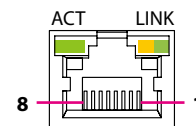

Act	Status
Flashing Green	Data activity
Steady Green	No activity

Link	Status
Steady Green	1G network link
Steady Amber	100Mbps network link
Off	10Mbps or no link


Pin	Definition	Pin	Definition
1	CT	2	MDI2N
3	MDI2P	4	MDI1P
5	MDI2N	6	CT
7	CT	8	MDI3P
9	MDI3N	10	MDI0N
11	MDI0P	12	CT
13	Type A POE+	14	Type A POE-
15	Type B POE+	16	Type B POE-

Connector Pin Definitions

Internal Connectors

Fan Connectors


Connector type: 1x4 4-pin Wafer
Connector location: FAN1, FAN2, FAN3 and FAN4



Pin	Definition	Pin	Definition
1	GND	2	12V
3	FAN_TACH	4	FAN_PWM

Internal 12V Power Connector


Connector type: 2x2 4-pin header
Connector location: CON2

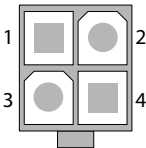

Pin	Definition	Pin	Definition
1	GND	2	GND
3	12V	4	12V

Internal 24-Pin ATX Power Connector


Connector type: 2x12 24-pin header
Connector location: CON1



Pin	Definition	Pin	Definition
1	+P3.3V	2	+P3.3V
3	GND	4	+P5V
5	GND	6	+P5V
7	GND	8	PW-OK
9	+P5_AUX	10	+P12V
11	+P12V	12	+P3.3V
13	+P3.3V	14	NC
15	GND	16	PS-ON
17	GND	18	GND
19	GND	20	NC
21	+P5V	22	+P5V
23	+P5V	24	GND

GPIO Pin Header

Connector type: 2x5 10-pin header
Connector location: GPIO1




Pin	Definition	Pin	Definition
1	3.3V	2	GND
3	GPIN1	4	GPOUT1
5	GPIN2	6	GPOUT2
7	GPIN3	8	GPOUT3
9	GPIN4	10	GPOUT4



LCM


Connector type: 1x4 4-pin header
Connector location: LCM1



Pin	Definition	Pin	Definition
1	GND	2	SP_LCM_RXD
3	SP_LCM_TXD	4	5V

PMBUS

Connector type: 1x5 5-pin header
Connector location: J1




Pin	Definition	Pin	Definition
1	SMB CLK	2	SMB DAT
3	POWER fail	4	GND
5	NC		





JTAG (CPLD Burn in Header)


Connector type: 2x3 6-pin header
Connector location: JP3



Pin	Definition	Pin	Definition
1	N2TCK	2	NC
3	N2TMS	4	NC
5	GND	6	NC

SATA Connector


Connector type: Standard Serial ATA 7P (1.27mm, SATA-M-180)
Connector location: SATA4 and SATA5



Pin	Definition	Pin	Definition
1	GND	2	TXP
3	TXN	4	GND
5	RXN	6	RXP
7	GND		

SATA Connector for SATA DOM


Connector type: Standard Serial ATA 7P (1.27mm, SATA-M-180)
Connector location: SATA6



Pin	Definition	Pin	Definition
P1	5V	P2	GND
1	GND	2	TXP
3	TXN	4	GND
5	RXN	6	RXP
7	GND		

BIOS Socket

Connector type: 2x8 16-pin header
Connector location: BIOS_J1 and BIOS_J2

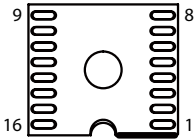


Pin	Definition	Pin	Definition
1	IO3	2	3.3V
3	NC	4	NC
5	NC	6	NC
7	CS#	8	MISO
9	IO2	10	GND
11	NC	12	NC
13	NC	14	NC
15	MOSI	16	SCK



TPM 2.0 Header

Connector type: 2x7 14-pin header
Connector location: TPM1




Pin	Definition	Pin	Definition
1	3.3V	2	CS
		4	PIRQ
5	Reset	6	NC
7	NC	8	GND
9	NC	10	SCK
11	MISO	12	MOSI
13	NC	14	NC

PCIe x8 Slot

Connector type: PCIe x8 Slot

Connector location: PCIE1




Pin	Definition	Pin	Definition
A1	GND	B1	12V
A2	12V	B2	12V
A3	12V	B3	12V
A4	GND	B4	GND
A5	NC	B5	SMBCLK
A6	NC	B6	SMBDAT
A7	NC	B7	GND
A8	NC	B8	3.3V
A9	3.3V	B9	NC
A10	3.3V	B10	3.3V AUX
A11	reset	B11	wake
A12	GND	B12	NC
A13	CLK	B13	GND
A14	CLK	B14	TXP
A15	GND	B15	TXN
A16	RXP	B16	GND
A17	RXN	B17	NC
A18	GND	B18	GND
A19	NC	B19	TXP
A20	GND	B20	TXN
A21	RXP	B21	GND

Pin	Definition	Pin	Definition
A22	RXN	B22	GND
A23	GND	B23	TXP
A24	GND	B24	TXN
A25	RXP	B25	GND
A26	RXN	B26	GND
A27	GND	B27	TXP
A28	GND	B28	TXN
A29	RXP	B29	GND
A30	RXN	B30	NC
A31	GND	B31	NC
A32	NC	B32	GND
A33	NC	B33	TXP
A34	GND	B34	TXN
A35	RXP	B35	GND
A36	RXN	B36	GND
A37	GND	B37	TXP
A38	GND	B38	TXN
A39	RXP	B39	GND
A40	RXN	B40	GND
A41	GND	B41	TXP
A42	GND	B42	TXN
A43	RXP	B43	GND
A44	RXN	B44	GND
A45	GND	B45	TXP
A46	GND	B46	TXN
A47	RXP	B47	GND
A48	RXN	B48	NC
A49	GND	B49	GND

PCIe x8 Slot (For Non-standard PCIe)

Connector type: PCIe x8 Slot

Connector location: PCIE2




Pin	Definition	Pin	Definition
A1	GND	B1	12V
A2	12V	B2	12V
A3	12V	B3	12V
A4	GND	B4	GND
A5	PCIExSATA Detect	B5	SMBCLK
A6	NC	B6	SMBDAT
A7	NC	B7	GND
A8	NC	B8	3.3V
A9	3.3V	B9	NC
A10	3.3V	B10	3.3V AUX
A11	reset	B11	wake
A12	GND	B12	NC
A13	CLK	B13	GND
A14	CLK	B14	TXP
A15	GND	B15	TXN
A16	RXP	B16	GND
A17	RXN	B17	NC
A18	GND	B18	GND
A19	NC	B19	TXP
A20	GND	B20	TXN
A21	RXP	B21	GND

Pin	Definition	Pin	Definition
A22	RXN	B22	GND
A23	GND	B23	TXP
A24	GND	B24	TXN
A25	RXP	B25	GND
A26	RXN	B26	GND
A27	GND	B27	TXP
A28	GND	B28	TXN
A29	RXP	B29	GND
A30	RXN	B30	NC
A31	GND	B31	NC
A32	NC	B32	GND
A33	NC	B33	TXP
A34	GND	B34	TXN
A35	RXP	B35	GND
A36	RXN	B36	GND
A37	GND	B37	TXP
A38	GND	B38	TXN
A39	RXP	B39	GND
A40	RXN	B40	GND
A41	GND	B41	TXP
A42	GND	B42	TXN
A43	RXP	B43	GND
A44	RXN	B44	GND
A45	GND	B45	TXP
A46	GND	B46	TXN
A47	RXP	B47	GND
A48	RXN	B48	NC
A49	GND	B49	GND

Golden Finger (For Non-standard PCIe)

Connector location: GFM1



Pin	Definition	Pin	Definition
A1	NC	B1	12V
A2	12V	B2	12V
A3	12V	B3	12V
A4	GND	B4	GND
A5	NC	B5	SMBCLK
A6	SATA RXP	B6	SMBDAT
A7	SATA RXN	B7	GND
A8	3.3V AUX	B8	3.3V
A9	3.3V	B9	wake
A10	3.3V	B10	SATA TXP
A11	reset	B11	SATA TXN
A12	GND	B12	NC
A13	CLK	B13	GND
A14	CLK	B14	TXP
A15	GND	B15	TXN
A16	RXP	B16	GND
A17	RXN	B17	NC
A18	GND	B18	GND
A19	NC	B19	TXP
A20	GND	B20	TXN
A21	RXP	B21	GND

Pin	Definition	Pin	Definition
A22	RXN	B22	GND
A23	GND	B23	TXP
A24	GND	B24	TXN
A25	RXP	B25	GND
A26	RXN	B26	GND
A27	GND	B27	TXP
A28	GND	B28	TXN
A29	RXP	B29	GND
A30	RXN	B30	NC
A31	GND	B31	NC
A32	NC	B32	GND
A33	NC	B33	TXP
A34	GND	B34	TXN
A35	RXP	B35	GND
A36	RXN	B36	GND
A37	GND	B37	TXP
A38	GND	B38	TXN
A39	RXP	B39	GND
A40	RXN	B40	GND
A41	GND	B41	TXP
A42	GND	B42	TXN
A43	RXP	B43	GND
A44	RXN	B44	GND
A45	GND	B45	TXP
A46	GND	B46	TXN
A47	RXP	B47	GND
A48	RXN	B48	NC
A49	GND	B49	GND


CHAPTER 3: SYSTEM SETUP

Removing the Chassis Cover




Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.

1. Remove the screws around the chassis cover then put them in a safe place for later use.

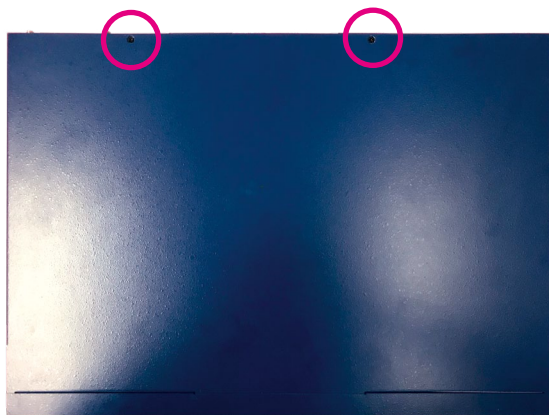


Screws on the top

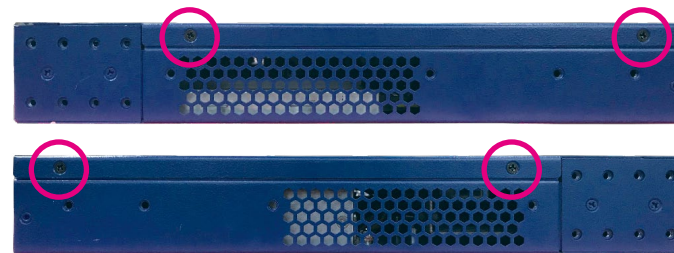



Screws on the sides

2. Gently slide the cover outwards, then lift up the cover to remove it.

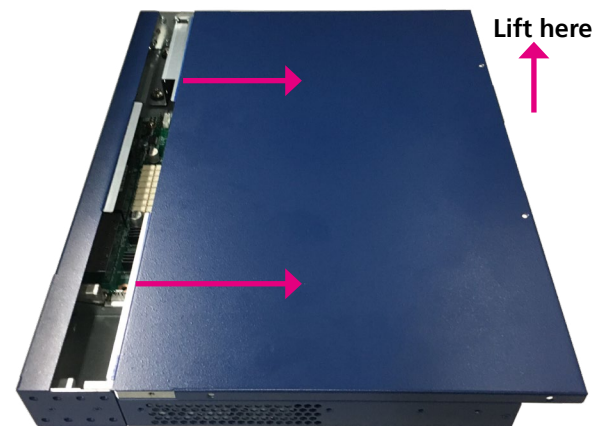

Installing an M.2 Module

1. Locate the M.2 slot on the motherboard.
2. Insert the M.2 module into the M.2 slot at a 45-degree angle until the gold-plated connector on the edge of the module completely disappears into the slot.

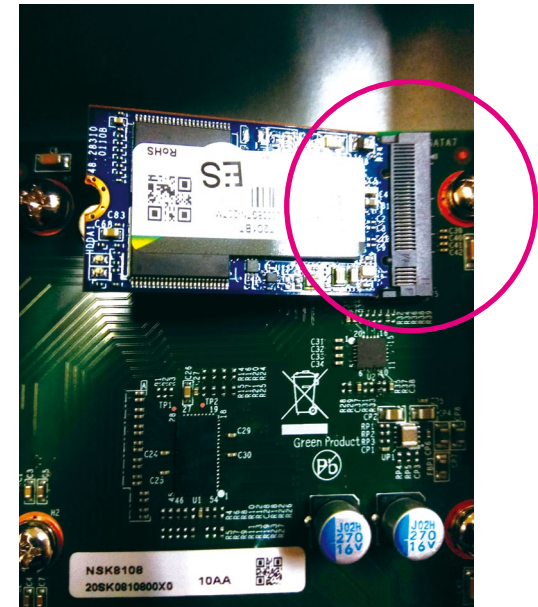
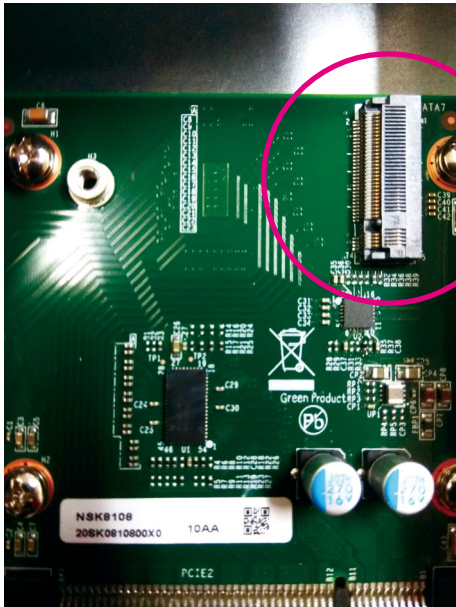


3. Push the module down and secure it with a screw.




Installing DIMM Memory Modules

1. Locate the DIMM sockets on the board and release the locks on the DIMM sockets.
2. Insert the modules into the socket at an 90 degree angle. Apply firm even pressure to each end of the modules until they slip into the sockets.

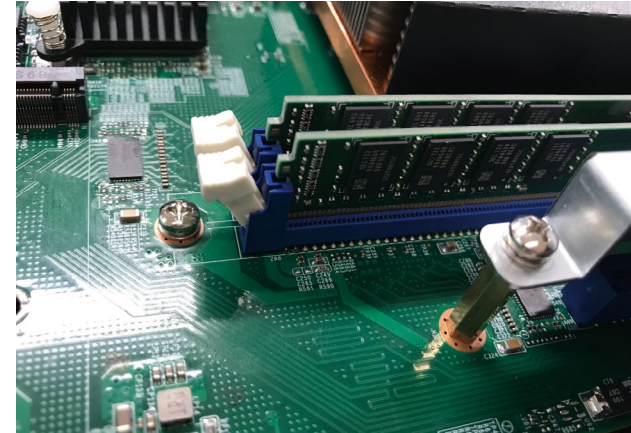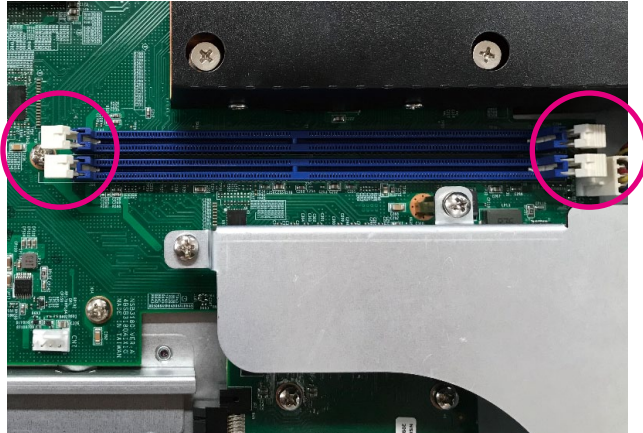

3. While pushing the modules into position, the lock will close automatically.

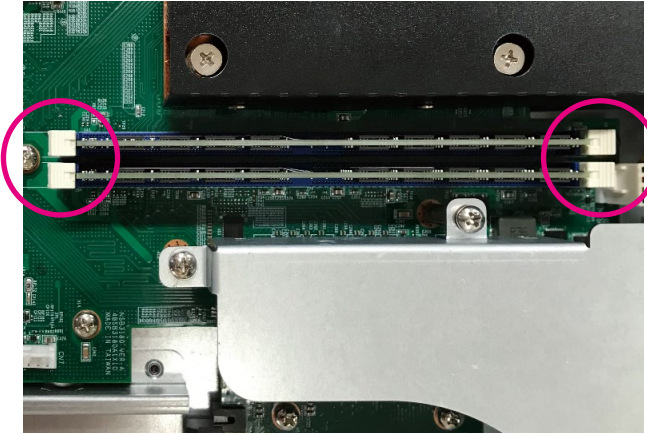

Installing a 2.5" SATA Hard Drive



Please correctly follow the below instructions and noted items to avoid making unnecessary damages.



The storage drive bracket is used to secure storage drives to the system. Up to 2 storage drives can be installed.

1. Slide the four anti-vibration dampers into the mounting holes on the storage drive bracket.




2. With the anti-vibration dampers installed, insert the mounting screws through the dampers




3. Align the mounting holes that are on the sides of the storage drive to the mounting screws.




4. Fasten the screws to secure the storage drive in place.

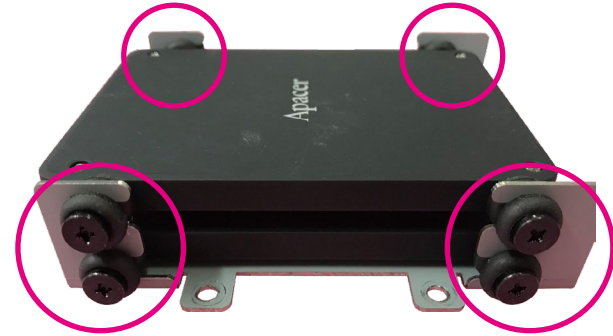

5. Locate the four mounting holes inside the chassis. This is where the storage bracket will be installed.

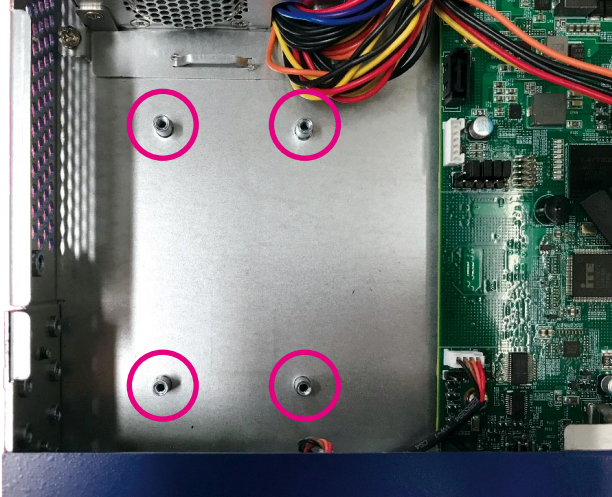


6. Place the storage bracket into the chassis with the connector side facing the board, and the mounting holes on the bracket aligned to the mounting holes inside the chassis.

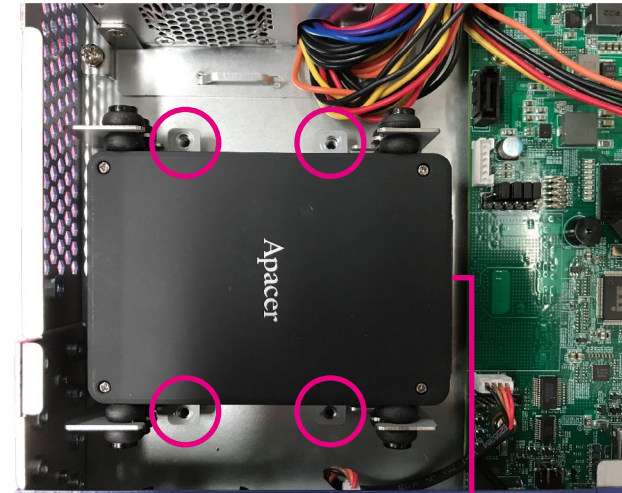


Connector Side

7. Secure the bracket in place with screws.

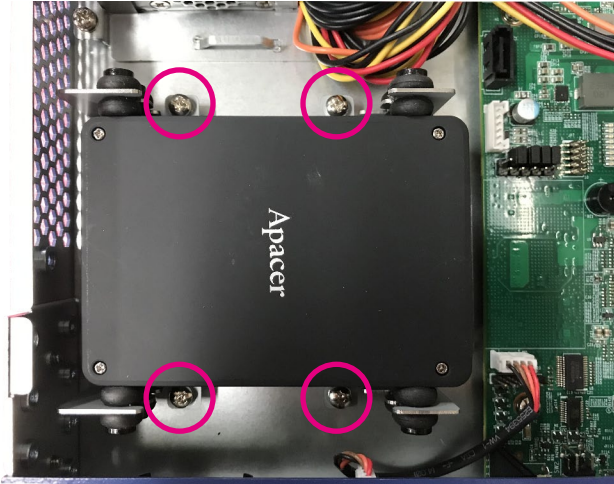


8. Connect the SATA data and power cables to the respective connectors on the storage drives.

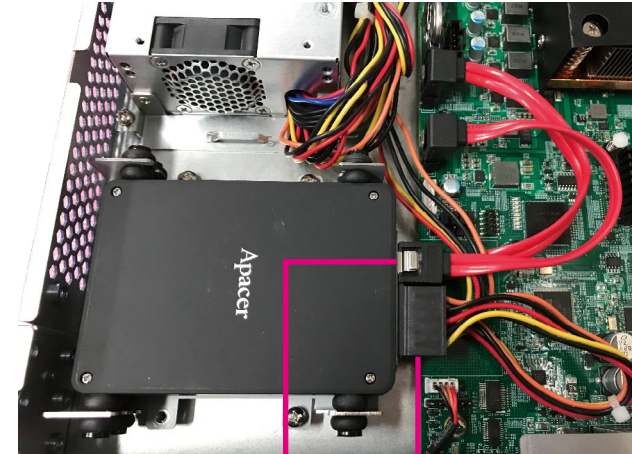

SATA Cable


Power Cable

9. Connect the other ends of the SATA data cables to the respective connectors on the motherboard.

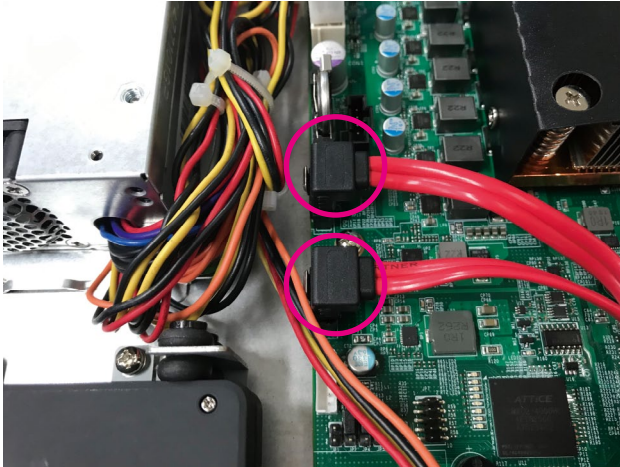


Installing a CPU

1. Remove the mounting screws that secure the heat sink to the chassis.
2. The CPU socket is readily accessible after you have removed the heat sink.

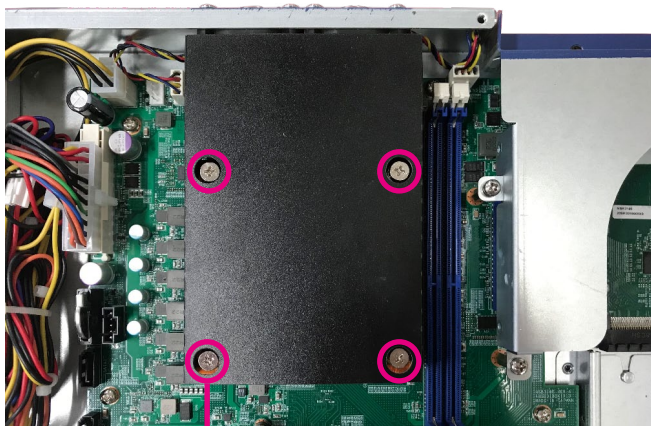


Mounting Screw

- Before you proceed, make sure (1) the CPU socket comes with a protective cap, (2) the cap is not damaged and (3) the socket's contact pins are not bent.
- Make sure all power cables are unplugged before you install the CPU.
- The CPU socket must not come in contact with anything other than the CPU. Avoid unnecessary exposure. Remove the protective cap only when you are about to install the CPU.

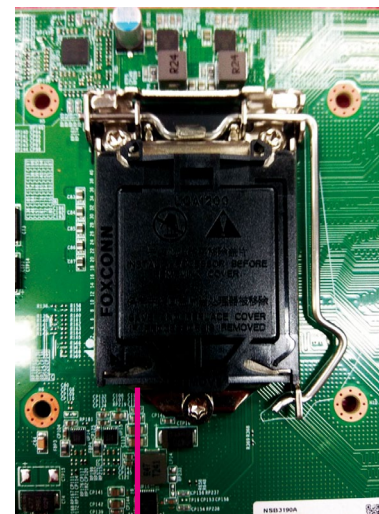


CPU Socket


3. Unlock the socket by pushing the load lever down (1), moving it sideways (2) until it is released from the retention tab; then lift the load lever up.

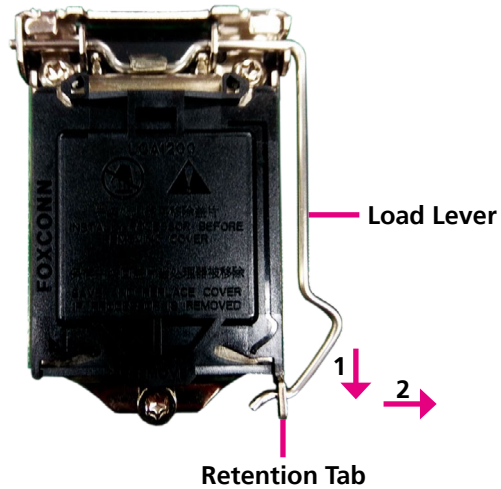

4. Lifting the load lever will at the same time lift the load plate.

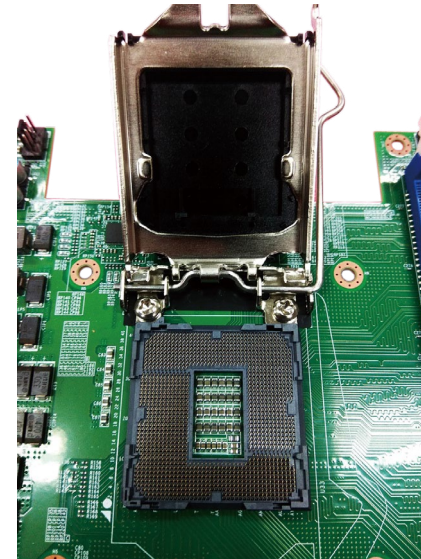


5. Remove the protective cap from the CPU socket. The cap is used to protect the CPU socket against dust and harmful particles. Remove the protective cap only when you are about to install the CPU.

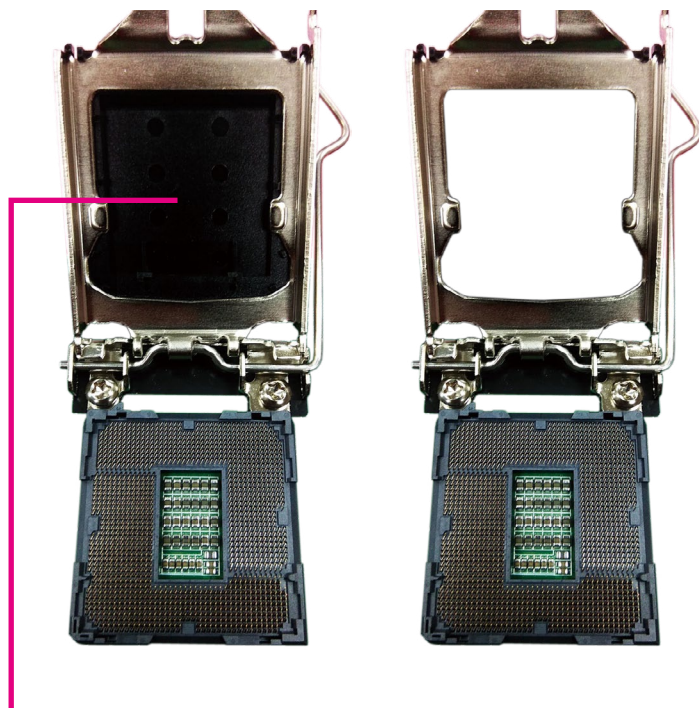

Protective Cap

6. Insert the CPU into the socket. The triangular edge on the CPU must align with the corner of the CPU socket shown on the photo.

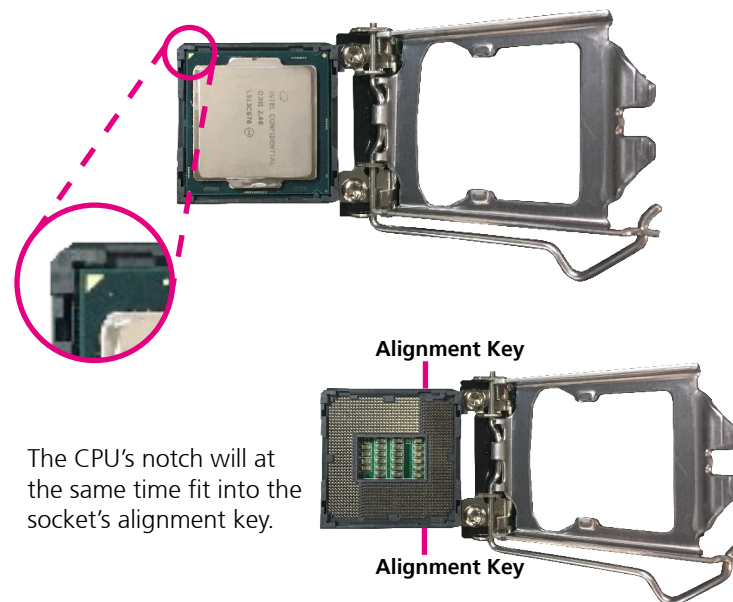

The CPU's notch will at the same time fit into the socket's alignment key.




- Handle the CPU by its edges and avoid touching the pins.
- The CPU will fit in only one orientation and can easily be inserted without exerting any force.

7. Close the load plate and then push the load lever down.

While closing the load plate, make sure the front edge of the load plate slides under the retention knob.




8. Hook the load lever under the retention tab.

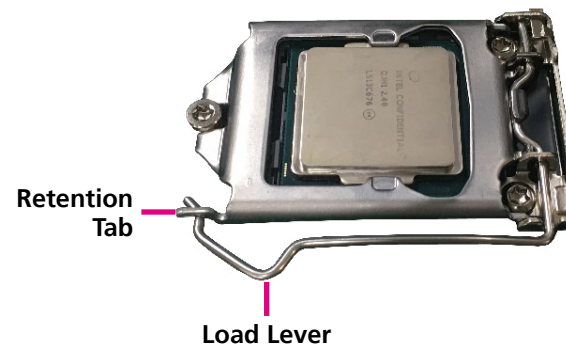


Do not force the CPU into the socket. Forcing the CPU into the socket may bend the pins and damage the CPU.

9. Apply thermal compound on top of the CPU. Do not spread the compound all over the surface. When you later place the heat sink on top of the CPU, the compound will disperse evenly.

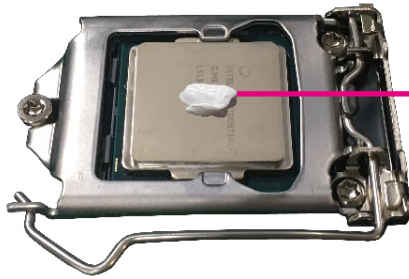

**Thermal
compound
on the CPU**

10. Install the heat sink back to its original location and tighten the screws to secure the heat sink in place.

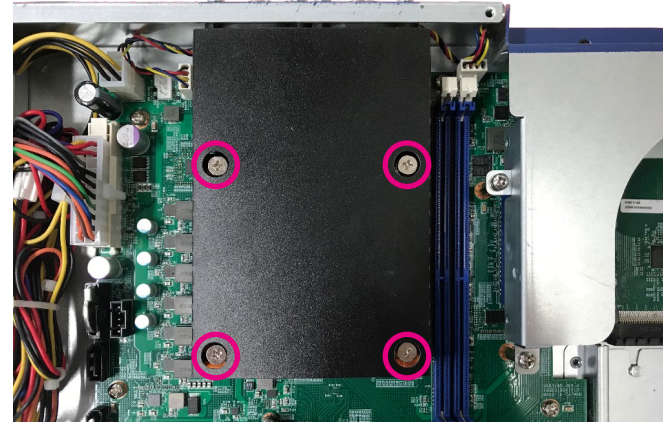

CHAPTER 4: BIOS SETUP

This chapter describes how to use the BIOS setup program for NSA 3190A. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM website at www.nexcom.com.tw.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

- This program should be executed under the following conditions:
- When changing the system configuration
- When a configuration error is detected by the system and you are prompted to make changes to the setup program
- When resetting the system clock
- When redefining the communication ports to prevent any conflicts
- When making changes to the Power Management configuration
- When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.


Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.












Entering Setup

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing  allows you to enter Setup.

Legends

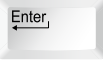
Key	Function
	Moves the highlight left or right to select a menu.
	Moves the highlight up or down between sub-menu or fields.
	Exits the BIOS Setup Utility.
	Scrolls forward through the values or options of the highlighted field.
	Scrolls backward through the values or options of the highlighted field.
	Selects a field.
	Displays General Help.
	Load previous values.
	Load optimized default values.
	Saves and exits the Setup program.
	Press <Enter> to enter the highlighted sub-menu



Scroll Bar


When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu

When “▶” appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press  .



BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from several setup functions and one exit. Use arrow keys to select among the items and press  to accept or enter the submenu.

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.



System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Monday to Sunday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1998 to 9999.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Setting incorrect field values may cause the system to malfunction.



CPU Configuration

This section is used to configure the CPU.



C6DRAM

Enables or disables moving of DRAM contents to PRM memory when CPU is in C6 state.

Software Guard Extensions (SGX)

Enables or disables Software Guard Extensions (SGX).

CPU Flex Ratio Override

Enables or disables CPU Flex Ratio Override.



Hardware Prefetcher

Turns on or off the MLC streamer prefetcher.

Adjacent Cache Line Prefetch

Enables or disables adjacent cache line prefetch.

Intel (VMX) Virtualization Technology

When this field is set to Enabled, the VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

PEI

Enables or disables PEI (Platform Environment Control Interface).

Active Processor Cores

Select the number of cores to enable in each processor package.

Hyper-Threading

Enables or disables hyper-threading technology.

BIST

Enables or disables BIST (Built-in Self Test).

AP threads Idle Manner

Enables or disables AP threads Idle Manner to wait for the signal to run.

AES

Enables or disables AES (Advanced Encryption Standard)

MachineCheck

Enables or disables MachineCheck.

MonitorMWait

Enables or disables MonitorMWait.

Intel Trusted Execution Technology

Enables or disables Intel TXT (Intel Trusted Execution Technology) support.

Reset AUX Content

Option to reset AUX content.

FCLK Frequency for Early Power On

Configures the FCLK frequency setting for early power on.

Voltage Optimization

Enables or disables voltage optimization.

Power & Performance

This section is used to configure the CPU power management features.



CPU - Power Management Control

Enters the CPU - Power Management Control submenu.

GT - Power Management Control

Enters the GT - Power Management Control submenu.

CPU - Power Management Control



Boot performance mode

Select the performance state that the BIOS will set starting from reset vector.

Intel® SpeedStep™

Enables or disables Intel SpeedStep.


Race To Halt (RTH)

Enables or disables Race To Halt feature.

Intel® Speed Shift Technology

Enables or disables Intel Speed Shift Technology support. Enabling it will expose the CPPC v2 interface to allow hardware controlled P-states.

CPU - Power Management Control

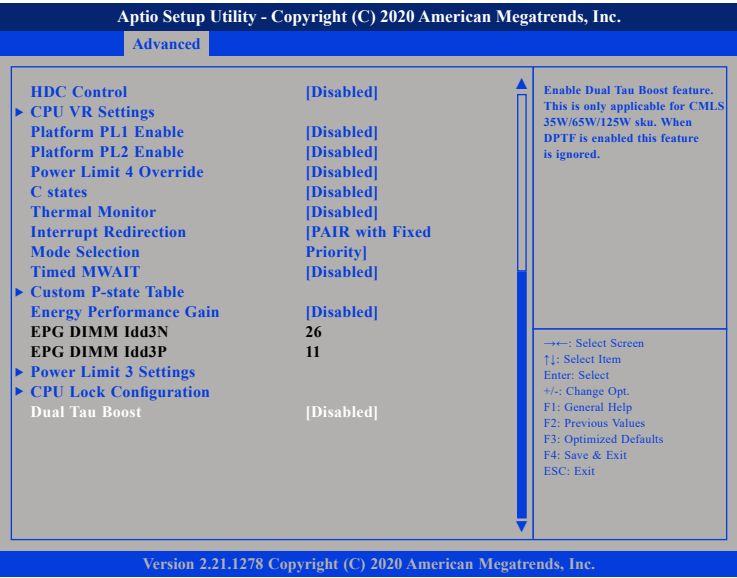

HDC Control

Enables or disables HDC Control.

Platform PL1 Enable

Enables or disables platform power limit 1 programming. If this option is enabled, it activates the PL1 value to be used by the processor to limit the average power of given time window.

Platform PL2 Enable

Enables or disables platform power limit 2 programming. If this option is disabled, the BIOS will program the default values for platform power limit 2.

Power Limit 4 Override

Enables or disables power limit 4 override. If this option is disabled, the BIOS will leave the default values for power limit 4.

C states

Enables or disables C-States support for power saving.

Thermal Monitor

Enables or disables Thermal Monitor.

Interrupt Redirection Mode Selection

Configures the Interrupt Redirection Mode for logical interrupts.

Timed MWAIT

Enables or disables Timed MWAIT support.

Energy Performance Gain

Enables or disables Energy Performance Gain.

Dual Tau Boost

Enables or disables the Dual Tau Boost feature. This is only applicable for CMLS 35W/65W/125W SKUs. When DPTF is enabled this feature is ignored.




GT - Power Management Control



- RC6(Render Standby)**
Enables or disables Render Standby support.
- Maximum GT frequency**
Configures the maximum GT frequency.
- Disable Turbo GT frequency**
Enabled Disables Turbo GT Frequency
Disabled Enables Turbo GT Frequency

PCH-FW Configuration

This section is used to configure the firmware update options.

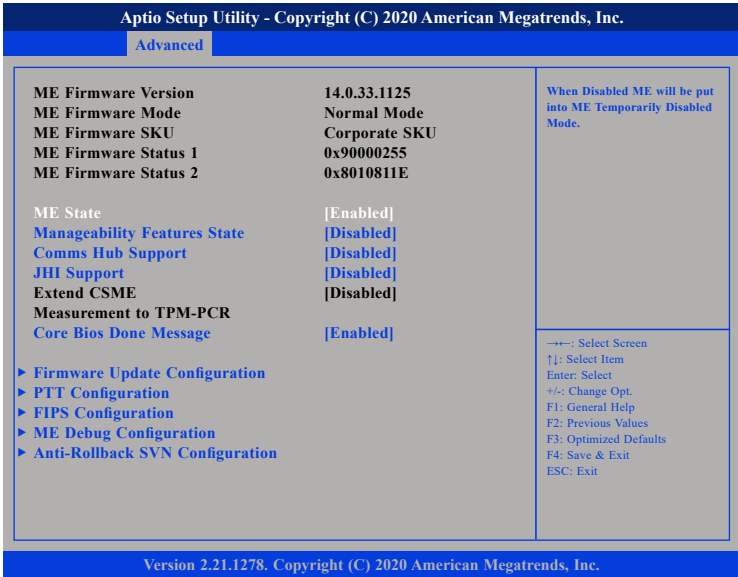

- ME State**
Displays the status of ME state. When the status is disabled, ME will be placed into ME Temporarily Disabled Mode.
- Manageability Features State**
Enables or disables Intel® Manageability features.
- Comms Hub Support**
Enables or disables Comms Hub Support.
- JHI Support**
Enables or disables Intel® DAL Host Interface Service (JHI).
- Core Bios Done Message**
Enables or disables Core Bios Done Message sent to ME.



Trusted Computing

This section is used to configure Trusted Platform Module (TPM) settings.



Security Device Support

Enables or disables BIOS support for security device. O.S will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

NPCE6MNX Super IO Configuration

This section is used to configure the serial ports.



Super IO Chip

Displays the Super I/O chip used on the board.

Serial Port 1 Configuration

Configuration settings for serial port 1.

Serial Port 2 Configuration

Configuration settings for serial port 2.



Serial Port 1 Configuration

This section is used to configure serial port 1.

Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.

Advanced

Serial Port 1 Configuration

Serial Port [Enabled]
Device Settings IO=2F8h; IRQ=4;
Change Settings [Auto]

Enable or Disable Serial Port (COM)

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.21.1278. Copyright (C) 2020 American Megatrends, Inc.

Serial Port

Enables or disables the serial port.

Change Settings

Selects an optimal setting for the Super IO device.

Serial Port 2 Configuration

This section is used to configure serial port 2.

Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.

Advanced

Serial Port 2 Configuration

Serial Port [Enabled]
Device Settings IO=3F8h; IRQ=3;
Change Settings [Auto]

Enable or Disable Serial Port (COM)

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.21.1278. Copyright (C) 2020 American Megatrends, Inc.

Serial Port

Enables or disables the serial port.

Change Settings


Selects an optimal setting for the Super IO device.





Hardware Monitor

This section is used to monitor hardware status such as temperature, fan speed and voltages.

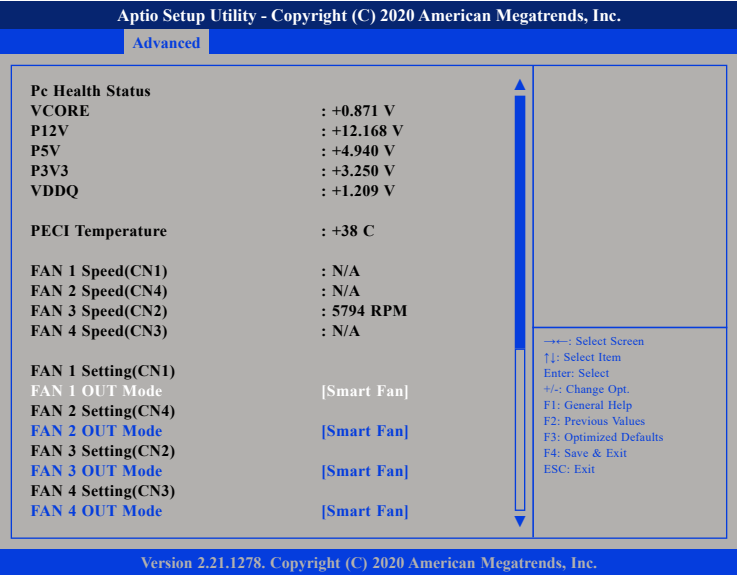

FAN 1 to FAN 4 OUT Mode


Configures the operating mode of fan 1 to fan 4.

FAN Min Temperature

Configures the temperature to turn the fan off.

FAN Max Temperature

Configures the temperature to turn the fan on.

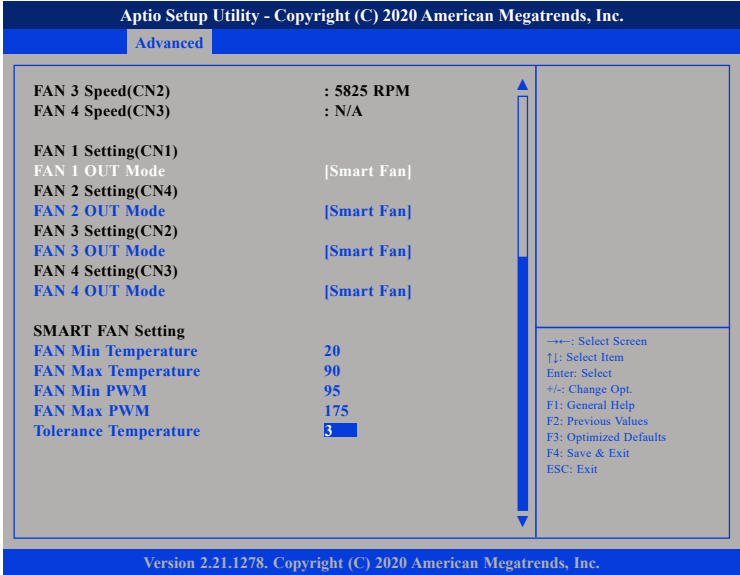

FAN Min PWM

Configures the start PWM value of the fan. This is used to set the starting fan speed.

FAN Max PWM

Configures the maximum PWM value of the fan.

Tolerance Temperature

Configures the minimum and maximum temperature threshold to activate smart fan.



Serial Port Console Redirection

This section is used to configure the serial port that will be used for console redirection.




Console Redirection EMS

Enables or disables console redirection.

PCI Subsystem Settings

This section is used to configure the PCI.

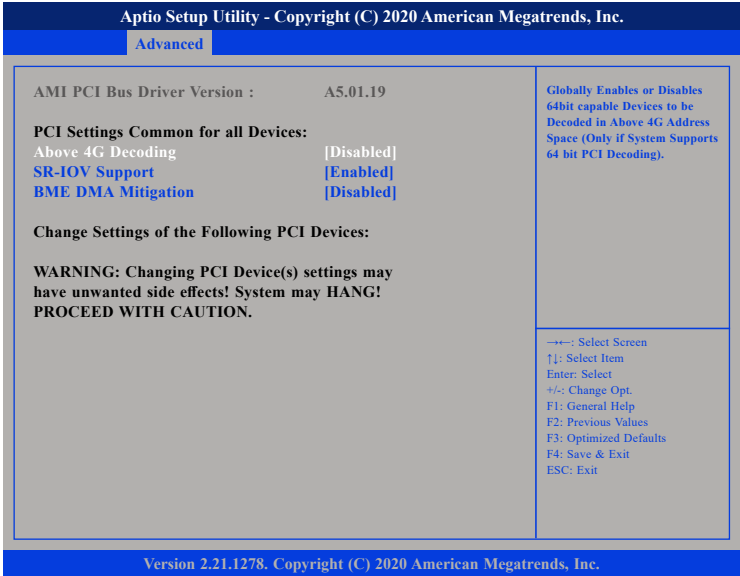

Above 4G Decoding

Enables or disables decoding of 64-bit devices in 4G address space.

SR-IOV Support

Enables or disables SR-IOV support.

BME DMA Mitigation

Enables or disables the function to re-enable bus master attribute during PCI enumeration for PCI bridges after SMM is locked.

USB Configuration

This section is used to configure the USB.



Legacy USB Support

- Enable Enables Legacy USB.
- Auto Disables support for Legacy when no USB devices are connected.
- Disable Keeps USB devices available only for EFI applications.

XHCI Hand-off

This is a workaround for OSs that does not support XHCI hand-off. The XHCI ownership change should be claimed by the XHCI driver.

USB Mass Storage Driver Support

Enables or disables USB mass storage device driver support.

USB transfer time-out

The time-out value for control, bulk, and Interrupt transfers.

Device reset time-out

Selects the USB mass storage device’s start unit command timeout.

Device power-up delay

Maximum time the value will take before it properly reports itself to the Host Controller. “Auto” uses default value: for a Root port it is 100 ms, for a Hub port the delay is taken from Hub descriptor.



Network Stack

This section is used to configure the network stack.



Network Stack

Enables or disables UEFI network stack.

IPv4 PXE Support

Enables or disables IPv4 PXE support. If disabled, the IPv4 boot option will not be created.

IPv4 HTTP Support

Enables or disables IPv4 HTTP support.

IPv6 PXE Support

Enables or disables IPv6 PXE support. If disabled, the IPv6 boot option will not be created.

IPv6 HTTP Support

Enables or disables IPv6 HTTP support.

PXE boot wait time

Configures the wait time to press the ESC key to abort the PXE boot.

Media detect count


Configures the number of times the media will be checked.





NVMe Configuration

This section is used to display information on the NVMe devices installed.

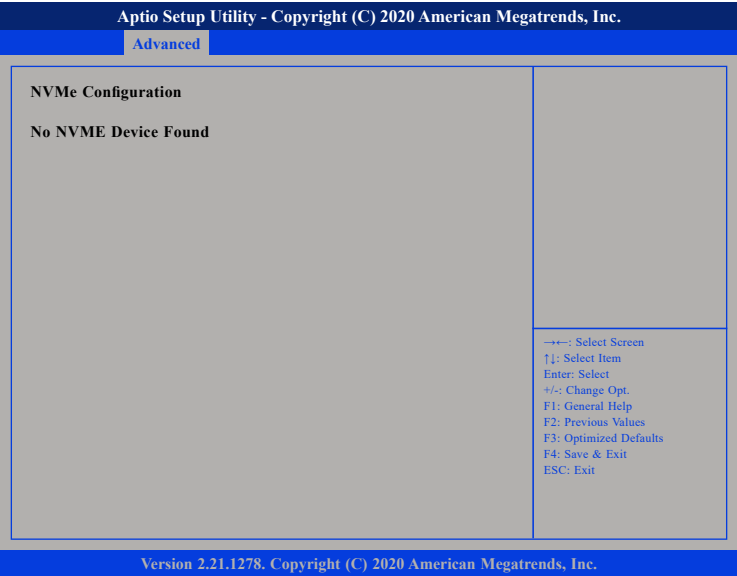



Chipset

This section gives you functions to configure the system based on the specific features of the chipset. The chipset manages bus speeds and access to system memory resources.



System Agent (SA) Configuration

This field is used to configure System Agent (SA) parameters.

PCH-IO Configuration

This field is used to configure PCH parameters.

System Agent (SA) Configuration



Stop Grant Configuration

Configures the options for Stop Grant Configuration. The options are Auto and Manual.

Control Iommu Pre-boot Behavior

Enables or disables the IOMMU (I/O Memory Management Unit) feature.

X2APIC Opt Out

Enables or disables X2APIC mode.



Memory Configuration

Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.

Chipset

Memory Configuration

Memory RC Version0.0.0.71

Memory Frequency2400 Mhz

Memory Timings17-17-17-39

(tCL-tRCD-tRP-tRAS)

Channel 0 Slot 0Populated & Enabled

Size8192 MB (DDR4)

Number of Ranks1

ManufacturerTranscend

Channel 0 Slot 1Not Populated / Disabled

Channel 1 Slot 0Not Populated / Disabled

Channel 1 Slot 1Not Populated / Disabled

Memory ratio/reference clock options moved to Overclock->Memory->Custom

Profile menu

MRC ULT Safe Config

[Disabled]

MRC ULT Safe Config for PO

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.21.1278. Copyright (C) 2020 American Megatrends, Inc.

Memory Configuration

Detects and displays information of the memory installed in the system.

MRC ULT Safe Config

Enables or disables MRC ULT Safe Config for PO.

Graphics Configuration

Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.

Chipset

Graphics Configuration

Internal Graphics[Auto]

GTT Size[8MB]

Aperture Size[256MB]

PSMI SUPPORT[Disabled]

DVMT Pre-Allocated[32M]

DVMT Total Gfx Mem[256M]

Keep IGFX enabled based on the setup options.

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.21.1278. Copyright (C) 2020 American Megatrends, Inc.

Internal Graphics

Keep IGD enabled based on the setup options.

GTT Size and Aperture Size

Configures the GTT memory size and the Aperture size.

PSMI SUPPORT

Enables or disables Power Supply Management Interface (PSMI) support.

DVMT Pre-Allocated

Configures the DVMT 5.0 pre-allocated (fixed) graphics memory size used by the internal graphics device.

DVMT Total Gfx Mem

Configures the DVMT 5.0 total graphic memory size used by the IGD.





PEG Port Configuration

Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.

Chipset

PEG Port Configuration

PEG 0:1:0

Not Present

Enable Root Port

[Enabled]

Max Link Speed

[Auto]

PEG 0:1:1

Not Present

Enable Root Port

[Enabled]

Max Link Speed

[Auto]

PEG 0:1:2

Not Present

Enable Root Port

[Enabled]

Max Link Speed

[Auto]

PCIe Spread Spectrum Clocking

[Disabled]

Enable or Disable the Root Port

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.21.1278. Copyright (C) 2020 American Megatrends, Inc.

Enable Root Port (PEG 0:1:0, 0:1:1 and 0:1:2)

Enables or disables the root port.

Max Link Speed (PEG 0:1:0, 0:1:1 and 0:1:2)

Configures the maximum link speed of the PEG device.

PCIe Spread Spectrum Clocking

Enables or disables PCIe Spread Spectrum Clocking for compliance testing.

PCH-IO Configuration

Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.

Chipset

PCH-IO Configuration

▶ SATA And RST Configuration

State After G3

[Last State]

Show Power Type Status

ATX

SATA Device Options Settings

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.21.1278. Copyright (C) 2020 American Megatrends, Inc.

SATA And RST Configuration

Enters the SATA and RST configuration sub-menu.

State After G3


Configures the PCH state after G3.

Copyright © 2020 NEXCOM International Co., Ltd. All Rights Reserved.

54

NSA 3190A User Manual

SATA And RST Configuration

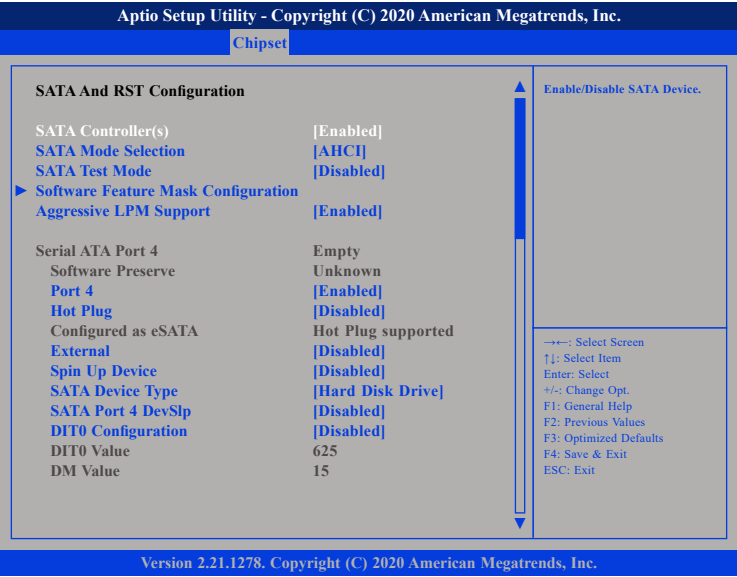

SATA Controller(s)

Enables or disables the SATA controller.

SATA Mode Selection


Configures the SATA mode.

SATA Test Mode

Enables or disables SATA test mode.

Aggressive LPM Support

Enables or disables PCH to aggressively enter link power state.

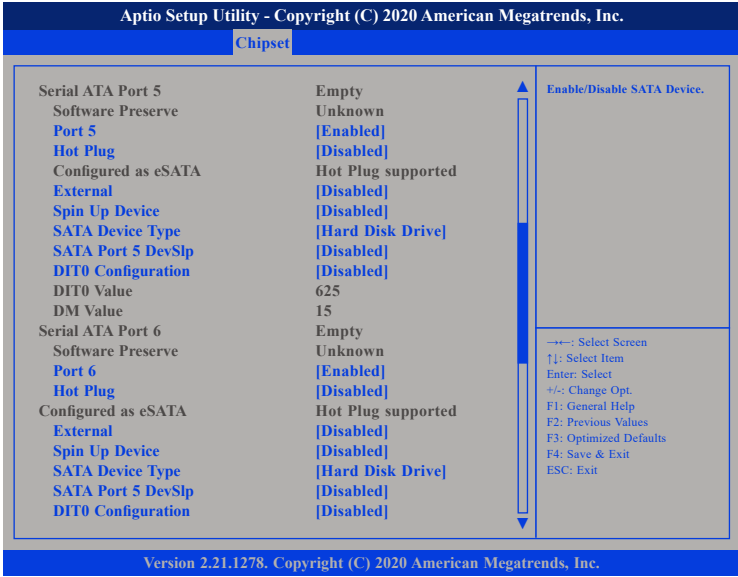

Port 4, Port 5, Port 6 and Port 7


Enables or disables SATA port 4, port 5, port 6 and port 7.

Hot Plug

Enables or disables hot plugging feature on SATA port 4, port 5, port 6 and port 7.

External SATA

Enables or disables the external SATA option on SATA port 4, port 5, port 6 and port 7.

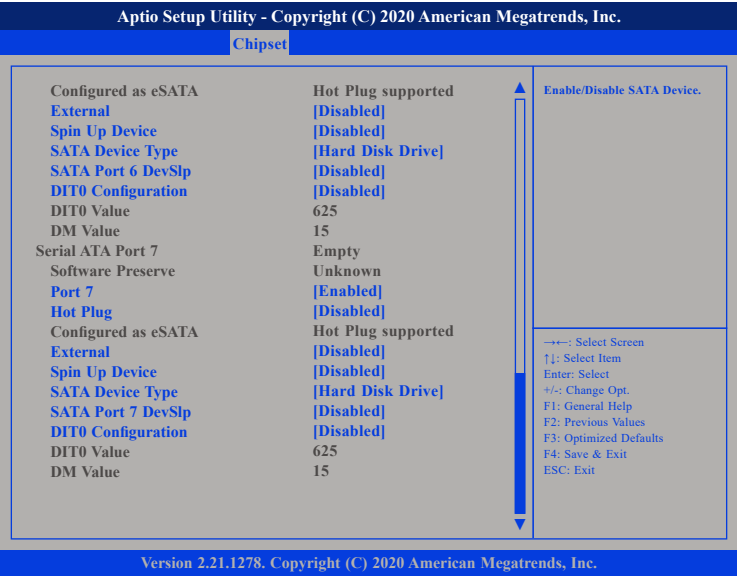

Spin Up Device

Enables or disables staggered spin up on devices connected to SATA port 4, port 5, port 6 and port 7.

SATA Device Type

Identifies what type of SATA device is connected.

SATA Port 4 to Port 7 DevSlp

Enables or disables SATA port 4 to port 7 DevSlp. Before enabling DevSlp, board rework is needed.

DIT0 Configuration

Enables or disables DIT0 configuration for SATA port 4 to port 7.

Security




Administrator Password

Select this to reconfigure the administrator's password.



Boot

This section is used to configure the boot features.

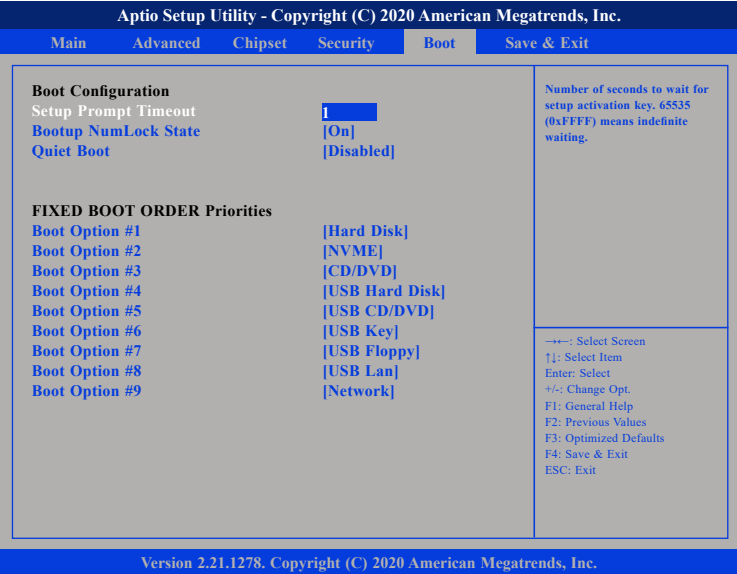

Setup Prompt Timeout

Selects the number of seconds to wait for the setup activation key. 65535(0xFFFF) denotes indefinite waiting.

Bootup NumLock State

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

Quiet Boot

- Enabled Displays OEM logo instead of the POST messages.
- Disabled Displays normal POST messages.


Fixed Boot Order Priorities

Adjust the boot sequence of the system. Boot Option #1 is the first boot device that the system will boot from, next will be #2 and so forth.





Save & Exit

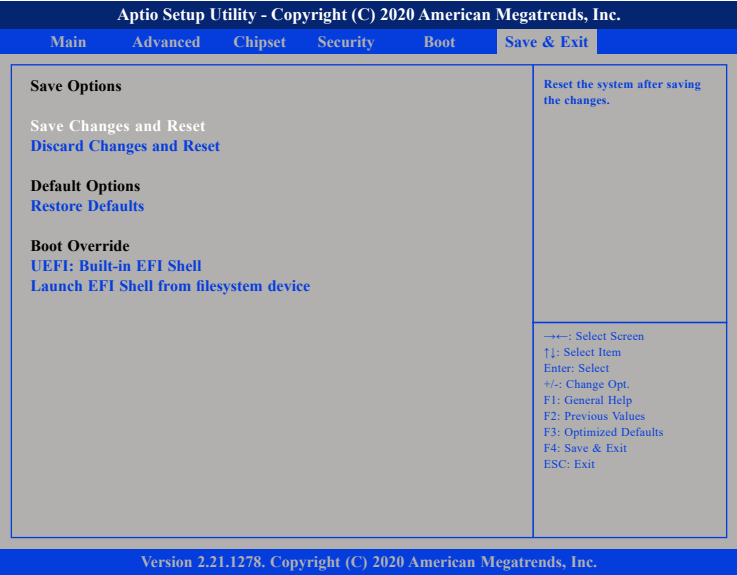

Save Changes and Reset

To save the changes and reset, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

Discard Changes and Reset

To exit the Setup utility and reset without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting.

Restore Defaults

To restore the BIOS to default settings, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

Boot Override

To bypass the boot sequence from the Boot Option List and boot from a particular device, select the desired device and press <Enter>.

Launch EFI Shell From Filesystem Device

To launch EFI shell from a filesystem device, select this field and press <Enter>.